

# PHILIPS

# NORELCO

SensoTouch



1190X  
1180XCC  
1180X  
1160X  
1160XCC  
1150X

*Rechargeable Cordless  
Tripleheader Shaver*

(Model 1180X Shown)

BC

**Always here to help you**

Register your product and get support at  
[www.norelco.com/register](http://www.norelco.com/register)

Question?  
Contact  
Philips  
Norelco

**1190X/1180XCC/1180X/1160X/1160XCC/1150X**

## **ENGLISH 4**

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at [www.norelco.com/register](http://www.norelco.com/register)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic precautions should always be followed, including the following:

**Read all instructions before using this appliance.**

### DANGER

**To reduce the risk of electric shock:**

1. Do not reach for a corded Jet Clean System/charging stand that has fallen into water. Unplug immediately.
2. Power plug and the accessories connected to it are not for immersion or for use in shower.
3. Do not use an extension cord with this appliance.
4. Do not place or store a Jet Clean System/charging stand where it can fall or be pulled into a tub or sink. Do not place or drop a Jet Clean System/charging stand into water or other liquid.
5. Always unplug this Jet Clean System/charging stand from the electrical outlet immediately after use, except when shaver is (re)charging.
6. Unplug and remove power supply cord from Jet Clean System/charging stand before cleaning.
7. The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

### WARNING

**To reduce the risk of burns, fire, electric shock, or injury to persons:**

1. Close supervision is necessary when this shaver/Jet Clean System/charging stand is used by, on, or near children or invalids.
2. Use this shaver/Jet Clean System/charging stand for its intended household use as described in this manual. Do not use attachments or a cleaning solution not recommended by Philips Electronics North America Corporation.
3. Never operate this shaver/Jet Clean System/charging stand if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.
4. Keep the shaver, Jet Clean System, charging stand, cord and charging plug away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
7. Do not clean, charge or plug in shaver/Jet Clean System outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this shaver with a damaged or broken comb, as facial injury may occur.
9. Always attach cord to Jet Clean System/charging stand first, plug into outlet and then put shaver in Jet Clean System/charging stand. Be certain plug is inserted firmly into Jet Clean System/charging stand, up to mark indicated on plug. To disconnect, turn Jet Clean System off. Then remove charging plug from outlet.
10. Never put the shaver/Jet Clean System/charging stand in direct sunlight or store at a temperature above 140°F.
11. Keep the Jet Clean System, charging stand and cord dry at all times. Do not handle with wet hands.

12. To prevent possible damage to the cord, do not wrap cord around the shaver or Jet Clean System/charging stand.
13. Only use the power plug and other accessories supplied with the shaver.

## SAVE THESE INSTRUCTIONS

**IMPORTANT:** The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.

PHILIPS

**NORELCO**

### 45 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Philips Norelco Men's Shaver, the shaver should be used **exclusively** for 3 weeks. This allows your hair and skin enough time to adapt to the Philips Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Philips Norelco Men's Shaver, send the product back along with dated sales receipt and we'll refund you the full purchase price. **The shaver must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price, the date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.**

The shaver must be postmarked no later than 45 days from the date of purchase. Philips Norelco reserves the right to verify the purchase price of the shaver and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance. Delivery of refund check will occur 6-8 weeks **AFTER** receipt of refund product.

## Table of Contents

Features.....	8-11
Multi-Level Display .....	12-15
Charge Meter .....	15
Before First Use .....	15-16
Charging.....	16-18
Recharging .....	19
Quick Charge .....	19
Put It To The Test & Shaving Tips .....	19-20
How to Shave With An Electric Shaver .....	20-22
Trimming .....	22-23
Travel Lock .....	23-24
Cleaning.....	25-36
Replacing the Shaving Unit .....	36-37
Maintenance .....	38
Storage.....	38-39
Assistance .....	39
Disposal.....	40
Accessories .....	40
Warranty.....	41

**Features**

GyroFlex 2D  
Contour-Following System

Shaving Unit  
• Hair Chamber captures shaven hair

SkinGlide System



Protective Cap

Electronic On/Off Button

Replacement Shaving Unit Indicator

Travel Lock


Multi-Level Display  
• Shows remaining power level in batteries (1180X/1180XCC)  
• Battery Charge, Full & Low Indicators

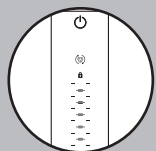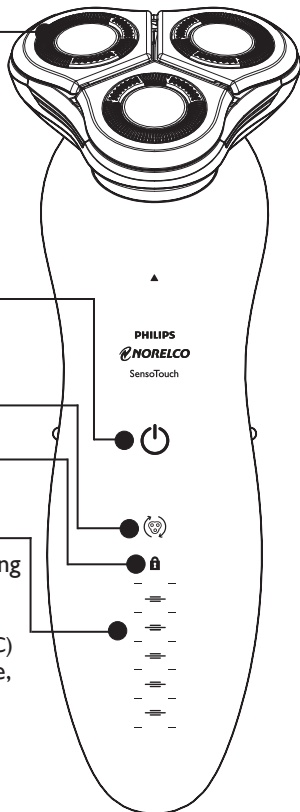


Model 1190X  
Model 1180X  
Model 1180XCC



Model 1160X  
Model 1160XCC

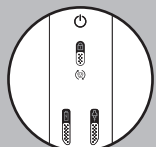

Model 1150X

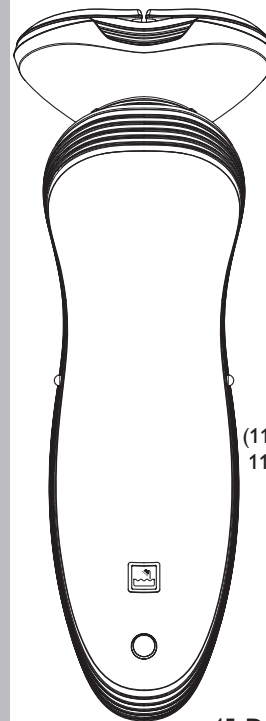

Click-On Precision Trimmer

Automatic Worldwide Voltage 100V to 240V AC

Cleaning Brush

Travel Pouch  
(1190X/1180XCC/1180X/1160X/1160XCC)

Charging Stand

Rechargeable 1-hour Full Charge for up to 50 min. (1190X/1180XCC/1180X/1160X/1160XCC) or 40 min. (1150X) of cordless shaving time

Quick Charge

Cordless - To shave without a cord

Full 2-Year Warranty

45-Day Money-Back Guarantee

How the Unique Philips Norelco  Lift and Cut Shaving System Makes Close Comfortable:



Groove channels beard closer to cutting system


Lifter raises hair

Slots to cut long hairs

Holes to cut short hairs even closer


**Features**

Jet Clean System  
(1180XCC/1160XCC)

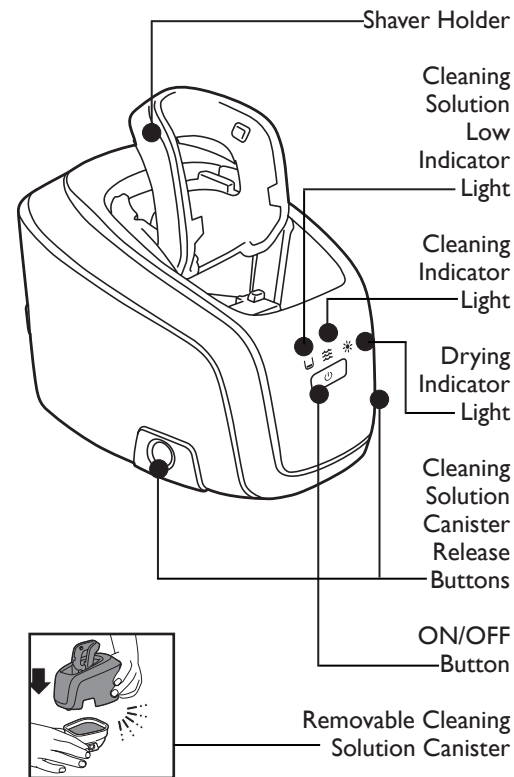


## Multi-Level Display


- ▶ Remove any sticker or protective foil from the display before using shaver.
- ▶ Depending on the shaver model, there are 3 different types of displays:

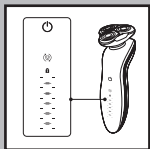

### Display for Models 1190X, 1180X and 1180XCC

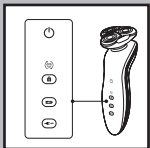

### Display for Models 1160X and 1160XCC


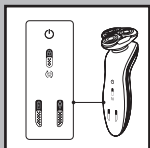


### Display for Model 1150X

## The display provides the following information:

### ▶ Charging Indicator Models 1190X, 1180X, 1180XCC


- When the shaver is charging, the display goes on and the bottom charging light blinks. As charging continues, more and more lights will blink to indicate what level the battery has been charged.
- Quick charge: When the shaver contains enough energy for one shave, the bottom charging light alternately blinks orange and white.

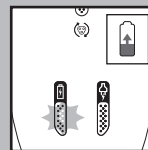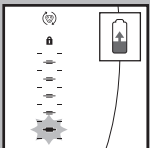

### Models 1160X, 1160XCC and 1150X


- When the shaver is charging, the plug symbol and battery symbol will blink alternately during charging. After some time, the plug symbol goes out and the battery symbol continues to blink until the shaver is fully charged.
- Quick charge: When the shaver contains enough energy for one shave, the plug symbol and battery symbol stops blinking alternately and only the battery symbol blinks.

*NOTE: The displays of models 1160X, 1160XCC and 1150X look different, but work the same way.*

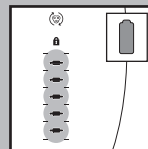

### ▶ Full Charge Indicator Models 1190X, 1180X, 1180XCC


- When the battery has been fully charged, all charging lights light up continuously. After approximately 30 minutes the display automatically switches off again.

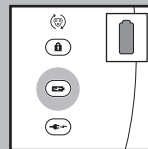

### Models 1160X, 1160XCC and 1150X


- When the battery has been fully charged, the battery symbol lights up continuously. After approximately 30 minutes the display automatically switches off again.

*NOTE: The displays of models 1160X, 1160XCC and 1150X look different, but work the same way.*

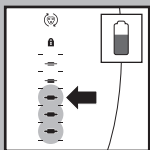


### ▶ Remaining Battery Capacity Models 1190X, 1180X, 1180XCC

-The remaining battery capacity is indicated by the number of charging lights that are on.

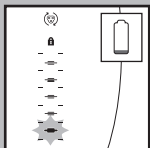

### ▶ Low Battery Indicator Models 1190X, 1180X, 1180XCC


-When the battery is almost empty (5 or less shaving minutes left), the bottom charging light blinks orange. When you turn the shaver OFF the bottom charging light continues to blink for a few seconds.

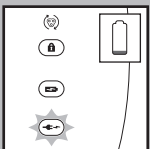

### Models 1160X, 1160XCC and 1150X

-When the battery is almost empty (5 or less shaving minutes left), the plug symbol blinks. When you turn the shaver OFF the plug symbol blinks for a few seconds.

*NOTE: The displays of models 1160X, 1160XCC and 1150X look different, but work the same way.*

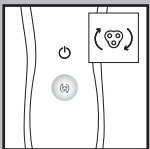

### ▶ Replacement Shaving Unit Indicator

Every year, depending on your shaving behavior, after turning the shaver OFF, the replacement shaving unit symbol indicator starts to blink. The replacement reminder is repeated at 9 successive shaves or until you reset the shaver. This reminds you that with new shaving heads you will guarantee yourself optimal shaving performance.

### ▶ Travel Lock

The shaver is equipped with a travel lock function. You can use the travel lock function when you are going to store the shaver for a longer period or if you are going to take the shaver with you when traveling. See 'Travel Lock' section for instructions on how to use this function.

## Charge Meter (1190X/1180X/1180XCC)

- ▶ Charge Meter monitors amount of remaining battery power available. Remaining battery capacity is based on the amount of power consumed shaving per minute and is dependent upon your skin and beard type, whether you use pre-shave lotion, and how often the trimmer is used.
- ▶ Initially your shaver may need to go through 2 or 3 full charge/recharge cycles before remaining battery capacity indicators begin to display your accurate battery power left.

## Before First Use

- ▶ Charge the shaver before you start using it (see 'Charging'). Make sure the shaver is switched off before you start charging it.
- ▶ Remove any sticker or protective foil from the Display before using shaver.




**Important**

- ▶ Only use the power cord and charging stand or Jet Clean System (models 1180XCC, 1160XCC) provided to charge the shaver.
- ▶ The power plug transforms 100-240V AC to less than 24V DC.

**Charging**

- ▶ Charging, recharging or storing at temperatures below 40°F (4°C) or higher than 95°F (35°C) adversely affects lifetime of batteries.
- ▶ Charging or recharging requires one full hour.
- ▶ A fully charged shaver has a shaving time of up to 50 minutes (models 1190X, 1180X, 1180XCC, 1160X and 1160XCC) or 40 minutes (model 1150X).
- ▶ You may recharge when the bottom charging light blinks orange (models 1190X, 1180X, 1180XCC) or the plug symbol blinks (models 1160X, 1160XCC and 1150X).
- ▶ Do not charge shaver in a pouch.

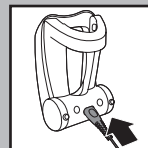**Charging in the Charging Stand**

- 1** Connect the small plug of cord to charging stand.




- 2** Unfold the charging stand. You will hear a 'click'.

- 3** Connect the power plug into any 100V to 240V AC outlet. Use only the power cord provided.

- ▶ An adaptor plug may be necessary for power cord usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet.

The power cord will automatically convert to work on 100V to 240V AC systems.

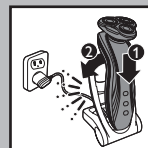

- 4** Place shaver in stand in an upright position (1). Press the shaver back into the holder until it locks into place (2).

- 5** The display on the shaver will indicate shaver is charging.



- 6** Charging requires one full hour. A fully charged shaver has a cordless shaving time of up to 50 minutes (models 1190X, 1180X, 1180XCC, 1160X and 1160XCC) or 40 minutes (model 1150X).

## Charging Shaver with Jet Clean System (1180XCC, 1160XCC)

- 1 Connect the small plug to the Jet Clean System. Connect the charging plug into any 100V to 240V AC outlet. Use only the power cord provided.

The shaver holder automatically moves up to the highest position.

- 2 Remove protective cap from shaver.  
NOTE: The shaver cannot be placed in the Jet Clean System when the trimmer or protective cap is placed on the shaver.

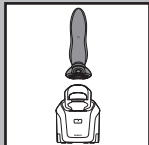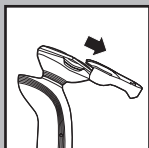


- 3 Place the shaver head side down in the shaver holder with the display facing the front of the Jet Clean System.

- 4 Place the shaver into the holder behind the two clips (1) and press the shaver down to lock it into place (2).

- 5 The display on the shaver will indicate shaver is charging.

- 6 Charging requires one full hour. A fully charged shaver has a cordless shaving time of up to 50 minutes (Models 1190X, 1180X, 1180XCC, 1160X and 1160XCC) or 40 minutes (Model 1150X).

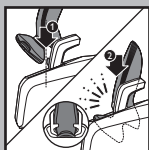

## Recharging

- 1 Recharging requires one full hour. Recharge when the bottom charging light blinks orange (models 1190X, 1180X, 1180XCC) or the plug symbol blinks (models 1160X, 1160XCC and 1150X).

## Quick Charge


When batteries are totally depleted, recharging the shaver for approximately 3-5 minutes gives enough energy for a 3-minute cordless shave.

## Put It To The Test & Shaving Tips

- ▶ 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new shaving system.
- ▶ Use your new shaver exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave
- ▶ At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- ▶ Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.

- ▶ If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

### How To Shave With An Electric Shaver

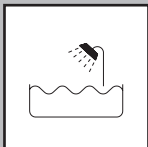

- ▶ This symbol on the shaver indicates that the shaver can be used in the bath or shower.
- ▶ Make sure the charging stand/Jet Clean System does not get wet or near water.
- ▶ Use this shaver for its intended household use as described in this manual.

### Shaving



- 1** Turn shaver ON by pressing the on/off button once. Shave against the direction of beard growth using only circular movements.

The shaver display will light up briefly (Models 1190X, 1180X, 1180XCC).


- 2** Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press shaver to skin so the floating heads can follow the contours of your face. **DO NOT** press too hard. Too much pressure can pinch the skin into the combs.

- 3** Turn shaver OFF by pressing the on/off button once.

The display lights up for a few seconds and then shows the remaining battery capacity (Models 1190X, 1180X, 1180XCC).

- 4** Clean the shaver after each use (see chapter 'Cleaning').

- 5** Put the Protective Cap on the shaver to protect shaver heads.

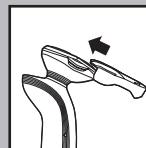

### Wet Shaving

You can also use the shaver on a wet face with shaving foam.


- 1** Apply some water to your skin.
- 2** Apply shaving foam to your skin.
- 3** Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
- 4** Press the on/off button once to switch on the shaver.
- 5** Move the shaving heads in circular movements over your skin.

NOTE: Rinse the shaver under the tap regularly to ensure that it continues to glide smoothly over your skin.

- 6** Dry your face and thoroughly clean the shaver after each use (see chapter 'Cleaning').

NOTE: Make sure you rinse all foam off the shaver.

- 7** Put the Protective Cap on the shaver to protect heads.

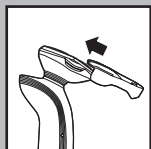


## Trimming

### To Groom Sideburns and Moustache:

- 1** Pull the shaving unit straight off the shaver.  
NOTE: Do not turn the shaving unit while you pull it off the shaver.



- 2** Insert the raised notch of the trimmer into the slot in the top of the shaver (1). Press the trimmer down to attach it to the shaver (2). You will hear a 'click'.

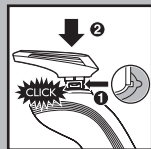

- 3** Turn shaver ON.  
The display lights up for a few seconds (Models 1190X, 1180X, 1180XCC).

- 4** Hold trimmer to exact hairline desired. Move trimmer downward with gentle pressure.


- 5** Trim beard, moustache or sideburns using the trimmer.

- 6** Turn shaver OFF when finished.

The display lights up for a few seconds and then shows the remaining battery capacity (Models 1190X, 1180X, 1180XCC).

- 7** Thoroughly clean the trimmer after using (see 'Cleaning').


- 8** Pull the trimmer straight off the shaver.  
NOTE: Do not turn the trimming unit while you pull it off the shaver.

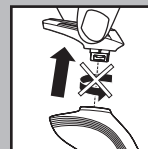

- 9** Insert the raised notch of the shaving unit into the slot in the top of the shaver (1). Press the shaving unit down to attach it to the shaver (2). You will hear a 'click'.




- 10** Put the Protective Cap on the shaver.

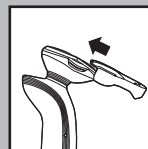


## Travel Lock

If you are going to store the shaver for a longer time period or if traveling, it is possible to lock the shaver. The travel lock prevents the shaver from being switched on by accident.

## Activating the travel lock

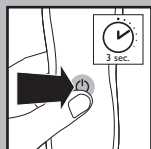

- 1 Press the ON/OFF button for 3 seconds.

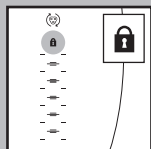

- ▶ The lock symbol lights up on the display.  
NOTE: The displays of models 1190X, 1180X, 1180XCC, 1160X, 1160XCC and 1150X look different, but show the same symbol.

- 2 The travel lock has now been activated.

## Deactivating the travel lock

- 1 Press the ON/OFF button for 3 seconds.

- 2 The lock symbol goes out and the shaver turns ON to indicate that the shaver has been unlocked. The shaver is now ready for use.

▶ The shaver unlocks automatically when charging in the charging stand or Jet Clean System.

## Cleaning


- ▶ Always clean your shaver after each use.
- ▶ Regular cleaning guarantees better shaving results.
- ▶ Never clean, remove or replace shaving unit while motor is on.
- ▶ Do not apply pressure to shaving head combs. Do not touch shaver heads with hard objects as this may dent or damage precision-made slotted combs.
- ▶ Do not use shaver if shaving head combs are damaged or broken. Facial injury may occur.
- ▶ Do not use abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver or Jet Clean System.

## Cleaning the Shaving Unit

The shaver heads may be quickly cleaned after each use by rinsing with hot water. Water from the tap should be on a hot setting, BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.

- ▶ Regular cleaning guarantees better shaving results.
- ▶ While rinsing shaver heads, water may drip out of the base of shaver. This is a normal occurrence.

- 1 Always turn shaver OFF, remove from charging stand/Jet Clean System before cleaning.

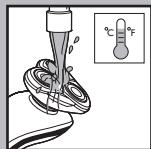

- 2** For best results rinse the shaving unit by running under hot water for a few minutes.


BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.



- 3** Pull the shaving head holder off the bottom part of the shaving unit and rinse under hot water for 30 seconds.

- 4** Carefully shake off excess water and let the shaving unit air dry.

NOTE: Do not wipe or dry the shaving unit with a towel or tissue. This could damage the shaving heads.

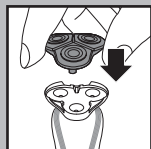

- 5** Push the shaving head holder back onto the bottom of the shaving unit. You will hear a 'click'.

- 6** You may also clean the shaving unit and hair chamber without water by using the supplied brush.


### Cleaning the Shaving Unit in the Jet Clean System (1180XCC/1160XCC)

**CAUTION:** Keep cleaning solution out of reach of children. Do not take internally. Avoid contact with eyes. In case of eye contact, thoroughly flush with cold water. If irritation persists, get medical attention.

### Important

- ▶ Only use this shaver, charging stand, Jet Clean System and HQ200 cleaning solution provided to charge or clean shaver.
- ▶ Other Philips Norelco shavers **DO NOT** work with this Jet Clean System.
- ▶ Empty the cleaning solution canister and thoroughly rinse the canister clean with warm water **every 2 weeks**.
- ▶ The Jet Clean System thoroughly cleans but does not disinfect your shaver, therefore, do not share shaver with others.
- ▶ The charging plug converts 100-240V AC to less than 24V DC.
- ▶ Place the Jet Clean System on a flat, stable and fluid-resistant surface to avoid any leakage. Be careful not to tip or move the Jet Clean System if it is filled with the cleaning solution.
- ▶ To avoid evaporation, do not expose cleaning solution to direct sunlight.
- ▶ Remove the protective cap from the shaver before charging or cleaning the shaver in the Jet Clean System.
- ▶ Use this appliance for its intended household use as described in this manual.

- 1** Place the Jet Clean System on a flat, level surface.

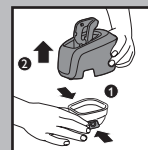

- 2** Simultaneously press the buttons located on both sides of the Jet Clean System (1) and lift the appliance off the Jet Clean canister (2).

Always remove appliance from canister by lifting straight up. Do not tilt Jet Clean System.



- 3** Pour the Jet Clean Solution (Model HQ200) into the canister up to a level between the two lines located inside the canister.

NOTE: ONLY USE PHILIPS NORELCO JET CLEAN SOLUTION (MODEL HQ200) WITH THE JET CLEAN SYSTEM. ANY OTHER SOLUTION MAY CAUSE DAMAGE TO YOUR Shaver.



- ▶ When the cleaning solution level drops below the minimum level, the 'cleaning chamber empty' symbol will blink and the shaver holder will move to the starting position.
- ▶ If you clean your shaver every day, you should clean and refill the canister approximately every 15 days.




- 4** Carefully lower the appliance back onto the Jet Clean canister making sure the release buttons snap back into place.

When the canister is filled with cleaning solution, do not move appliance to prevent leakage.


## Jet Cleaning the Shaver

- ▶ If the shaver does not contain enough power for one (1) shave, the Jet Clean Cleaning System may not work properly. Charge the shaver in the Jet Clean System before using the Jet Clean System to clean your shaver.
- ▶ If you use the shaver with shaving foam, quickly rinse under hot water before cleaning in the Jet Clean System.


- 1** Connect the small plug to the Jet Clean System. Connect the charging plug into any 100V to 240V AC outlet. Use only the charging plug provided.
- 2** Place the Jet Clean System on a flat, level surface. Fill the canister with cleaning solution (see 'Preparing Jet Clean System For Use').

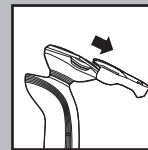

- 3** Remove protective cap from shaver.

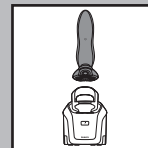


- 4** Place the shaver head side down in the shaver holder with the display facing the front of the Jet Clean System.

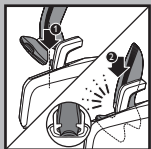


- 5** Place the shaver into the holder behind the two clips (1) and press the shaver down to lock into place (2).

The display on the shaver will indicate shaver is charging.

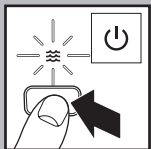

- 6** Press the ON/OFF button on the Jet Clean System to start the cleaning cycle.


The shaver display stops showing the charging indication.

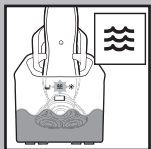

- 7** The cleaning light starts to blink and the shaver is automatically lowered into the cleaning solution.

The shaver stops charging while it is being cleaned.


- ▶ During the first phase of the cleaning cycle, the shaver will automatically turn on and off several times while the shaver holder lowers and raises the shaver's position in the cleaning solution, removing all debris. The cleaning light will blink continuously throughout the cleaning program.

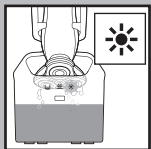

- ▶ During the second phase of the cleaning cycle, the shaver holder moves the shaver to the drying position and the drying light will blink. This phase will take approximately 2 hours. The shaver will stay in one position until the end of the drying program.
- ▶ Do not press the ON/OFF button while the cleaning cycle is running. If this does occur, the cleaning cycle will stop and the shaver holder

will automatically move to the starting position. The cleaning cycle can be re-started by pressing the ON/OFF button once.

- ▶ If the power plug is disconnected before the cleaning cycle is complete, the shaver holder will remain in its current position. Reconnect the plug into the outlet or Jet Clean System and the shaver holder will automatically move to the highest position. The cleaning cycle can be re-started by pressing the ON/OFF button once.

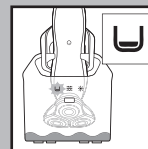

NOTE: If the cleaning solution level drops below the minimum level during the cleaning cycle, the 'cleaning chamber empty' symbol will blink and shaver holder returns the shaver to the starting position, stopping the cleaning cycle. Unplug Jet Clean System from the outlet, remove shaver and refill canister (see "Preparing Jet Clean System for Use").

- 8** When the entire cleaning cycle is complete and the shaver is hygienically clean, the shaver will be raised to the starting position and the display on the shaver will turn on indicating that the shaver is (re)charging.
- 9** Pull the shaver forward and lift shaver from Jet Clean System.
- ▶ If the shaver needs to be recharged, you can simply leave it in the Jet Clean System after cleaning and the shaver will automatically recharge. The display on the shaver will indicate the shaver is recharging.



- ▶ You may store your shaver in the Jet Clean System.

### Extra-thorough cleaning method

Do not mix up the cutters and combs as the shaving performance may be adversely affected for several weeks before optimal shaving performance is restored.


- 1** Turn shaver OFF.




- 2** Pull the shaving head holder off the bottom part of the shaving unit.




- 3** Slide the green retaining frame in the direction of the arrows indicated on the retaining frame.

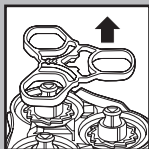


- 4** Lift the retaining frame out of the shaving head holder.

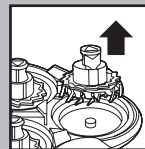


- 5** Remove the cutter from the comb.  
Do not clean more than one cutter and comb at a time, since they are all matching sets. If you accidentally put a cutter in the wrong comb, it may take several weeks before optimal shaving performance is restored.

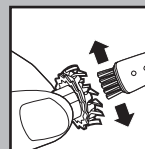


- 6** Clean the cutter with the cleaning brush supplied.

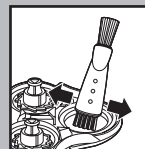

- 7** Clean the inside of the comb.

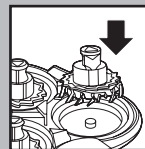


- 8** After cleaning, place the cutter back into the comb with the cutter legs pointing downwards.

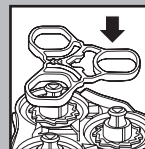

- 9** Repeat the process for the other two cutters and combs.
- 10** Place the retaining frame back onto the shaving head holder.



- 11** Slide the retaining frame back into place ('click').

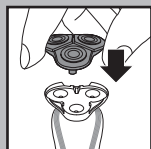


- 12** Reattach the shaving head holder to the bottom part of the shaving unit.

### Cleaning the Trimmer

Clean the trimmer after each use.

- 1** Turn shaver ON with trimmer attached to shaver.
- 2** Rinse the trimmer under hot water. **BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.**
- 3** Remove trimmer from shaver and allow to air dry.

Tip: For optional trimmer performance, lubricate the trimmer teeth with one drop of mineral oil every 6 months.

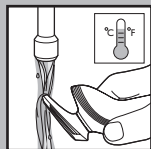


### Cleaning the Jet Clean Canister (1180XCC/1160XCC)

For optimal performance of the Jet Clean System, it is recommended that you empty the cleaning solution canister and thoroughly rinse the canister clean every 2 weeks.


- 1** Place the Jet Clean System on a flat, level surface.
- 2** Simultaneously press the buttons located on both sides of the Jet Clean System (1) and lift the appliance off the Jet Clean canister (2).

Always remove appliance from canister by lifting straight up. Do not tilt Jet Clean System.

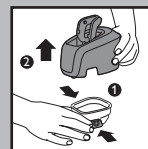



- 3** Discard any remaining cleaning solution in the canister.

The cleaning solution can be safely poured down the sink as there are no harmful ingredients.

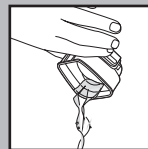

- 4** Simply rinse the canister with warm water. Wipe the canister with a towel or tissue to remove excess water.

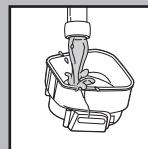

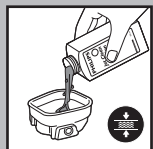

- 5** Pour the Jet Clean Solution into the canister up to a level between the two lines located inside the canister.




- 6** Carefully lower the Jet Clean System over the canister making sure the release buttons snap back into position.

### Replacing the Shaving Unit


- ▶ Replace the shaving unit once a year for optimal shaving results.
- ▶ Replace damaged or worn shaver heads with model RQ11 Philips Norelco shaver heads only.
- ▶ The individual shaving heads (cutters and combs) are NOT replaceable. Only the one-piece shaving unit can be replaced.

### Replacement Shaver Head Assembly Indication

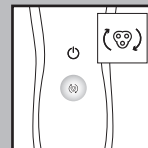


- ▶ After 12 months of use, the replacement head indicator symbol starts to blink to remind you to check if it's time to replace your shaving unit to obtain optimal shaving results.


Note: The displays of models 1160X, 1160XCC and 1150X look different, but work the same way.

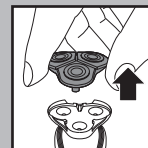

- 1** Pull the shaving head holder off the bottom part of the shaving unit.

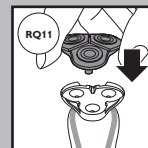

- 2** Attach the new shaving head holder to the bottom part of the shaving unit ('click').

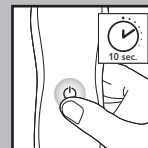

- 3** To reset the shaver, press and hold the On/Off button for approximately 10 seconds.

Note: If you do not reset the shaver at the first replacement reminder, it continues to show the shaving unit symbol at 8 more shaves or until you reset the shaver.

This shaver/charging stand/Jet Clean System has no other user-serviceable parts. For assistance call 1-800-243-3050.


## Maintenance

- ▶ Always remove shaver from the charging stand/Jet Clean System before cleaning appliance.
- ▶ The charging stand/Jet Clean System and shaver may be wiped clean using a damp cloth.
- ▶ Water from the tap should be on a warm setting to clean any washable parts.

Note: DO NOT place or clean any parts of the charging stand/Jet Clean System in a dishwasher.

## Storage

- ▶ The shaver can be placed in the charging stand/Jet Clean System for safe storage.
- ▶ If appliance will not be used for an extended period of time, it is recommended that the cleaning solution in the Jet Clean canister be emptied out before storing.
- ▶ Be sure shaver is turned off. Remove cord from outlet and charging stand or Jet Clean System before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap power cord around shaver/charging stand or Jet Clean System when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.

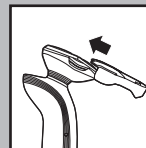

- ▶ Do not place or store charging stand/Jet Clean System where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- ▶ If storing shaver in the charging stand, put the Protective Cap on shaver to protect heads.

## Assistance

- ▶ For assistance, visit our website:

**[www.philips.com/support](http://www.philips.com/support) or  
call toll free 1-800-243-3050**


- ▶ Online information is available 24 hours a day, 7 days a week.

## Disposal



- ▶ This Philips Norelco shaver contains a rechargeable Lithium-Ion battery which must be disposed of properly.
- ▶ Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or [www.rbr.com](http://www.rbr.com) for battery drop-off locations.
- ▶ For assistance, visit our website, [www.philips.com/support](http://www.philips.com/support) or call toll free: 1-800-243-3050.

## Accessories

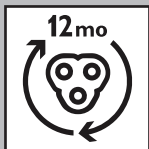

- ▶ **Replacement Shaving Unit**  
Model RQ11 - For maximum shaver performance, replace your Philips Norelco shaver heads once a year.
- ▶ **Click-on Beard Styler**  
Model RQ111 - Philips Norelco Click-on Beard Styler
- ▶ **Cleaning Solution**  
HQ200 - Philips Norelco Jet Clean Solution, 10 fl. oz. /300 ml.
- ▶ Philips Norelco Shaver Accessories may be purchased at a store near you, or on our website [www.philips.com/store](http://www.philips.com/store)

## FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips Norelco Product, Models 1190X/1180X/1180XCC/1160X/1160XCC/1150X (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

**IMPORTANT:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.\*

**NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

In order to obtain warranty service, simply go to [www.philips.com/norelco](http://www.philips.com/norelco) or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

**NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

\* Read enclosed instructions carefully.

Manufactured for:

Philips Consumer Lifestyle  
A Division of Philips Electronics North America Corporation  
P.O.Box 10313, Stamford, CT 06904



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco, Tripleheader, Lift and Cut, and  are Registered Trademarks of Philips Electronics North America Corporation.



is a Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips N.V.