

Register your product and get support at

www.philips.com/welcome

EN User Manual

PHILIPS

Contents

1	Get started	3	7	Product specifications	48
	TV tour	3		Power and reception	48
	TV controls	3		Display and sound	48
	Important information	5		Display resolutions	48
	Sustainability	8		Multimedia	49
	Help and support	9		Connectivity	50
2	Use your TV	10		Supported TV mounts	50
	Watch TV	10		Help version	51
	View programme guide	13	8	Index	52
	View media	13			
3	Use more of your TV	15			
	Professional mode	15			
	Play games	19			
	View Text	19			
	Set locks and timers	20			
	Use EasyLink	21			
	View Scenea	24			
4	Set up your TV	25			
	Picture and sound	25			
	Channel settings	26			
	Language settings	28			
	Universal access settings	29			
	Other settings	30			
	Update software	30			
	Restore default settings	31			
5	Connect your TV	32			
	About cables	32			
	Connect devices	34			
	Connect more devices	41			
	Watch a connected device	43			
	Common interface	44			
6	Troubleshooting	45			
	General issues	45			
	Channel issues	45			
	Picture issues	46			
	Sound issues	46			
	Connection issues	47			
	Contact Philips	47			

1 Get started

TV tour

High Definition TV

If your TV is equipped with a High Definition (HD) display, you can watch HD video in the following ways and more:

- a Blu-ray disc player, connected with an HDMI cable, playing a Blu-ray disc
- an upscaling DVD player, connected with an HDMI cable, playing a DVD disc
- an over-the-air HD broadcaster (DVB-T MPEG4)
- a digital HD receiver, connected with an HDMI cable, playing HD content from a cable or satellite operator
- an HD game console, connected with an HDMI cable, playing an HD game

Media playback

If you connect your TV to a USB storage device, you can enjoy your movies, music and pictures on a wide screen TV with excellent sound.

Programme guides


You can find out what's on and what's coming up with the now and next EPG (Electronic Programme guide) or eight day EPG.

Intuitive menus

With the TV's intuitive menus, you can easily access the channel or media file that you want or tweak the TV settings to suit your needs.


TV controls

Rear controls

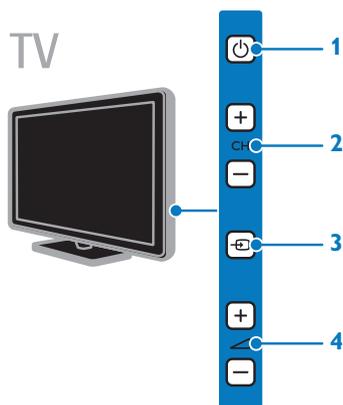

1. **⏻ (Standby)**: Switch the TV on or off.
2. **CH +/- (Channel +/-)**: Switch to the next or previous channel.
3. **⏻ (Source)**: Access a connected device.
4. **🔊 +/- (Volume +/-)**: Increase or decrease volume.

Side controls (For 22HFL3007D and 26HFL3007D only)

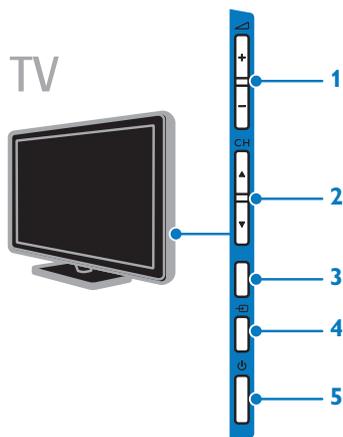


1. +/- (Volume +/-): Increase or decrease volume.
2. CH (Channel): Switch to the next or previous channel.
3. No function.
4. (Source): Access a connected device.
5. (Standby): Switch the TV on or off.

Sensors

1. Remote control sensor


Point the remote control at the sensor. Make sure that the line-of-sight between the remote control and the TV is not blocked by furniture or other objects.

TV

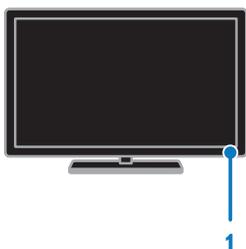


For HFL3017 - 32- to 42-inch TVs only


TV

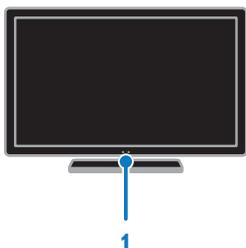


Remote control

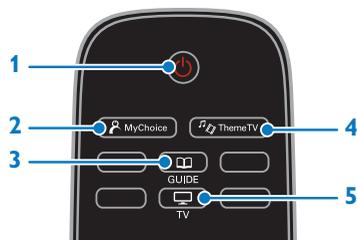


1. (Standby): Switch the TV on or to standby.
2. MyChoice: Access customised menu.
3. GUIDE: Access TV Guide.
4. ThemeTV: Access ThemeTV options.
5. TV: Switch source to watch TV.

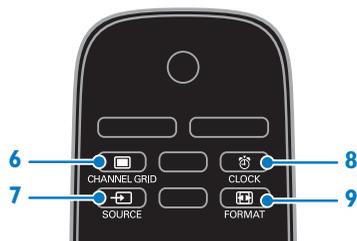


6. CHANNEL GRID: Access the TV channel list.
7. SOURCE: Access a connected device.
8. CLOCK: Access the TV clock.
9. FORMAT: Change picture format.

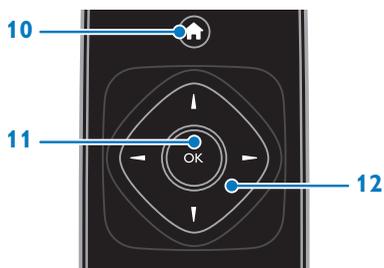


10. (Home): Access the Home menu.
11. OK: Confirm an entry or selection.
12. (Navigation buttons): Navigate through menus and select items.

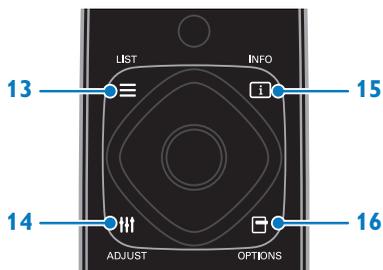

13. **≡ LIST**: Access the TV channel list.
 14. **|||| ADJUST**: Adjust TV settings.
 15. **i INFO**: Display information about current activity.
 16. **□ OPTIONS**: Access currently available options.

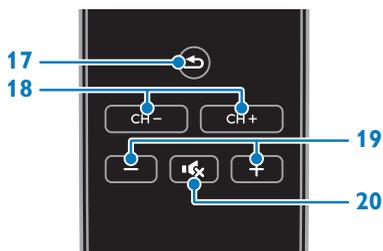

17. **← (Back)**: Return to the previous menu page or exit from a TV function.
 18. **CH - / CH +**: Change channels.
 19. **+/- (Volume)**: Adjust volume.
 20. **🔇 (Mute)**: Mute or restore audio.

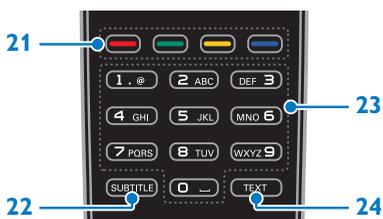

21. **Colour buttons**: Select tasks or options. The buttons function according to the services offered by the service provider.
 22. **SUBTITLE**: Switch subtitles on or off.
 23. **0-9 (Numeric buttons)**: Select TV channels or enter text.
 24. **TEXT**: Enable or disable text.

EasyLink controls

Note: EasyLink controls are available when the connected device is HDMI-CEC compliant.

With EasyLink controls, you can control your TV and other HDMI-CEC devices with one remote control.

Access EasyLink controls

- While you view content from a connected HDMI-CEC device, press **□ OPTIONS**.
- Select **[Show remote control]**, then press **OK**.
- Select the EasyLink control button, then press **OK**.

Read more about EasyLink in **Use more of your TV > Use EasyLink** (Page 21).

Important information

Safety

Read and understand all instructions before you use your TV. If damage is caused by failure to follow the instructions, the warranty does not apply.

Risk of electric shock or fire!

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
- Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV.
- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming onto power plugs. Ensure that the power plug is fully inserted into the power socket. Loose power plugs can cause arcing or fire.
- When the TV is swivelled, ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- To disconnect the TV from the mains power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

Risk of damage to the TV!

- Two people are required to lift and carry a TV that weighs more than 25kg or 55lbs.
- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. TP Vision Netherlands B.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
- If you need to store the TV, disassemble the stand from the TV. Never lay the TV on its back with the stand installed.
- Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

- Parts of this product may be made of glass. Handle with care to avoid injury and damage.

Risk of injury to children!

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Educate children about the dangers of climbing on furniture to reach the TV.

Risk of swallowing batteries!

- The product/remote control may contain a coin-type battery, which can be swallowed. Keep the battery out of reach of children at all times!

Risk of overheating!

- Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure that curtains or other objects never cover the ventilation slots on the TV.

Risk of injury, fire or power cord damage!

- Never place the TV or any objects on the power cord.
- Disconnect the TV from the socket and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.

Risk of hearing damage!

- Avoid using earphones or headphones at high volumes or for prolonged periods of time.

Low temperatures

- If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

Screen care

- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.
- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

Notice

2012 © TP Vision Netherlands B.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. TP Vision Netherlands B.V. reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision Netherlands B.V. warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

TP Vision Netherlands B.V. cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

Terms of warranty

- Risk of injury, damage to TV or void of warranty! Never attempt to repair the TV yourself.
- Use the TV and accessories only as intended by the manufacturer.
- The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips Customer Care for service or repairs.



- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual shall void the warranty.

Pixel characteristics

This LCD/LED product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

CE compliance



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage) and 2004/108/EC (EMC).

Compliance with EMF

TP Vision Netherlands B.V. manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the Electro Magnetic Field (EMF) standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. TP Vision confirms that, as long as its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Trademarks and copyrights

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.



Manufactured under licence from Dolby Laboratories. Dolby and the double D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.

All other registered and unregistered trademarks are the property of their respective owners.

Sustainability

Energy efficiency

This TV is designed with energy-efficient features. To access these features, press the green button on the remote control.

- **Energy saving picture settings:** You can apply a combination of energy-saving picture settings. While you watch TV, press the **Green button**, then select **[Energy saving]**.
- **Screen off:** If you only want to listen to audio from the TV, you can switch off the TV display. Other functions continue to operate normally.
- **Low standby power:** The advanced power circuitry reduces the power consumption of the TV to an extremely low level, without losing out on the constant standby functionality.

End of use

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and human health.



EU energy label

The European Energy Label informs you on the energy efficiency class of the product. The greener the energy efficiency class of this product is, the lower the energy it consumes.

On the label, you can find the energy efficiency class, the average power consumption of the product in use and the average energy consumption for 1 year. You can also find the power consumption values for the product on the Philips website for your country at www.philips.com/TV.

Help and support

Visit the Philips website

If you can't find what you need in the onscreen **[Help]**, visit the Philips support website at www.philips.com/support.

On the Philips support website, you can also:

- Find answers to Frequently Asked Questions (FAQ)
- Download a printable PDF version of this user manual
- Email us a specific question
- Chat online with Philips Consumer Care (available in certain countries only)

Search the TV forum

Your question may have already been answered by the Philips TV community of users. Visit www.supportforum.philips.com.

Contact Philips


You can contact Philips Consumer Care in your country for support. The number is available in the leaflet accompanying this product or online at www.philips.com/support.

Before you contact Philips, write down the model and serial number of your TV. You can find this information on the back of your TV or on the TV packaging.

2 Use your TV

Watch TV

Switch TV on or off

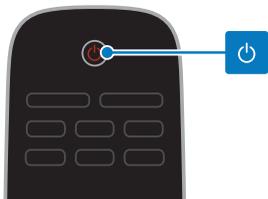

Switch the TV on

- Press the power switch on the TV.
- If the TV is in standby, press  on the remote control.

Note: There is a short delay before the TV responds.

Tip: If you cannot find your remote control and want to switch the TV on from standby, press **CH +/-** or **CH ▲ ▼** on the TV.

Switch TV to standby

Press  on the remote control. The remote control sensor on the TV switches to red.

Switch off the TV

Press  on the TV. The TV switches off.

Note: Though your TV consumes very little energy when it is in standby or switched off, it does use some energy. If you are not going to use the TV for an extended period of time, disconnect the TV from the mains plug.

Automatic switch off

You can save energy with this TV's energy efficiency settings. The settings are enabled by default, so that if there is no user interaction (such as pressing a remote control button or a control on the rear panel) for four hours, the TV will automatically switch to standby.


To disable automatic switch off

1. While you watch TV, press the **Green button** on the remote control.
2. Select **[Auto switch off]**, then press **OK**.
3. Use the **Navigation buttons** to make a selection, then press **OK**.

Adjust TV volume

Increase or decrease the TV volume

- Press **+/-** on the remote control, or
- Press  on the side or back of the TV.

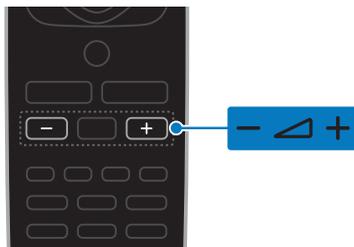

Mute or unmute the TV volume


- Press  on the remote control to mute the volume.
- Press  again to restore the volume.

Adjust headphone volume

1. Press  > **[Setup]** > **[TV settings]** > **[Sound]**.
2. Select **[Headphone volume]**, then press **OK**.

Switch TV channels

- Press **CH +/-** on the remote control, or
- Press **CH +/-** or **CH ▲ ▼** on the side or back of the TV.
- Press the **Numeric buttons** to enter a channel number.

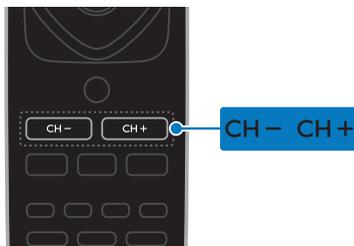

Manage favourites

You can view all channels or only a list of your favourite channels so that you can find them easily.

Press **≡ LIST** to access the channel list.

Create a list of your favourite channels

1. Press **≡ LIST**.
2. Select the channel to mark as a favourite, then press **☰ OPTIONS**.
3. Select **[Mark as favourite]**, then press **OK**.
The selected channel is marked.

To deselect a channel, select **[Unmark as favourite]**, and then press **OK**.

Select a channel list

1. Press **≡ LIST**, then press **☰ OPTIONS**.
2. Select **[Select list] > [Favourite]** to display channels in the favourite list or **[All]** to display all channels.
3. Press **OK** to confirm.

Manage channel lists

After the channels have been installed, you can manage them:

- Rename channels
- Reorder channels
- Listen to digital radio

Rename channels

You can rename channels. The name appears when the channels are selected.

1. While you watch TV, press **≡ LIST**.
The channel list is displayed.
2. Select the channel to rename, then press **☰ OPTIONS**.
3. Select **[Rename]**, then press **OK**.
4. Press the **Navigation buttons** to select each character, then press **OK**.
 - Press **OK** in the entry screen to enable the **Onscreen Keyboard**, or
 - Press **[ABC]** or **[abc]** to select an uppercase or lowercase letter.
5. Once complete, select **[Done]**, then press **OK** to confirm when prompted.
6. Press **⏪** to exit.

Reorder channels

After the channels have been installed, you can reorder the channel list.

1. While you watch TV, press **≡ LIST**.
The channel list is displayed.
2. Press **☰ OPTIONS**.
3. Select **[Reorder]**, then press **OK**.
4. Select the channel to reorder, then press **OK**.
5. Press the **Navigation buttons** to move the highlighted channel to another location, then press **OK**.
6. Press **☰ OPTIONS**.
7. Select **[Done reordering]**, then press **OK**.

Listen to digital radio

If digital radio channels are available, you can listen to them. They are installed automatically when you install the TV channels.

1. While you watch TV, press **≡ LIST**.
The channel list is displayed.
2. Press **☰ OPTIONS**.
3. Select **[Select list] > [Radio]**, then press **OK**.
4. Select a radio channel, then press **OK**.

Select a source

You can watch a connected device in one of the following ways:

- Add its icon to the Home menu for easy access, then select it from the Home menu.
- Select from the Source menu.

Note: If you connect an HDMI-CEC compliant device to the TV, it is automatically added to the Home menu.

Add new device

1. Connect and switch on the device.
2. Press **🏠**.
3. Select **[Add new device]**, then press **OK**.
4. Follow the onscreen instructions.
 - If you are prompted to select the TV connection, select the connector that this device uses.

View from Home menu

After you have added the new device to the Home menu, you can select its icon to start using it.

1. Press **HOME**.
2. Select the device icon from the Home menu.
3. Press **OK** to confirm.

View from Source menu

You can also press **SOURCE** to display a list of connector names. Select the connector that connects the device to the TV.

1. Press **SOURCE**.
2. Press the **Navigation buttons** to select a connector in the list.
3. Press **OK** to confirm.

Use smart settings

Your TV comes with smart picture and sound settings. You can apply these settings or customise them.

Select your preferred picture setting

1. While you watch TV, press **ADJUST**.
2. Select **[Smart picture]**.
3. Select an option, then press **OK**:
 - **[Personal]**: Apply your personalised picture settings.
 - **[Vivid]**: Rich and dynamic settings, ideal for daytime viewing.
 - **[Natural]**: Natural picture settings.
 - **[Cinema]**: Ideal settings for movies.
 - **[Game]**: Ideal settings for games.
 - **[Energy saving]**: Settings that conserve the most energy.
 - **[Standard]**: Default settings that suit most environments and types of video.
 - **[Photo]**: Ideal settings for photos.
 - **[Custom]**: Customise and store your own picture settings.

Select your preferred sound setting

1. While you watch TV, press **ADJUST**.
2. Select **[Smart sound]**.
3. Select an option, then press **OK**:
 - **[Personal]**: Apply your personalised sound setting.
 - **[Standard]**: Settings that suit most environments and types of audio.
 - **[NEWS]**: Ideal settings for spoken audio, such as the news.
 - **[Cinema]**: Ideal settings for movies.
 - **[Game]**: Ideal settings for games.
 - **[DRAMA]**: Ideal settings for drama programmes.
 - **[SPORTS]**: Ideal settings for sports.

Change picture format

You can change the picture format to suit the video source.

1. Press **FORMAT**.
2. Select a picture format, then press **OK** to confirm.

The available picture formats depend on the video source:

- **[Auto fill]**: Adjust the picture to fill the screen (subtitles remain visible). Recommended for minimal screen distortion but not for HD or PC.
- **[Auto zoom]**: Enlarge the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC.
- **[Super zoom]**: Remove the black bars on the sides of 4:3 broadcasts. Not recommended for HD or PC.
- **[4:3]**: Display the classic 4:3 format.
- **[Movie expand 16:9]**: Scale 4:3 format to 16:9. Not recommended for HD or PC.
- **[Wide screen]**: Stretch 4:3 format to 16:9.
- **[Unscaled]**: Provide maximum detail for PC. Only available when PC mode is selected in the Picture menu.

View programme guide

You can view information about digital TV channels using programme guides provided by broadcasters. This information can include:

- Channel schedules for the day ('Now and next') or up to 8 days, if supported by your broadcaster
- Synopsis of programmes

Note: Programme guides are available in certain countries only.

Set programme guide

Before you use the programme guide, check the following settings:

1. Press **▲**.
2. Select **[Programme guide]**.

Access the TV programme guide

1. Press **▲**.
2. Select **[Programme guide]**, then press **OK**.

Use TV programme guide options

You can customise the displayed information to:

- Remind you when programmes start
 - Display only preferred channels
1. In the programme guide, press **☰** **OPTIONS**.
 2. Select an option, then press **OK**:
 - **[Set reminder]**: Set programme reminders.
 - **[Clear reminders]**: Clear programme reminders.
 - **[Change day]**: Select the day to display.
 - **[Show info]**: Display programme information.
 - **[Search by genre]**: Search TV programmes by genre.
 - **[Scheduled reminders]**: List programme reminders.
 - **[Acquire EPG data]**: Update the latest programme information.

View media

What you can do

You can play videos, photos and music on your TV from a USB device connected to the TV.

Play files from USB

If you have photos, videos or music files on a USB storage device, you can play the files on TV.

Caution:

- TP Vision is not responsible if the USB hard drive is not supported, nor is it responsible for damage to or loss of data in the device.
- Do not overload the USB port. If you connect a USB storage device that consumes more than 500mA power, make sure that it is connected to its own external power supply.

View USB contents

1. Connect the USB device to the USB connector on the TV.
2. Press **▲**, select **[Browse USB]**, then press **OK**.
3. Select a file from the content browser, then press **OK** to start play.
4. Press the **OK** or **◀▶** on the remote control to control play. See **Use your TV > View Media > Play options** (Page 13).

Play options

Watch video

Press the **Navigation buttons** to select a video file, then press **OK** to control play.

- Press **◀/▶** to search backward or forward.
- Press **⏏** to exit the content browser.

Video playback options

While you play video, press **☰** **OPTIONS** to access the following video options:

- **[Subtitles]**: Select the available subtitles settings.
- **[Audio language]**: Select the available audio language.

- **[Repeat]:** Repeat a video, track or album.
- **[Show info]:** Display the file name.
- **[Eco settings]:** Select energy-saving modes.

Listen to music

Press the **Navigation buttons** to select a video file, then press **OK** to control play.

- Press ◀/▶ to search backward or forward within a music track.
- Press ↵ to exit content browser.

Music playback options

Press **☰ OPTIONS** to access or exit the following music options:

- **[Repeat]:** Repeat a track or an album.
- **[Play once]:** Play the track once.
- **[Shuffle on] / [Shuffle off]:** Enable or disable random play of tracks.
- **[Show info]:** Display the file name.
- **[Eco settings]:** Select energy-saving modes.

View pictures

Press the **Navigation buttons** to select a picture, then press **OK** to start the slideshow.

- Press **Navigation buttons** to search for a picture.
- Press ↵ to exit content browser.

Picture slideshow options

Press **☰ OPTIONS** to access or exit the following picture options:

- **[Slideshow transitions]:** Select the transition from one picture to the next.
- **[Slideshow frequency]:** Select the display time for each picture in the slideshow.
- **[Repeat] / [Play once]:** View slideshow once or repeatedly.
- **[Shuffle off] / [Shuffle on]:** Enable or disable random display of pictures in the slideshow.
- **[Rotate image]:** Rotate the picture.
- **[Show info]:** Display the picture information.
- **[Set as Scenea]:** Load the selected picture as the TV wallpaper. See **Use more of your TV > View Scenea** (Page 24).

3 Use more of your TV

Professional mode

What you can do

With professional mode, you can configure this TV for commercial use. This includes:

- Blocking guests from modifying the TV channels or settings
- Programming the TV to switch on to a specific channel and volume
- Limiting the maximum volume
- Blocking specific channels
- Locking buttons on the remote control
- Controlling on-screen information

Note: In professional mode, most of the mainstream features are replaced by similar features for commercial use.

Enter Professional mode

1. Press **Home** on the remote control.
2. Press **3, 1, 9, 7, 5, 3, Mute**

The professional setup menu appears.

Switch on

1. In the professional setup menu, select **[Professional setting] > [Professional mode]**.
2. Use the **Navigation buttons** to select a setting to change, then press **OK**:
 - **[On]**: Switch on professional mode. Hospitality features are enabled.
 - **[Off]**: Switch off professional mode. The TV operates as a normal consumer TV.
3. Press **Home** to store all professional mode settings and exit.
4. Restart the TV.

Display hotel information

To enhance hotel services, you can store and display information about your hotel on TV sets, including a:

- Welcome logo
- Welcome message
- Hotel information page

Display a welcome screen

You can create a welcome screen with, for example, your hotel's logo.

1. Create a welcome screen in .jpeg format and save the file to a USB storage device.
2. Connect the USB storage device to the TV, then switch on the TV.
3. In the professional setup menu, select **[Welcome logo] > [USB to TV]**.
4. Select the file, then press **OK** to load the logo.
5. Select **[Welcome logo] > [Display logo] > [On]** to display the logo.

Display a welcome message

Create and display a welcome message for your guests - a welcome message can consist of up to two lines of text, each containing a maximum of 20 alphanumeric characters.

1. In the professional setup menu, select **[Welcome msg] > [Display Msg] > [On]**.
2. Select a setting to change:
 - **[Line 1] / [Line 2]**: Enter the content for the welcome message.
 - **[Clear]**: Clear **[Line 1]** and/or **[Line 2]**.
 - **[Message Time-out]**: Set how long to display the message.
3. Press **OK** to display the on-screen keyboard and use the **Navigation buttons** to compose the welcome message.

Display a hotel information screen

Create and display a static information screen about your hotel. The information page appears as an icon in the home menu and can also be accessed by pressing **INFO**.

1. Create a welcome screen in .jpeg format and save the file to a USB storage device.
2. Connect the USB storage device to the TV, then switch on the TV.
3. In the professional setup menu, select **[Hotel information]** > **[USB to TV]**.
4. Select the file to display, then press **OK**.
5. Select **[Hotel information]** > **[Display information]** > **[On]** to display the hotel information.

To view the hotel information screen by pressing **ⓘ INFO**, in the professional setup menu, select **[Hotel information]** > **[Info key enable]** > **[On]**.

Change professional mode settings

Professional mode settings

Use professional mode settings to speed up installation of Philips TVs for commercial use.

1. In professional setup menu, select **[Professional mode]**, then press **OK**.
2. Select a setting to change, then press **OK**:
 - **[Room ID]**: Set a Room ID for the TV.
 - **[Channel setup]**: Shortcut to the channel list where you can change the order of, rename and hide channels.
 - **[Consumer setup]**: Shortcut to the full TV menu, for example, to install all the TV settings.
 - **[USB to TV]**: Clone settings stored on a USB storage device from another Philips TV.
 - **[TV to USB]**: Copy the current TV's settings to a USB storage device. These settings can be cloned onto another Philips TV.
 - **[RF to TV]**: Copy settings from a Philips TV using RF signal.
 - **[Reset]**: Reset all professional mode settings to the factory default.

Channel settings

Change TV channel settings

1. In the professional setup menu, select **[Installation]**.
2. Select a setting to change, then press **OK**:
 - **[Blank channel]**: Select a channel to play audio only.

- **[Auto channel update]**: Automatically update channels.
- **[Auto software update]**: Automatically update your TV software.
- **[Skip scrambled signals]**: Enable or disable scrambled channels in the channel list.

Pairing TVs to a remote control

Pair a maximum of four TVs to one remote control.

1. In professional setup menu, select **[Installation]** > **[Multi remote control]**, then press **OK**.
2. Press **⬆**.
3. Press and hold a coloured button for more than four seconds. The coloured button is used to access the paired TV.

Note: If the batteries in the remote control are replaced after pairing, you will need to re-perform pairing to assign a particular colour button to a TV - otherwise, use the blue coloured button to access any of the TVs.

Power settings

Customise the way the TV behaves when it is switched on.

1. In the professional setup menu, select **[Switch on setting]**.
2. Select a setting to change, then press **OK**:
 - **[Switch on channel]**: When switched on, the TV switches to a pre-defined channel.
 - **[Switch on vol]**: When switched on, the TV switches to a pre-defined volume.
 - **[Max volume]**: Limit the maximum volume of the TV.
 - **[Switch on picture format]**: When switched on, the TV switches to a pre-defined picture format. If the source does not support the pre-defined format, **[Auto format]** is enabled.

- **[Power On]:** When switched on, the TV switches to a customised mode:
 - **[On]:** If the mains power is switched on, the TV automatically switches on.
 - **[Standby]:** If the mains power is switched on, the TV automatically switches to standby.
 - **[Last status]:** If the mains power is switched on, the TV automatically switches to the last status (i.e. on or to standby).
- **[Smart power]:** When switched on, energy saving mode is enabled or disabled.

Control user access

You can control user access to the TV with the following features:

- Lock remote control buttons
- Limit access through USB, HDMI-CEC or SCART
- Customise guest view

Enable Auto SCART

Use this feature to control the TV through a connected SCART device. When the SCART device is switched on, the TV automatically switches on.

1. Switch on the TV and the connected SCART device.
2. Enter the professional setup menu, select **[Control settings] > [Auto SCART] > [On] > [Power on scart]**, then press **OK**.

Enable HDMI-CEC

If connected HDMI devices are HDMI-CEC compliant, control these devices with the TV's remote control. For more details on how to use HDMI-CEC, see **Use more of your TV > Use EasyLink** (Page 21).

1. Switch on the TV and all connected HDMI-CEC devices.
2. Press **⬆**, select **[Setup] > [TV settings] > [EasyLink] > [On]**, then press **OK**.
3. Enter the professional setup menu, select **[Control settings] > [HDMI-CEC IN] > [On]**, then press **OK**.

Enable or disable access to a USB storage device

1. In the professional setup menu, select **[Control settings] > [Enable USB] > [On]** or **[Off]**, then press **OK**.

Direct USB access

Automatically display the content of a USB storage device when the device is connected.

1. In the professional setup menu, select **[Control settings] > [USB break-in] > [On]**, then press **OK**.

Change other control settings

1. In the professional setup menu, select **[Control settings]**.
2. Select a setting to change, then press **OK**:
 - **[Lock KB lock]:** Select **[On]** to lock all TV buttons except **⏻**. Select **[Off]** or **[All]** to unlock or lock all buttons respectively.
 - **[RC lock]:** Select **[On]** to disable all buttons on the remote control. Note that you can still enter the professional setup menu by pressing **3, 1, 9, 7, 5, 3, 6**.
 - **[OSD display]:** Enable or disable on-screen information.
 - **[High security]:** Select **[On]** to restrict access to the professional setup menu.
 - **[Enable teletext]:** Select **[On]** to enable text.
 - **[Enable MHEG]:** Select **[On]** to enable MHEG channels. Applicable to UK only.
 - **[Enable EPG]:** Select **[On]** to enable the programme guide.
 - **[Enable subtitles]:** Select **[On]** to enable subtitles.
 - **[Blue mute]:** Select **[On]** to change the background colour to blue when no signal is received. The default colour is black.
 - **[Digital timeout]:** Set the maximum interval time between selection of each numeric button on the remote control.
 - **[Selectable AV]:** Select which external sources are available when **⏻ SOURCE** is pressed.

Load clock

In Professional mode, you can load the local time according to the channel or country. For general clock features, see **Use more of your TV > Set locks and timers** (Page 20).

1. In the professional setup menu, select **[Clock setup]**.
2. Select a setting to change, then press **OK**:
 - **[Download program]**: Select a channel to load the clock.
 - **[Country selection]**: Select a country for the local time to be based on.
 - **[Time offset]**: Select the number of hours to offset.

Change speaker settings

Set the audio output and volume of the TV.

1. In Professional setup menu, select **[Speaker settings]**.
2. Select a setting to edit, then press **OK**.
 - **[TV speaker enable]**: Select **[Off]** to output audio through headphone.
 - **[Independent main speaker mute]**: If the TV speaker is enabled, you can select:
 - **[On]**: Control the TV speaker and headphone volume separately. You can only mute the TV volume.
 - **[Off]**: Control both TV speaker and headphone volume together.
 - **[Default main speaker volume]**: If the TV speaker and headphone volume are controlled separately, you can set the volume range to avoid sudden loud volumes when the TV speaker is enabled.

MyChoice and ThemeTV

Install MyChoice

You can customise a list of premium channels for your hotel guests, accessible with an authorised PIN code only.

1. In Professional setup menu, select **[Installation]**.
2. Select **[MyChoice] > [On]**, then press **OK**.

MyChoice button on the remote control is activated.

Setup MyChoice

1. In Professional setup menu, select **[MyChoice setup]**.
2. Select the list of channels, then press **OK**.
 - **[R0]**: List of MyChoice and normal channels. Channels marked with **[X]** require an authorised PIN code.
 - **[R1]**: List of all available channels accessible to hotel guests.

Watch MyChoice channels

1. Press  **MyChoice**.
2. Enter the authorised PIN code to watch the channels.

Install ThemeTV

You can create a maximum of six theme lists for your hotel guests.

1. In Professional setup menu, select **[Installation]**.
2. Select **[ThemeTV] > [On]**, then press **OK**.

ThemeTV button on the remote control is activated.

Tips: To enable ThemeTV at TV startup, select **[ThemeTV] > [Startup]**.

Setup ThemeTV

1. In Professional setup menu, select **[ThemeTV Configuration]**.
2. Select a channel group to edit.
3. Select **[ThemeTV Configuration] > [ThemeTV Channel setup]**.
4. Select the channels to add to your channel group.

Guest menu

Here are a few settings that hotel guests can change.

Picture settings

1. Press , select **[Guest menu] > [Picture]**:
 - **[Picture format]**: Change the picture format.
 - **[Brightness]**: Change the intensity and details of the dark areas.
 - **[Contrast]**: Change the intensity of the bright areas, keeping dark areas unchanged.
 - **[Colour]**: Change colour saturation.
 - **[Sharpness]**: Change sharpness.

Sound settings

1. Press **▲**, select **[Guest menu]** > **[Sound]**:
 - **[Audio language]**: Select the preferred audio language.

Features

1. Press **▲**, select **[Guest menu]** > **[Features]**:
 - **[Subtitle mode]**: Select the available subtitle language.
 - **[Sleep timer]**: Set the timer.

Play games

Add a game console

You can play games consoles projected on a wide screen TV with excellent sound. Before you start, connect your game console to this TV. See **Connect your TV > Connect devices > Game console** (Page 38).

For easy access, add the game console to the Home menu.

1. Press **▲**.
2. Select **[Add your devices]** > **[Game console]**, then press **OK**.
3. Follow the onscreen instructions to add the game console.

Game setting

The Game option in the Smart picture settings optimises the TV display for gaming without picture lag.

- If you add the game console to the Home menu as **[Game console]**, the TV switches to the game setting automatically.
- If your game console is automatically added to the Home menu as a Blu-ray disc player or DVD player, set the **[Smart picture]** setting to **[Game]** before you start playing.

Switch to Game setting

1. Press **≡** **ADJUST**.
2. Select **[Smart picture]** > **[Game]**, then press **OK**. The TV is ready for gaming.

Note: When your gaming session ends, switch back to your usual Smart Picture setting.

View Text

Select a page

While you watch channels that broadcast text, you can view the text.

1. Select a channel that broadcasts text, then press **TEXT**.
2. Select a page in one of the following ways:
 - Enter the page number with the **Numeric buttons**.
 - Press **CH + / CH -** to view the next or previous page.
 - Press the **Colour buttons** to select a colour coded item.
3. Press **↵** to exit.

Text options

1. While you view text, press **☰** **OPTIONS**.
2. Select an option:
 - **[Freeze page] / [Unfreeze page]**: Freeze or unfreeze the current page.
 - **[Dual screen] / [Full screen]**: Enable or disable dual screen text. Dual screen displays both the current channel and the text broadcast on two halves of the TV screen.
 - **[T.O.P. overview]**: Table Of Pages (T.O.P.) text broadcasts allow you to jump from one subject to another without entering page numbers.
 - **[Enlarge] / [Normal view]**: Zoom in on the page. Press the **Navigation buttons** to move around the enlarged view.
 - **[Reveal]**: Hide or reveal hidden information on a page, such as solutions to riddles or puzzles.
 - **[Cycle subpages]**: If subpages are available, each is shown automatically.
 - **[Language]**: Switch to a different language group to correctly display different character sets.
3. Press **☰** **OPTIONS** to exit.

Text language

For digital TV channels where the broadcasters provide different text languages, you can select your preferred primary and secondary language.

1. Press **⏠**.
2. Select **[Setup] > [Channel settings]**.
3. Select **[Languages] > [Primary Text]** or **[Secondary Text]**.
4. Select a language, then press **OK**.

Subpages

If the text page contains several subpages, you can view each subpage in succession. These subpages are shown on a bar next to the main page number.

If subpages are available, press **◀** or **▶** to select them.

Digital text

If a digital TV channel's broadcaster offers dedicated digital text or interactive services, you can view digital text. Such channels, such as BBC1, may have digital text with more interactive features.

Note: Digital text services are blocked when subtitles are broadcast and switched on. See **Set up your TV > Language settings > Subtitles** (Page 28).

When in digital text:

- Press the **Navigation buttons** to select or highlight items.
- Press the **Colour buttons** to select an option, then press **OK** to confirm or activate.

Text 2.5

With Text 2.5, you can view text with more colours and better graphics than normal text. If Text 2.5 is broadcast by a channel, it is switched on by default.

To switch Text 2.5 on or off

1. Press **⏠**.
2. Select **[Setup] > [TV settings] > [Preferences]**.
3. Select **[Text 2.5] > [On]** or **[Off]**, then press **OK**.

Set locks and timers

Clock

You can display a clock on the TV. The clock displays the time that is broadcast by your TV service operator.

Display the TV clock

1. While you watch TV, press **⌚** **CLOCK**. The clock is displayed at the top right-hand corner of the TV screen.

Change the clock mode

You can change the clock mode to automatic or manual. By default, it is set to automatic mode, which automatically synchronises it to Coordinated Universal Time (UTC). If your TV cannot receive UTC transmissions, change the clock mode to **[Manual]**.

1. While you watch TV, press **⏠**.
2. Select **[Setup] > [TV settings] > [Preferences]**.
3. Select **[Clock] > [Auto clock]**.
4. Select **[Automatic]** or **[Manual]**, then press **OK**.

Enable or disable daylight saving time

You can enable or disable daylight saving time depending on your region. Before you enable or disable daylight saving time, set the clock mode to **[Auto clock] > [Manual]**.

1. In the **[Clock]** menu, select **[Daylight saving]**.
2. Select **[Daylight saving time]** or **[Standard time]**, then press **OK**.

Daylight saving time is enabled or disabled.

Set the clock manually

You can set the date and time manually. Before you start, set the clock mode to **[Manual]**.

1. In the **[Clock]** menu, select **[Date]** or **[Time]**, then press **OK**.
2. Use the **Navigation buttons** to make your selection.
3. Select **[Done]**, then press **OK**.

Sleeptimer

You can switch the TV to standby after a specified time. During the countdown to the specified time, you can switch off your TV earlier or reset the sleeptimer.

1. Press **⏠**.
2. Select **[Setup] > [TV settings] > [Preferences] > [Sleep timer]**.
3. Press the **Navigation buttons** to set the sleeptimer.

The sleeptimer can be set up to 180 minutes, in steps of ten minutes. To switch off the sleeptimer, set it to zero minutes.

4. Press **OK** to activate the sleep timer.
- After the specified time, the TV switches to standby.

Child lock

To protect children from unsuitable TV programmes, you can lock the TV or block age rated programmes.

Set or change the child lock code

1. Press **⏠**.
2. Select **[Setup] > [Channel settings] > [Child lock]**.
3. Select **[Set code]** or **[Change code]**.
4. Enter the code with the **Numeric buttons**.

Tip: If you forget your code, enter '8888' to override any existing codes.

Lock or unlock channels

1. In the child lock menu, select **[Channel lock]**.
2. Select the channel to lock or unlock, then press **OK**.
3. If prompted, enter the child lock code with the **Numeric buttons**.
4. Restart the TV to activate the lock.

Note:

If you access the channels from the channel list, you are prompted to enter your lock code.

Parental rating

You can set your TV to display only programmes with age ratings lower than your child's age. This restriction only applies to digital channels from broadcasters that rate their programmes according to age.

1. Press **⏠**.
2. Select **[Setup] > [Channel settings]**.
3. Select **[Child lock] > [Parental rating]**.

You are prompted to enter the child lock code.

4. Enter the child lock code with the **Numeric buttons**.
5. Select an age rating, then press **OK**.

All programmes above the selected age rating are blocked.

For information on child lock codes, see **Use more of your TV > Set locks and timers > Child lock** (Page 21).

Use EasyLink

What you can do

You can get the most out of your HDMI-CEC-compliant devices with Philips EasyLink enhanced control features. Connect your HDMI-CEC compliant devices through HDMI to your TV and control them at the same time with your TV remote control.

Note: Other brands describe HDMI-CEC functionality differently. Some examples are Anynet (Samsung), Aquos Link (Sharp) or BRAVIA Sync (Sony). Not all brands are fully compatible with Philips EasyLink.

After you have switched on Philips EasyLink, the following features are available:

One-touch play

When you play an HDMI-CEC compliant device, the TV switches on from standby and switches to the correct source.

One-touch standby

When you press **⏻** on the TV remote control, the TV and all HDMI-CEC compliant devices switch to standby mode.

EasyLink remote control

You can control multiple HDMI-CEC compliant devices with your TV remote control.

System audio control

If you connect an HDMI-CEC compliant device that includes speakers through the HDMI ARC connector, you can choose to hear the TV audio from those speakers instead of the TV speakers.

Synchronise audio

If you connect your TV to a home theatre, you can synchronise the audio and video to avoid lag between the picture and sound.

Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, you can switch on Pixel Plus Link to retain picture quality.

Maximise display for subtitled video

Some video subtitles can create a separate subtitle bar under the video, which limits the video display area. To maximise the video display area, you can switch on auto subtitle shift and display the subtitles on top of the video image.

Switch off connecting device

If your connecting device is not the active source, you can save energy by setting the TV to switch it to standby.

What you need

- Connect at least two HDMI-CEC compliant devices through HDMI. See **Connect your TV > Connect devices** (Page 34).
- Configure each HDMI-CEC compliant device properly
- Switch on EasyLink

Switch on EasyLink

1. Press **⏠**.
2. Select **[Setup] > [TV settings] > [EasyLink] > [EasyLink]**.
3. Select **[On]** or **[Off]**, then press **OK**.

Control devices simultaneously

If you connect multiple HDMI-CEC devices that support this setting, you can control all such devices through the TV remote control.

Note: This is an advanced setting. Devices that do not support this setting will not respond to the TV remote control.

1. Press **⏠**.
2. Select **[Setup] > [TV settings] > [EasyLink]**.
3. Select **[EasyLink remote control] > [On]** or **[Off]**.
4. Press **OK** to activate.

Tips:

- To switch back to TV control, press **⏠**, then select **[Watch TV]**.
- To control another device, press **⏠**, then select the device from the Home menu.
- To exit, press **↩**.

EasyLink buttons

You can control HDMI-CEC compliant devices with the following buttons on the TV remote control:

- **⏸** Switch the TV and the connected device on or to standby.
- **OK:** Control video or music play.
- **Numeric buttons:** Select a title, chapter or track.
- **OK:** Start, pause or resume play on the connected device, activate a selection, or access the device menu.
- **◀/▶:** Search backwards and forwards on the connected device.
- **⏠:** Display the TV Home menu.

You can also control devices through other EasyLink buttons that are available through the On-Screen Remote Control (OSRC).

To access the OSRC

1. While you view content from a connected device, press **☰** **OPTIONS**.
2. Select **[Show remote control]**, then press **OK**.
3. Select an onscreen button, then press **OK**.
4. Press **↩** to exit.

Select speaker output

If a connected device is HDMI Audio Return Channel (HDMI ARC) compliant, you can output TV audio through an HDMI cable. Additional audio cables are not required. Make sure you connect the device to the HDMI ARC connector on the TV. See **Connect your TV > About cables > HDMI** (Page 32).

Configure TV speakers

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink] > [TV speakers]**.
3. Select an option, then press **OK**:
 - **[Off]**: Switch off TV speakers.
 - **[On]**: Switch on TV speakers.
 - **[EasyLink]**: Stream TV audio through the HDMI-CEC device. Switch the TV audio to the connected HDMI-CEC audio device through the Adjust menu.
 - **[EasyLink autostart]**: Switch off TV speakers automatically and stream TV audio to the connected HDMI-CEC audio device.

Select speaker output with the adjust menu

If **[EasyLink]** or **[EasyLink autostart]** is selected, you can change how the TV audio is streamed to the connected HDMI-CEC device.

1. While you watch TV, press **⏸ ADJUST**.
2. Select **[Speakers]**, then press **OK**.
3. Select one of the following, then press **OK**:
 - **[TV]**: On by default.
Stream TV audio through TV and the connected HDMI-CEC audio device until the connected device switches to system audio control. TV audio is then streamed through the connected device.
 - **[Amplifier]**: Stream audio through the connected HDMI-CEC device. If system audio mode is not enabled on the device, audio continues to stream from the TV speakers. If **[EasyLink autostart]** was selected, the TV prompts the connected device to switch to system audio mode.

With HDMI ARC compliant device

If an HDMI-ARC compliant device is connected through an HDMI ARC connector to the TV, you can output TV audio through the HDMI cable. You will not need an additional audio cable.

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink]**.
3. Select **[HDMI1 - audio out] > [On]**.
4. Select one of the following, then press **OK**.
 - **[On]**: Hear the TV audio through the connected ARC compliant device.
 - **[Off]**: Hear the TV audio through the TV speakers, or through a device connected through the digital audio out connector.
5. Control playback with the TV remote control **◀▶** buttons.

Listen to another device when TV is in standby

If available, you can press **⏸ ADJUST** to receive audio from a connected Philips EasyLink device while the TV is in standby mode.

Synchronise audio

If your TV is connected to a home theatre and there is a lag between the picture and the sound, you can synchronise them.

- If you are using a Philips home theatre, the audio and video are automatically synchronised.
- For other home theatre brands, you need to switch on the audio sync delay on the TV to synchronise the audio and video.

Switch on Audio Out Delay

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [Sound]**.
3. Select **[Audio out delay] > [On]**, then press **OK**.

Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, you can switch on Pixel Plus Link.

Switch on Pixel Plus Link

1. Press **⬆**.
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]**.
3. Select **[Pixel Plus Link]** > **[On]**, then press **OK**.

Maximise video display

Some subtitles create a separate subtitle bar under the video that limits the video display area. To maximise the video display area, you can switch on auto subtitle shift. The subtitles are then displayed over the video image.

Switch on auto subtitle shift

1. Press **⬆**.
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]** > **[Auto subtitle shift]**.
3. Select **[On]**, then press **OK** to activate.

Note: Make sure that the picture format of the TV is set to **[Auto format]** or **[Movie expand 16:9]**.

Switch off connecting device

You can set the TV to switch off connecting HDMI-CEC compliant devices if they are not the active source. The TV switches the connecting device to standby after 10 minutes of inactivity.

1. Press **⬆**.
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]**.
3. Select **[Auto switch off devices]** > **[On]**, then press **OK** to activate.

View Scenea

What you can do

With Scenea, you can display a picture as the wallpaper on your TV. Display the default picture or load your own picture as the wallpaper.

The wallpaper is displayed for 240 minutes or for the duration of the sleeptimer.

Switch on

1. Press **⬆**.
2. Select **[Scenea]**, then press **OK**.

The default picture is displayed.

Note: The wallpaper is displayed for 240 minutes or for the duration of the sleeptimer. For information about the sleeptimer, see **Use more of your TV > Set locks and timers > Sleeptimer** (Page 21).

Load TV wallpaper

You can also load your own picture as the wallpaper.

Note: When you load a new picture, it overrides the existing picture.

1. Connect the USB storage device to the TV.
2. Press **⬆**.
3. Select **[Browse USB]**, then press **OK**.
4. Select a picture, then press **⌘** **OPTIONS**.
5. Select **[Set as Scenea]**, then press **OK**.
6. Press any button to exit Scenea.

4 Set up your TV

Picture and sound

Settings assistant

You can select picture and sound settings with the help of the settings assistant, which demonstrates the effect of your chosen setting immediately.

1. While you watch TV, press **⬆**.
2. Select **[Setup]** > **[Quick picture and sound settings]**, then press **OK**.
3. Select **[Continue]**, then press **OK**.
4. Follow the onscreen instructions to choose your preferred settings.

More picture settings

You can change the settings in the Picture menu.

1. Press **⬆**.
2. Select **[Setup]** > **[TV settings]** > **[Picture]**, then press **OK**.
3. Select a setting to adjust, then press **OK**.

- **[Smart picture]**: Access predefined smart picture settings.
- **[Reset]**: Reset to default factory settings.
- **[Backlight]**: Change the brightness of the TV to match the lighting condition.
- **[Video contrast]**: Change the intensity of the bright areas, keeping dark areas unchanged.
- **[Brightness]**: Change the intensity and details of the dark areas.
- **[Colour]**: Change colour saturation.
- **[Sharpness]**: Change sharpness.
- **[Noise reduction]**: Filter and reduce noise.
- **[Tint]**: Change the colour balance.
- **[Custom tint]**: Customise tint setting. (Only available if **[Tint]** > **[Custom]** is selected)

- **[Digital Crystal Clear]**: Control advanced settings to fine-tune each pixel to match surrounding pixels. Produce a brilliant, high definition image.
 - **[Advance sharpness]**: Enable superior sharpness, especially on lines and contours in the picture
 - **[Dynamic contrast]**: Set the level at which the TV automatically enhances details in the dark, middle and light areas of the picture.
 - **[Dynamic backlight]**: Reduce power consumption by dimming the TV backlight to match the room lighting conditions.
 - **[MPEG artifact reduction]**: Smooth the digital transitions in the picture.
 - **[Colour enhancement]**: Change the colours to be more vivid and improve the resolution of details in bright colours.
 - **[Gamma]**: Non-linear setting for picture luminance and contrast.
- **[PC mode]**: When a PC is connected through HDMI, change the picture format to **[Unscaled]** to display maximum detail.
- **[Picture format]**: Change the picture format.
- **[Screen edges]**: Change the picture size.
- **[Picture shift]**: Move the position of the picture. You cannot select this setting if the selected picture format is **[4:3]**, **[Auto fill]**, **[Auto zoom]** or **[Wide screen]**.

More sound settings

You can change the settings in the Sound menu.

1. Press **⬆**.
2. Select **[Setup]** > **[TV settings]** > **[Sound]**, then press **OK**.
3. Select a setting to change, then press **OK**:
 - **[Smart sound]**: Access predefined smart sound settings.

- **[Reset]:** Reset to factory default settings.
- **[Clear Sound]:** Enhance the sound quality.
- **[Bass]:** Change the bass level.
- **[Treble]:** Change the treble level.
- **[Surround]:** Switch on spatial sound.
- **[Auto volume levelling]:** Automatically reduce sudden volume changes, for example when switching channels.
- **[Headphone volume]:** Change headphone volume.
- **[Balance]:** Change the balance of the left and right speakers.
- **[Audio out delay]:** Automatically sync the image on the TV to the audio from a connected home theatre.
- **[Audio out offset]:** Change the setting for audio output delay. You cannot select this setting if **[Audio out delay]** is not switched on.
- **[Digital output format]:** Select audio output through the digital audio connector. Select **[PCM]** to convert non-PCM audio or **[Multichannel]** to output to home theatre.
- **[Digital output level]:** Set the sampling rate for PCM audio.
[Normal] - No loss in intensity or signal strength; **[Low]** - Certain amount of loss in intensity or signal strength.

Select audio format

If a digital TV channel broadcaster streams audio in several formats, you can select an audio format.

1. Press **⏠**.
2. Select **[Setup]** > **[Channel settings]** > **[Language]**.
3. Select a setting, then press **OK**:
 - **[Preferred audio format]:** Receive standard audio format (MPEG) or advanced audio formats (AAC, EAC-3 or AC-3 if available).
 - **[Mono/Stereo]:** If stereo broadcasting is available, select mono or stereo audio.
4. Press **↶** to exit.

Reset picture and sound

You can restore the default picture and sound settings, while the channel installation settings remain the same.

1. While you watch TV, press **⏠**.
2. Select **[Setup]** > **[TV settings]** > **[Factory settings]**, then press **OK**.

All TV settings (except for channel settings) are reset to the default factory settings..

Channel settings

Automatic install

When the TV was switched on for the first time, a full installation of channels was performed. To change your language, country and reinstall all available TV channels, you can run this full installation again.

Start installation

1. Press **⏠**.
2. Select **[Setup]** > **[Search for channels]** > **[Reinstall channels]**, then press **OK**.
The Country menu is displayed.
3. Select your country, then press **OK**.
4. Select your network, then press **OK**:
 - **[Antenna]:** Access free-to-air antenna or digital DVB-T channels.
 - **[Cable]:** Access cable, digital DVB-C channels or digital DVB-T channels.

5. Follow the onscreen instructions to select other options, if any.

The start menu for channel search is displayed.

6. Start channel search:
 - If your channel service provider instructs you to change settings, select **[Settings]**, then press **OK**. Follow the service provider's instructions to complete the installation.
 - Otherwise, select **[Start]**, then press **OK**.

7. Once the channel search is complete, select **[Finish]**, then press **OK**.

Tip: Press **≡ LIST** to see the channel list.

Note: When digital TV channels are found, the list of installed channels may display empty channel numbers. You can rename, reorder or uninstall these channels.

Install analogue channels

You can search and store analogue TV channels one by one.

Step 1: Select your system

Note: Skip this step if your system settings are correct.

1. While you watch TV, press **Home**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual antenna installation]** > **[System]**, then press **OK**.
4. Select the system for your country or region, then press **OK**.

Step 2: Search and store new TV channels

1. In the **[Analogue: Manual antenna installation]** menu, select **[Find channel]**, then press **OK**.
2. Find the channel:
 - If you know the channel frequency, enter it with the **Navigation buttons** or **Numeric buttons**.
 - If you do not know the channel frequency, search for the next frequency that has a strong signal. Select **[Search]**, and then press **OK**.
3. After you have found the correct channel, select **[Done]**, then press **OK**.
4. Select **[Store as new channel]**, then press **OK** to store the new TV channel.

Note: If the reception is poor, reposition your antenna and repeat the procedure.

Install digital channels

If you know the channel frequency of the channels you want to install, you can search and store digital channels one-by-one. For best results, contact the service provider.

1. Press **Home**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Digital: Reception test]** > **[Find channel]**, then press **OK**.
4. Press the **Numeric buttons** to enter the channel frequency.
5. Select **[Search]**, then press **OK**.
6. When the channel is found, select **[Store]**, then press **OK**.
7. Press **Back** to exit.

Note: If your cable provider does not provide you with a specific symbol rate value for DVB-C channels, select **[Automatic]** in **[Symbol rate mode]**.

Fine-tune analogue channels

If the reception of an analogue TV channel is poor, you can fine-tune the TV channel.

1. Press **Home**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual antenna installation]** > **[Fine tune]**, and then press **OK**.
4. Press **Up** or **Down** to fine-tune the channel.
5. When you have selected the correct channel frequency, select **[Done]**, and then press **OK**.
6. Select an option, then press **OK**.
 - **[Store current channel]**: Store the channel as the current channel number.
 - **[Store as new channel]**: Store the channel as a new channel number.

Update channel list

When the TV was switched on for the first time, a full installation of channels was performed.

By default, when there are changes to these channel lists, the TV updates them automatically. You can also switch off the automatic update or manually update the channels.

Note: If you are prompted to enter a code, enter '8888'.

Automatic update

To add or remove digital channels automatically, leave the TV in standby mode. The TV updates channels and stores new channels everyday. Empty channels are removed from the channel list.

Switch off the channel update message

If a channel update is performed, a message is displayed at startup. You can switch off this message.

1. Press .
2. Select **[Guest menu]** > **[Channel settings]**.
3. Select **[Channel installation]** > **[Channel update message]**.
4. Select **[Off]**, then press **OK**.

To switch off automatic updates

In the **[Channel installation]** menu, select **[Automatic channel update]** > **[Off]**.

Update channels manually

1. Press .
2. Select **[Setup]** > **[Search for channels]** > **[Update channels]**, then press **OK**.
3. Follow the onscreen instructions to update the channels.

Language settings

Menu language

1. While you watch TV, press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Menu language]**.
3. Select a menu language from the list, then press **OK**.

Audio language

Set default audio language

For digital channels that are broadcast with multiple audio languages, you can set your preferred audio languages. The TV automatically switches to one of these languages, if they are available.

1. Press .
2. Select **[Setup]** > **[Channel settings]** > **[Language]**.
3. Select **[Primary audio language]** or **[Secondary audio language]** to set the preferred audio languages, then press **OK**.
4. Select the language, then press **OK**.

Select audio language

If the TV channel broadcasts multiple or dual audio languages, you can select the preferred audio language.

1. While you watch TV, press  **OPTIONS**.
2. Select **[Audio language]** for digital channels or **[Dual I-II]** for analogue channels, then press **OK**.
3. Select from the available languages, then press **OK**.

Subtitles on analogue channels

1. While you watch an analogue TV channel, press **TEXT**.
2. Enter the three-digit page number of the subtitles page (usually '888').
If available, subtitles are switched on.
3. Press  to exit text.

Subtitles on digital channels

1. While you watch a digital TV channel, press  **OPTIONS**.
2. Select **[Subtitles]**, then press **OK**.
3. Select **[Subtitles off]**, **[Subtitles on]** or **[On during mute]**, then press **OK**.
If you select **[On during mute]**, subtitles are displayed only when you press  to mute the sound.

Note: If an MHEG application is activated, subtitles are not displayed.

Subtitle language

For certain digital channels, you can change the subtitle language.

1. While you watch TV, press **⏠**.
2. Select **[Setup]** > **[Channel settings]** > **[Language]**.
3. Select **[Primary subtitle language]** or **[Secondary subtitle language]** for the preferred language.
4. Press **OK** to confirm.

Tip: Press **⏠** **OPTIONS** > **[Subtitle language]** to change the subtitle language for a specific channel.

Universal access settings

Switch on

Some digital TV broadcasters provide special audio and subtitle features for people who are hearing or visually impaired. You can switch these features on or off.

1. Press **⏠**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Universal access]** > **[On]** or **[Off]** then press **OK**.

Hearing impaired access

Tip: To make sure that a hearing impaired audio language is available, press **⏠** **OPTIONS**, then select **[Audio language]**. Languages with an ear icon support hearing impaired audio.

To switch on hearing impaired audio and subtitles

1. While you watch TV, press **⏠** **OPTIONS**.
2. Select **[Universal access]** > **[Hearing impaired]**.
3. Press a button to select an option:
 - **Red:** Switch off hearing impaired features.
 - **Green:** Switch on hearing impaired audio and subtitles.
4. Press **⏏** to exit.

Visually impaired access

Tip: To make sure that a visually impaired audio language is available, press **⏠** **OPTIONS**, then select **[Audio language]**. Languages with an eye icon support visually impaired audio.

To switch on visually impaired audio

1. While you watch TV, press **⏠** **OPTIONS**.
2. Select **[Universal access]**.
3. Press the **Green button** to select **[Visually impaired]**.
4. Press a button to select an option:
 - **Red button - [Off]:** Switch off visually impaired audio.
 - **Green button - [On]:** Switch on visually impaired audio.
5. Press **⏏** to exit.

Note: If the EasyLink remote control is switched on, you cannot select the **Green button**. To switch off EasyLink, see **Use more of your TV > Use EasyLink > What you need** (Page 22).

Select audio from speakers or headphones

You can choose to hear the visually impaired audio through the TV speakers, headphones or both.

1. Press **⏠**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Speakers/ Headphones]**.
3. Select a setting, then press **OK**.
 - **[Speaker]:** Hear visually impaired audio from speakers only.
 - **[Headphone]:** Hear visually impaired audio from headphones only.
 - **[Speaker + headphone]:** Hear visually impaired audio from speakers as well as headphones.

Change volume for visually impaired audio

1. Press **⏠**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Mixed volume]**.
2. Press the **Navigation buttons** to change the volume, then press **OK**.
3. Press **⏏** to exit.

Audio feedback for the visually impaired

When you press a button on the remote control or TV, you can set the TV to play a beep.

1. In the **[Universal access]** menu, press the **Blue button** to select **[Key beep]**.
2. Press the **Green button** to turn on audio feedback or press the **Red button** to turn it off.
3. Press **↵** to exit.

Enable audio effects

1. Press **🏠**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Audio effects]**.
3. Select a setting, then press **OK**.
 - **[On]**: Enable audio effects in the visually impaired audio.
 - **[Off]**: Disable audio effects in the visually impaired audio.

Choose type of speech

1. Press **🏠**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Visually impaired]** > **[Speech]**.
3. Select a setting, then press **OK**.
 - **[Descriptive]**: Hear descriptive speech in the visually impaired audio.
 - **[Subtitles]**: Hear subtitles in the visually impaired audio.

Other settings

Location

To make sure that the correct TV settings are applied, you can select where the TV is used.

Shop or home mode

Select **[Home]** mode to access all TV settings. In **[Shop]** mode, you can access only limited settings.

1. While you watch TV, press **🏠**.
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Location]** > **[Home]** or **[Shop]**, then press **OK**.
4. Restart the TV.

Placement

- Before you position the TV, read all safety precautions. See **Get Started > Important > Safety** (Page 5).
- Position the TV where light does not shine directly on the screen.
- The ideal viewing distance of this TV is three times its diagonal screen size. For example, if the diagonal screen size of the TV is 81 cm / 32", the ideal viewing distance is ~2.5 m / ~92" from the front of the screen.
- While seated, your eyes should be level with the centre of the screen.

Stand mount or wall mount

You can apply the best settings for your TV by selecting wall mount or stand mount.

1. In the **[Preferences]** menu, select **[TV position]**.
2. Select **[On a TV stand]** or **[Wall mounted]**, then press **OK**.

Update software

Check version

1. Press **🏠**.
2. Select **[Setup]** > **[Software settings]** > **[Current software inf]**, then press **OK**.

The version of the current software is displayed.

Caution: Do not install a lower version of software than the current version installed on your product. TP Vision cannot be held liable or be made responsible for problems caused by a software downgrade.

Update the software through one of these methods:

- update with USB storage device
- update from digital broadcast

Update with USB

Before you update the software, make sure that you have:

- A USB storage device that has at least 256 megabytes of storage space, is FAT or DOS formatted and has its write protection disabled.
- Access to a computer with a USB connector and Internet access.

Note: Do not use a USB hard drive.

1. Connect a USB storage device.
2. Press **⏠**.
3. Select **[Setup] > [Update software]**, then press **OK**.

The update assistant starts.

4. Follow the onscreen instructions to start the update.

Note: The update assistant directs you to the Philips support website. See the installation instructions on the website to complete the update.

Update from digital broadcast

When available, the TV can receive software updates through digital broadcasts. When a software update is received, you are prompted to update the software. We strongly recommend that you update the software when prompted.

Follow the onscreen instructions.

Note: To update the software later, select **⏠ > [Setup] > [Software settings] > [Local updates]**.

Select the file that you downloaded and follow the onscreen instructions to complete the update.

Restore default settings

You can reset all picture and sound settings and reinstall all TV channels on your TV.

1. Press **⏠**.
2. Select **[Setup] > [TV settings] > [Reinstall TV]**, then press **OK**.
3. Follow the onscreen instructions.

5 Connect your TV

About cables

Cable quality

Overview

Before you connect devices to the TV, check the available connectors on the device. Connect the device to the TV with the highest quality connection available. Good quality connectors transfer picture and sound better.

The connections shown in this user manual are recommendations only. Other solutions are possible.


 
Tip: If your device only has composite or RCA connectors, use a SCART-cinch adapter to connect the device to a SCART connector on the TV.

HDMI

An HDMI connection has the best picture and sound quality.

- An HDMI cable combines video and audio signals. Connect HDMI for high-definition (HD) TV signals and to switch on EasyLink.
- An HDMI Audio Return Channel (ARC) connector allows output of TV audio to an HDMI ARC compliant device.


- Connect HDMI cables shorter than 5 meters/16.4 feet.

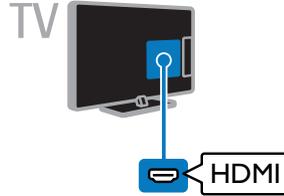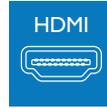

Y Pb Pr

Component video (Y Pb Pr) only transmits video. For sound, also connect to Audio Left/Right.

- The Y Pb Pr connection can handle high-definition (HD) TV signals.
- Match the Y Pb Pr connector colours to the cable plugs.

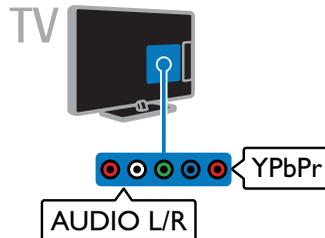


SCART

A SCART connection combines video and audio signals.

SCART connectors can handle RGB video signals but cannot handle high-definition (HD) TV signals.



TV

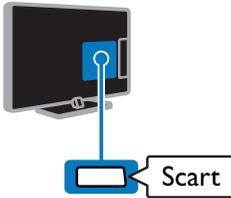


VGA

You can connect VGA to display PC content on the TV.

VGA only transmits video. For sound, also connect to AUDIO IN.



TV

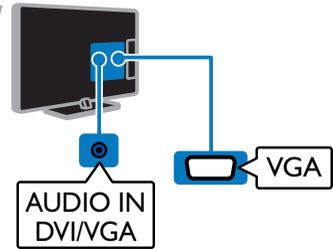


CVBS

CVBS only transmits video. For sound, also connect to Audio Left/Right.

- CVBS connections provide standard picture quality.
- On certain models, the video input socket on your TV is labelled as VIDEO, AV IN or COMPOSITE.



TV

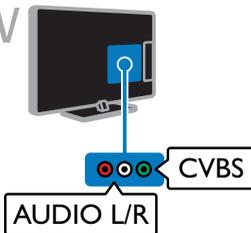


Connect devices

Blu-ray or DVD disc player


Connect the disc player to the TV with an HDMI cable.



Connect the disc player to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

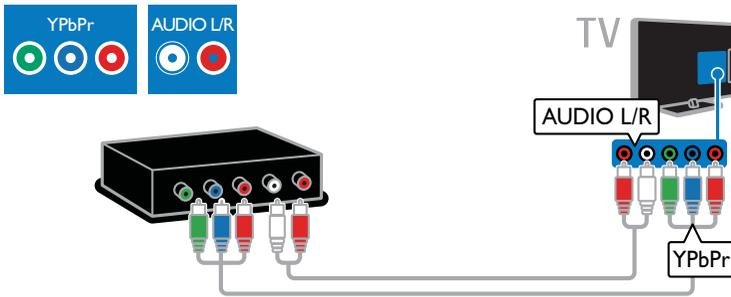

Connect the disc player to the TV with a composite cable (CVBS) and an audio L/R cable.

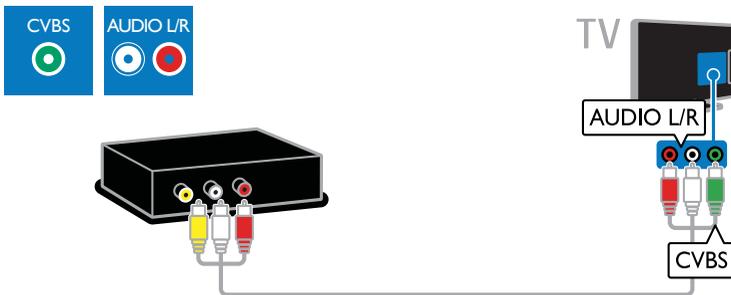

TV receiver

Connect the digital TV receiver with an antenna cable to the TV.




Connect the digital TV receiver to the TV with an HDMI cable.



Connect the digital TV receiver to the TV with a SCART cable.



Connect the digital TV receiver to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

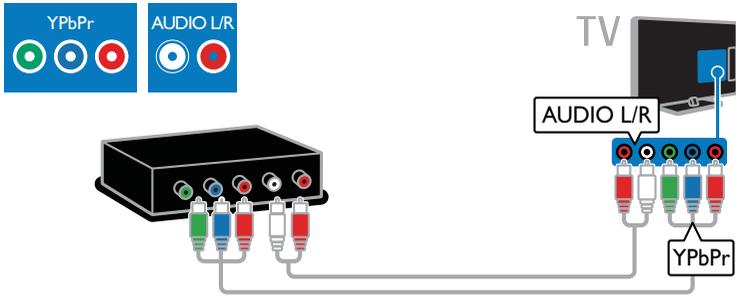

Connect the digital TV receiver to the TV with a composite cable (CVBS) and an audio L/R cable.




Video recorder


Connect the recorder to the TV with an antenna cable.




Connect the recorder to the TV with a SCART cable.

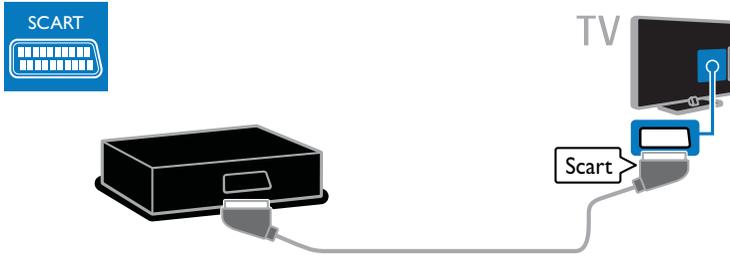

Connect the recorder to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

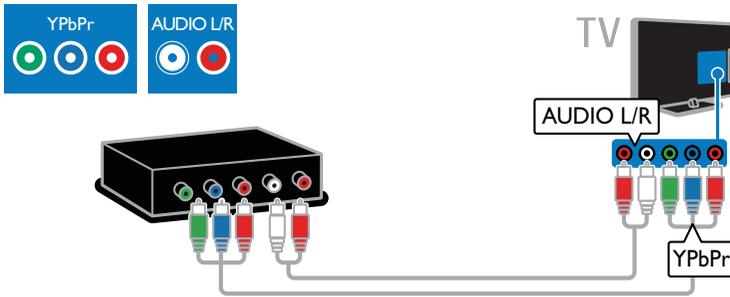

Connect the recorder to the TV with a composite cable (CVBS) and an audio L/R cable.

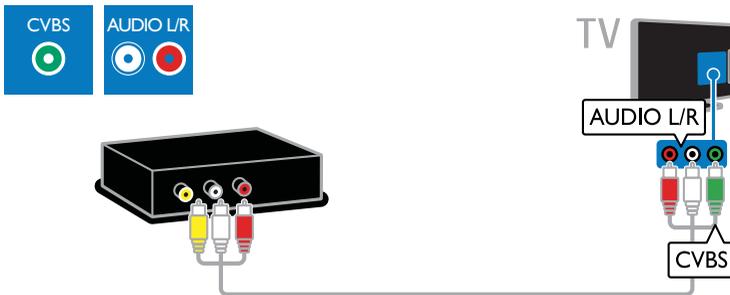


Game console


Connect the game console to the TV with an HDMI cable.



Connect the game console to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

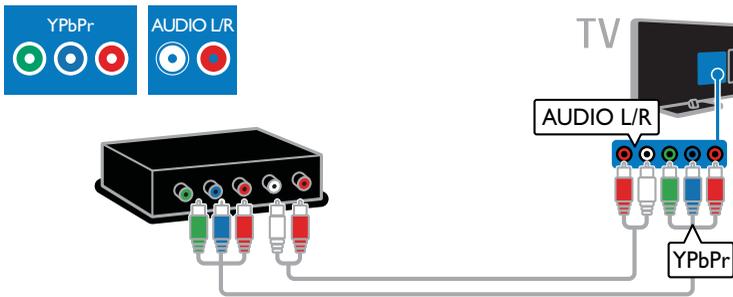


Connect the game console to the TV with a composite cable (CVBS) and an audio L/R cable.

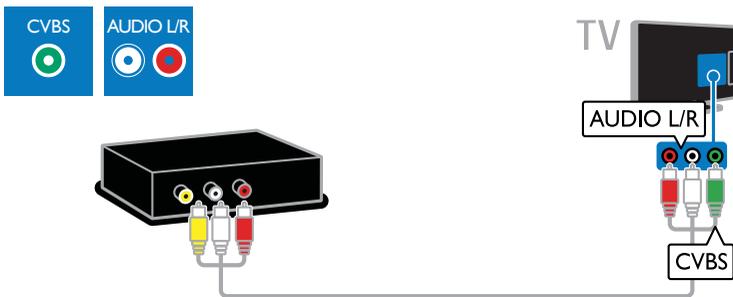


Home theatre


Connect the home theatre to the TV with an HDMI cable and an optical audio cable.

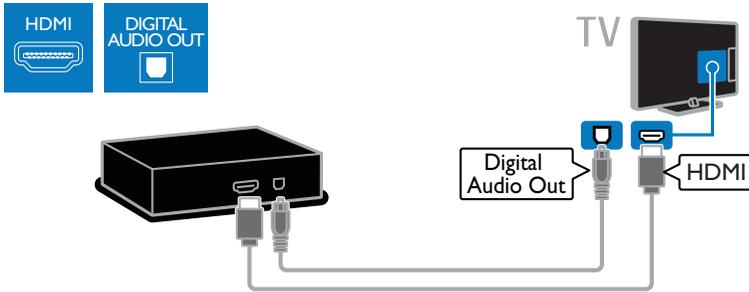

Connect the home theatre to the TV with a SCART cable.

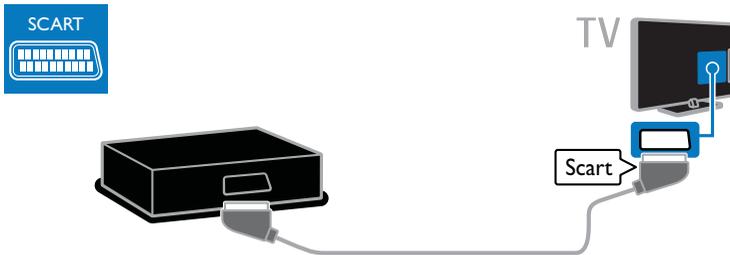

Connect the home theatre to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

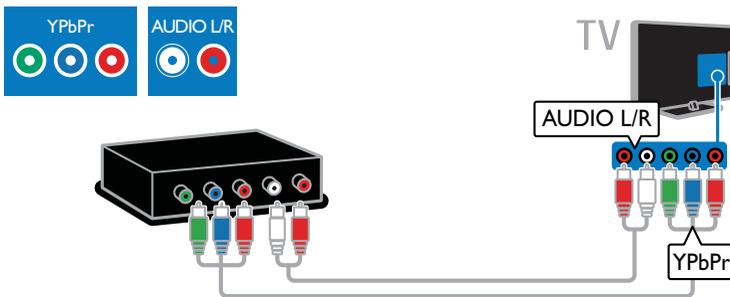

Connect the home theatre to the TV with a composite cable (CVBS) and an audio L/R cable.




Digital camera

Connect the digital camera to the TV with a USB cable. (For certain camera models only)




Digital camcorder


Connect the digital camcorder to the TV with an HDMI cable.

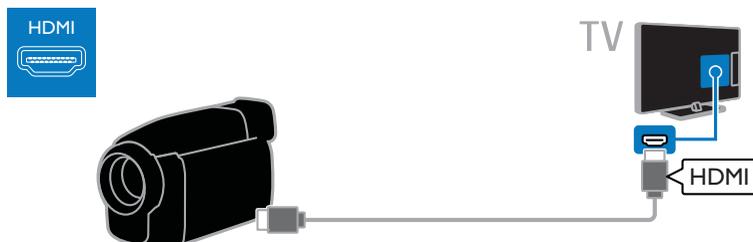

Connect the digital camcorder to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

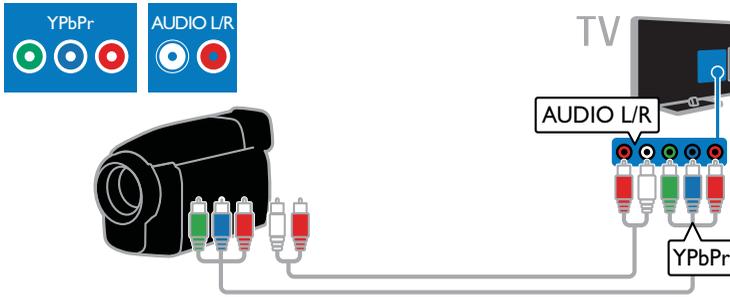

Connect the digital camcorder to the TV with a composite cable (CVBS) and an audio L/R cable.

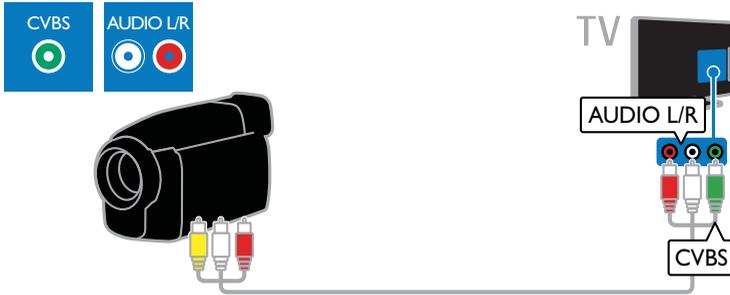

Connect more devices


USB hard drive

Connect the USB hard drive to the TV with a USB cable.




Computer


Connect the computer to the TV with an HDMI cable.

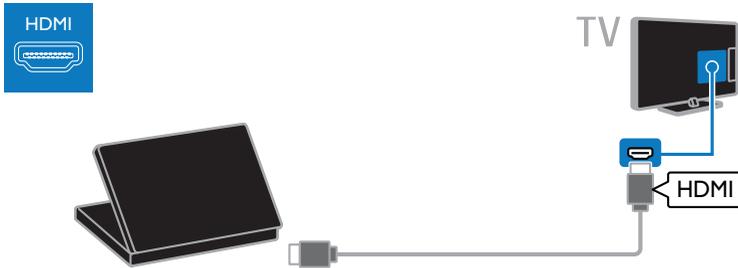

Connect the computer to the TV with a DVI-HDMI cable and an audio cable.

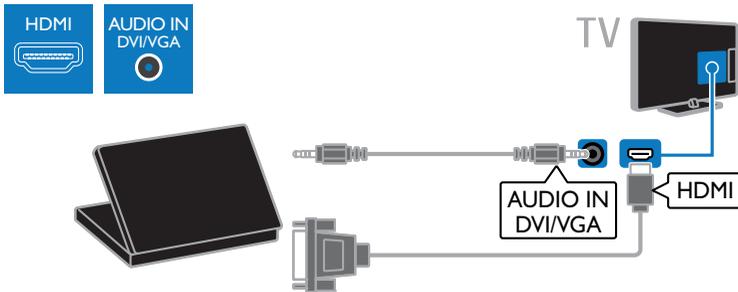

Connect the computer to the TV with a VGA cable and an audio cable.

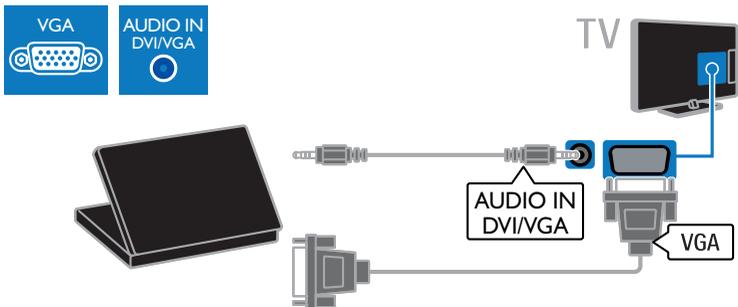


Set-top box

Connect the set-top box to the TV with a RJ-48 cable. (DATA connector is only available on certain models)



External speakers

Connect the 2W external speakers (sold separately) to the 8 ohm AUDIO OUT connector on the TV with an audio cable. (8 ohm AUDIO OUT connector is available on certain models only)

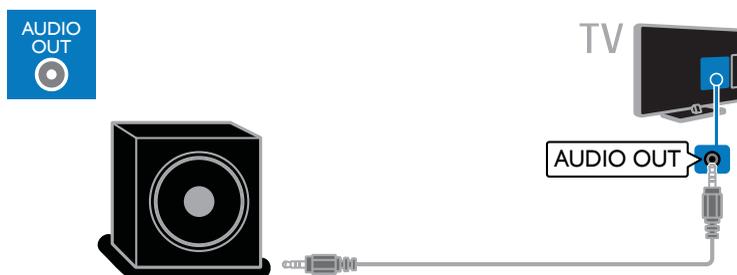

Watch a connected device

Add new device

Before you can watch a connected device,

- Add its icon to the Home menu for easy access. See **Connect your TV > Connect device** (Page 34).
- Select from the Source menu.

Note: If you connect an HDMI-CEC compliant device to the TV through the HDMI connector and switch it on, the device will be automatically added to the Home menu.

1. Connect and switch on the device.
2. Press **HOME**.
3. Select **[Add new device]**, then press **OK**.
4. Follow the onscreen instructions.
 - If you are prompted to select the TV connection, select the connector that this device uses.

Rename device

After you have added a new device to the Home menu, you can rename it.

1. Press **HOME**.
2. Select the device icon from the Home menu.
3. Press **OPTION**.

4. Select **[Rename]**, then press **OK**.
A text input box appears.
5. Press the **Numeric buttons** and the **Navigation buttons** to select and enter the name.
6. When complete, select **[Done]**, then press **OK**.

Select a source

From Home menu

After you have added the new device to the Home menu, you can select the new device icon to view its contents.

1. Press **⬆**.
2. Select the device icon from the Home menu.
3. Press **OK** to confirm.

From Source menu

You can also press **☰ SOURCE** to display a list of connector names. Select the connector that connects the device to the TV.

1. Press **☰ SOURCE**.
2. Press the **Navigation buttons** to select a connector in the list.
3. Press **OK** to confirm.

Remove device

If the device is no longer connected to the TV, you can remove it from the Home menu.

1. Press **⬆**.
2. Select the device icon from the Home menu.
3. Press **☰ OPTIONS**.
4. Select **[Remove device]**, then press **OK**.
5. Select **[Remove]**, then press **OK**.

The selected device is removed from the Home menu.

Common interface

What you can do

You can watch scrambled digital TV channels with a Conditional Access Module (CAM). After the CAM is inserted and subscription fees are paid, you can watch the programme.


This TV supports CI as well as CI+. CI+ supports premium HD digital programmes with a high level of copy protection.

Note: The applications, functions, content and onscreen messages depend on the CAM service provider.

What you need

Caution: To protect the CAM from damage, insert the CAM as instructed.

Note: Refer to the documentation from your service operator on how to insert a smart card into the Conditional Access Module.

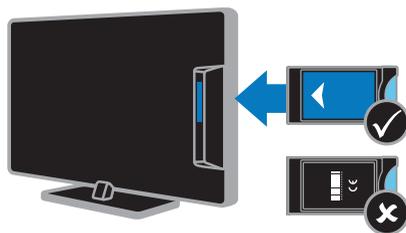

1. Switch off the TV.
2. Follow the directions printed on the CAM to insert the CAM into the Common Interface slot at the side of the TV. Push the CAM in as far as it will go.
3. Switch on the TV, then wait for the CAM to be activated. This takes a few minutes. To maintain access to encrypted digital TV channels, leave the CAM in the slot.

Watch CAM services

1. After you insert and activate the CAM, press **☰ OPTIONS**.
2. Select **[Common interface]**, then press **OK**.
3. Select the CAM provider, then press **OK**.

6 Troubleshooting

General issues

The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Make sure that the power cable is securely connected.

The TV does not respond to remote control or front controls when switched on:

The TV requires some time to start up. During this time, the TV does not respond to the remote control or front controls. This is normal behaviour.

When you are turning the TV on, off or to standby, you hear a creaking sound from the TV chassis:

No action is required. The creaking sound is due to the normal expansion and contraction of the TV as it cools and warms up. This does not affect performance.

When the TV is in standby, a startup splash screen is displayed, then returns to standby mode:

This is normal behaviour. When the TV is disconnected and reconnected to the power supply, the startup screen is displayed at the next startup.

To switch on the TV from standby, press  on the remote control or press any key on the TV.

The standby light on the TV blinks red:

Disconnect the power cable from the power outlet. Wait until the TV cools down before you reconnect the power cable. If the blinking reoccurs, contact Philips Consumer Care.

You forgot the 4-digit code to unlock the channel blocking feature (child lock):

Enter '8888'.

The TV menu is in the wrong language:

Change the menu to your preferred language.

For more information, see **Set up your TV > Language settings > Menu language** (Page 28).

Subtitles are not visible when you play a movie file from a USB storage device:

Subtitle files that are not hard-coded into a video file (for example, *.srt, *.sub, *.idx) are not supported.

You want to upgrade your TV software:

Visit www.philips.com/support and download the latest software package for your TV. Software installation instructions and release notes indicating what's been updated are also available at the site. Full instructions on how to upgrade your TV software are also available at **Set up your TV > Update software**.

Channel issues

You want to install TV channels

See **Set up your TV > Channel settings** (Page 26) for instructions on installing analogue or digital channels.

No digital channels were found during the installation:

See the technical specifications to make sure that your TV supports DVB-T or DVB-C in your country.

- Make sure that all cables are properly connected and that the correct network is selected.

Previously installed channels do not appear in the channel list:

Make sure that the correct channel list is selected.

You want to rearrange or reorder the channel list:

After channels have been installed, they appear in the channel list. For information about managing channel lists, including rearranging channels, see **Use your TV > Watch TV > Manage channel lists** (Page 11).

Picture issues

The TV is on, but there is no picture or the picture is distorted:

- Make sure that the antenna is properly connected to the TV.
- Make sure that the correct device is selected as the display source.
- Make sure that the external device or source is properly connected.

There is sound but no picture:

Make sure that the picture settings are set correctly.

There is poor TV reception from an antenna connection:

- Make sure that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine-tune this channel.

There is poor picture quality from connected devices:

- Make sure that the devices are connected properly.
- Make sure that the picture settings are set correctly.

The TV did not save your picture settings:

Make sure that the TV location is set to **Home**. You can change and save settings in this mode.

The picture does not fit the screen; it is too big or too small:

Change the picture format.

The picture format keeps changing with different channels:

Instead of the picture format **[Auto zoom]**, select a different picture format.

The picture position is incorrect:

Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

The picture from broadcasts is scrambled:

You may need a Conditional Access Module to access content. Check with your service operator.

An "e-sticker" banner displaying information appears on the TV display:

The TV is in **[Shop]** mode. To remove the e-sticker, set the TV to **[Home]** mode, then restart the TV. See **Set up your TV > Other settings > Location** (Page 30).

The computer display on the TV is not stable:

- Make sure that your PC uses the supported resolution and refresh rate. See **Product specifications > Display resolutions** (Page 48).
- Change the TV picture format to **[Unscaled]**.

Sound issues

There is a picture but sound quality is poor:

If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Make sure that all cables are properly connected.
- Make sure that the volume is not muted or set to zero.
- Make sure that the TV speaker setting is selected. Press **⏏ ADJUST**, select **[Speakers]**, and then select **TV**.
- Make sure that the TV audio output is connected to the audio input on the HDMI-CEC enabled or EasyLink compliant home theatre device. Sound should be heard from the home theatre speakers.

- Some devices may require you to manually enable HDMI audio output. If HDMI audio is already enabled but you still cannot hear audio, try changing the digital audio format of the device to PCM ('Pulse Code Modulation'). Refer to the documentation accompanying your device for instructions.

There is a picture but the sound quality is poor:

Make sure that the sound settings are correctly set.

There is a picture but sound comes from one speaker only:

Make sure that sound balance is set to the centre.

Connection issues

There are problems with HDMI devices:

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from an HDMI device.
- If the TV does not recognise the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.
- If you use an HDMI-to-DVI adapter or HDMI to DVI cable, make sure that an additional audio cable is connected to AUDIO L/R or AUDIO IN (mini-jack only).

You cannot use EasyLink features:

Make sure that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

If an HDMI-CEC compliant audio device is connected to the TV and the TV does not display any mute or volume icon when the volume is muted, increased or decreased:

When a HDMI-CEC audio device is connected this behaviour is normal.

USB device content is not displayed:

- Make sure that the USB storage device is set to **Mass Storage Class** compliant, as described in the storage device's documentation.
- Make sure that the USB storage device is compatible with the TV.
- Make sure that the audio and picture file formats are supported by the TV.

Audio and picture files on your USB storage device do not play or display smoothly:

The transfer performance of the USB storage device may limit the data transfer rate to the TV which causes poor playback.

Contact Philips

Warning: Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

If you are not able to resolve your problem, refer to the frequently asked questions (FAQs) for this TV at www.philips.com/support. You can also consult and contribute to the Philips TV community at www.supportforum.philips.com.

If you wish to speak to or email a Philips representative, contact the Philips Consumer Care in your country. You can find the contact details in the leaflet accompanying this TV or at www.philips.com/support.

Note your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

7 Product specifications

Power and reception

Product specifications are subject to change without notice.

Power

- Mains power : AC 220-240 V~, 50-60 Hz
- Standby power consumption : < 0.3 W
- Ambient temperature: 5 to 40 degrees Celsius
- For power consumption, see the product specifications at www.philips.com/support.

The power rating stated on the product typeplate is the power consumption for this product during normal household use (IEC 62087 Ed.2). The maximum power rating, stated between brackets, is used for electrical safety (IEC 60065 Ed. 7.2).

Reception

- Antenna input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8 K
- Video playback: NTSC, PAL, SECAM
- Digital TV: MPEG-4, DVB-T (Terrestrial), DVB-C (Cable).
- Tuner bands: VHF, UHF, S-Channel, Hyperband

* Available on certain models only.

Display and sound

Picture/Display

- Display type: edge LCD/LED backlight
Diagonal size:
 - 48 cm / 19 inch
 - 56 cm / 22 inch
 - 66 cm / 26 inch
 - 81 cm/32 inch
 - 107 cm/42 inch

- Aspect ratio: 16:9 (widescreen)
- Panel resolution:
 - For HD models: 1366 X 768 p
 - For FHD models: 1920 X 1080 p
- Digital Crystal Clear
- Perfect Motion Rate (PMR):100 Hz

Sound

- Output power (RMS):
 - For 19": 6 W
 - For 22HFL3017: 10 W
 - For 22HFL3007: 6 W
 - For 26": 10 W
 - For 32" to 42": 20 W
- Incredible Surround
- Clear Sound
- Mono / Stereo / NICAM

Display resolutions

Computer formats - HDMI (Resolution - refresh rate)

640 × 480 - 60 Hz
800 × 600 - 60 Hz
1024 × 768 - 60 Hz
1280 × 720 - 60 Hz
1280 × 768 - 60 Hz
1280 × 1024 - 60 Hz
1360 × 768 - 60 Hz

For Full HD TV only:
1680 × 1050 - 60 Hz
1920 × 1080 - 60 Hz

Computer formats - VGA (Resolution - refresh rate)

640 × 480 - 60 Hz
800 × 600 - 60 Hz
1024 × 768 - 60 Hz
1280 × 1024 - 60 Hz
1360 × 768 - 60 Hz

For Full HD TV only:
1920 × 1080 - 60 Hz

Video formats (Resolution - refresh rate)

480i - 60 Hz
 480p - 60 Hz
 576i - 50 Hz
 576p - 50 Hz
 720p - 50Hz, 60 Hz
 1080i - 50Hz, 60 Hz
 1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60 Hz

Multimedia

Supported multimedia connections

- USB: Connect only USB devices which consume 500mA of power or less.
 - NTFS, FAT 16 (Read only)
 - FAT 32
- Ethernet LAN RJ-48

Supported image files

- JPEG (*.jpg)
-

Supported audio/video files

Multimedia file names must not exceed 128 characters.

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.mpg .mpeg .vob	PS	MPEG1	768x576	30	1.8 Mbps	MP1 Layer1/2, MP3, AC3, DVD LPCM	YES
		MPEG2 MP@HL	1920x1080	30	40 Mbps		YES
.ts	TS	MPEG2 MP@HL	1920x1080	30	40 Mbps	MPEG1 Layer1/2, AC3	YES
		VC-1	1920x1080	30	40 Mbps	MPEG2 AAC-LC, MPEG4 AAC-LC/ HE-AAC, AC3	YES
		H.264 BP/MP/HP LV 4.0	1920x1080	30	40 Mbps		YES
		H.264 BP/MP/HP LV 4.0	1920x1080	30	40 Mbps		YES
.mp4 (.mov and .3gp extensions are not supported)	MP4	MPEG4 SP@L 3.0/ ASP@HL 4.0	1920x1080	30	40 Mbps	MPEG1 Layer1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/HE-AAC	YES
		H.263	1408x1152	30	40 Mbps		YES
		Motion JPEG (*mov only)	1280x720	30	30 Mbps		YES
		H.264 BP/MP/HP LV 4.0	1920x1080	30	40 Mbps		YES
.mkv	MKV	MPEG4 SP@L 3.0/ ASP@HL 4.0	1920x1080	30	40 Mbps	wav/PCM/ADPCM/A-law PCM/u-law PCM, MPEG1 Layer1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/HE-AAC, AC3, VMAv8	YES
		WMV9	1920x1080	30	40 Mbps		YES
		VC-1	1920x1080	30	40 Mbps		YES
		H.264 BP/MP/HP LV 4.0	1920x1080	30	40 Mbps		YES

Supported audio/video files

Multimedia file names must not exceed 128 characters.

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.mp4 .avi	AVI	XviD	1920x1080	30	40 Mbps	wav/PCM/ADPCM/A-law PCM/u-law PCM, MPEG1 Layer 1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/HE-AAC, AC3, VMAv8	YES
		MPEG1	768x576	30	1.8 Mbps		YES
		MPEG2 MP@HL	1920x1080	30	40 Mbps		YES
		H.264 BP/MP/HP LV 4.0	1920x1080	30	40 Mbps		YES
		MPEG4 SP@L 3.0/ ASP@HL 4.0	1920x1080	30	40 Mbps		YES
		Motion JPEG	1280x720	30	30 Mbps		YES
.flv	FLV	Sorenson	352x288	30	40 Mbps	MPEG1 Layer1/2, MP3, MPEG2 AAC-LC, MPEG4 AAC-LC/HE-AAC	YES
		H.264 BP/MP/HP LV 4.0	1920x1080	30	40 Mbps		YES
.mp3	MP3	NA	NA	NA	32,40/48/56/64/80/96/ 112/128/160/192/224/ 256/320 kbit/s	MP3	YES
.wav	MKV	NA	NA	NA	16bit PCM(big/little endian) 24bit PCM(big endian)	PCM/ADPCM/A-law PCM/ u-law PCM	YES
.aac .mp4 .m4a	AAC	NA	NA	NA	16-576 kbit/s	ACC-LC/HE-AAC	YES

Connectivity

Rear

- AUDIO OUT: 8 ohm Audio Out*
- DATA: Communication*
- Service port: SERV.U
- VGA: PC input
- AUDIO IN: DVI/VGA (stereo 3.5mm mini-jack)
- Composite and Audio: CVBS/Y, Audio L/R
- Component and Audio: CVBS/Y Pb Pr, Audio L/R
- DIGITAL AUDIO OUT: Cinch
- SCART: SCART (RGB/CVBS)
- HDMI 1 / 2
- Antenna: 75 ohm coaxial

*Available on certain models only.

Side

- Common Interface: CI
- USB
- Headphones: stereo 3.5mm mini-jack
- HDMI

HDMI features

- Audio Return Channel (HDMI 1 only)

Supported TV mounts

You can mount your TV on the wall with a compatible TV mount (sold separately)*. Select the type of TV mount for your TV screen size:

48 cm / 19 inches: 75 mm x 75 mm, M4

56 cm / 22 inches: 75mm x 75mm, M4

66 cm / 26 inches:

- For HFL3007D: 100mm x 100mm, M4

- For HFL3017D, HFL3017W: 100mm x 100mm, M4

81 cm / 32 inches:

- For HFL3017D: 200mm x 200mm, M6

- For HFL3016D and HFL3007D: 200mm x 100mm, M4

You can mount your TV on the wall with a compatible TV mount (sold separately). Select the type of TV mount for your TV screen size:

107 cm / 42 inches:

- For HFL3016D and HFL3007D: 400mm x 400mm, M6

- For HFL3017D: 400mm x 400mm, M6


Warning: Follow all instructions provided with the TV mount. TP Vision Netherlands B.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

To prevent damage to cables and connectors, leave a gap of at least 5.5 cm / 2.2 inches from the back of the TV.

For HFL3007D - 22 inch TVs:

Before you mount the TV on the wall, find the correct length of the screw.


To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

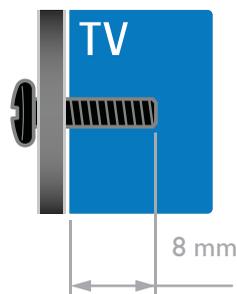

For HFL30x7D, HFL3017W - 19 to 26 inch TVs:

Before you mount the TV on the wall, find the correct length of the screw.


To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

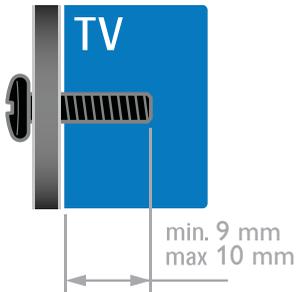

For 32HFL3017D and 26HFL3007D:

Before you mount the TV on the wall, find the correct length of the screw.


To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

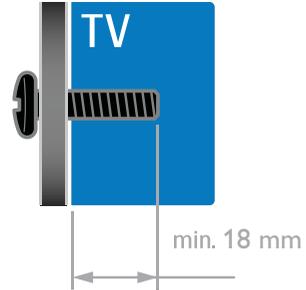

For HFL3007D - 32 to 42 inch TVs: For HFL3016D - 32 inch TVs:

Before you mount the TV on the wall, find the correct length of the screw.


To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

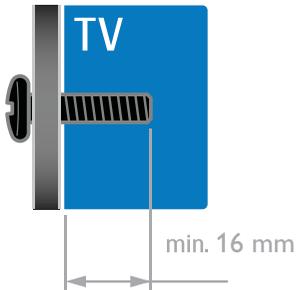

For HFL3017D - 42 inch TVs:

Before you mount the TV on the wall, find the correct length of the screw.

To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

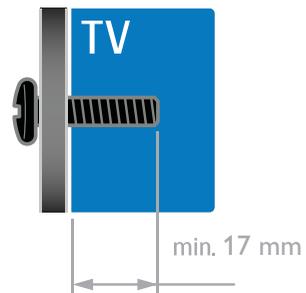

Help version

UMv 123017102321 - 20120720

8 Index

A

- age rating - 21
- amplifier, select output - 23
- analogue channels, fine-tune - 27
- analogue channels, subtitles - 28
- audio language - 28
- audio sync - 23

C

- CAM, enable - 44
- CAM, insert - 44
- CAM, see Conditional Access Module - 44
- channel list - 11
- channels - 10
- channels, favourites - 11
- channels, fine-tune (analogue) - 27
- channels, install (automatic) - 26
- channels, install (digital) - 27
- channels, install (manual) - 27
- channels, reinstall - 31
- channels, rename - 11
- channels, reorder - 11
- channels, switch - 10
- channels, update - 28
- child lock - 21
- clock - 20
- common interface - 44
- Conditional Access Module - 44
- connect devices - 32
- connect, digital camcorder - 40
- connect, digital camera - 40
- connect, disc player - 34
- connect, external hard disk - 41
- connect, game console - 38
- connect, home theatre system - 39

- connect, PC - 42
- connect, recorder - 36
- connect, set-top box - 43
- connect, speaker - 43
- connect, TV receiver - 35
- connect, USB - 13
- connected device, add - 43
- connected device, remove - 44
- connected device, rename - 43
- connectors - 32
- contact information, on Internet - 9
- contact Philips - 9
- controls - 3

D

- devices - 34
- devices, add - 43
- devices, watch - 44
- digital camcorder - 40
- digital camera - 40
- digital channels - 27
- digital channels, subtitles - 28
- digital radio - 11
- disc player, connect - 34
- display - 48
- display resolution - 48

E

- EasyLink - 21
- EasyLink, controls - 22
- EasyLink, enable - 22
- EasyLink, features - 21
- EasyLink, onscreen control - 5
- EasyLink, remote control buttons - 22
- EasyLink, TV speakers - 23
- end of use - 8
- energy efficient, settings - 8

Energy label - 9

EPG, Electronic Programme Guide - 3

external hard disk - 41

F

favourite channels, list - 11

G

game console - 38

games - 19

H

HDMI - 32

HDMI ARC - 32

hearing impaired - 29

Help, version - 51

high-definition (HD), content - 3

home mode - 30

home theatre system, connect - 39

hotel information - 15

I

install channels, automatic - 26

L

language, menu - 28

language, subtitles - 29

location, home or shop - 30

M

mode, home or shop - 30

multimedia, play files - 13

multimedia, supported formats - 49

MyChoice - 18

P

parental rating - 21

PC, connect - 42

PC, display resolutions - 48

picture format - 12

picture settings - 25

picture settings, reset - 26

Pixel Plus link - 23

placement, stand or wall mount - 30

position - 30

power - 48

product support - 9

professional mode - 15

R

rear controls - 3

recorder, connect - 36

recycle - 8

reinstall - 31

remote control - 4

remove, connected device - 44

rename channels - 11

rename, connected device - 43

S

safety - 5

SCART - 33

Scenea, enable - 24

Scenea, load wallpaper - 24

screen care - 7

screen saver - 24

sensors - 4

settings, assistant - 25

settings, audio format - 26

settings, game - 19

settings, picture - 25

settings, sound - 25

shop mode - 30

sleeptimer - 21

smart settings - 12

software, check version - 30

software, digital update - 31
software, USB - 31
sound settings, reset - 26
standby - 10
subtitles, analog - 28
subtitles, digital - 28
subtitles, language - 29
sustainability - 8
switch on, professional mode - 15
switch TV on, off - 10

T

text 2.5 - 20
text, digital text - 20
text, dual screen - 19
text, enlarge - 19
text, language - 20
text, subpages - 20
text, Table Of Pages - 19
ThemeTV - 18
trademarks and copyrights - 8
TV receiver, connect - 35
TV speakers, mute - 10

U

universal access, enable - 29
universal access, hearing impaired - 29
universal access, visually impaired - 29

V

VGA - 33
visually impaired - 29
volume - 10

W

wall mount - 50
wallpaper - 24

Y

YPbPr, component video - 32



© 2012 TP Vision Netherlands B.V.
All rights reserved.
Document order number 123017102321