

 
PHILIPS
NORELCO

SMARTTOUCH-XL
with Jet Clean System



9170XLCC

Rechargeable Tripleheader®
Cordless/Cord Razor



9170XLCC

ENGLISH 4

ESPAÑOL 38

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded razor/Jet Clean System that has fallen into water. Unplug immediately.
2. Use razor only in dry condition. Do not use a razor/Jet Clean System while bathing or in a shower.
3. Do not submerge razor in water.
4. Do not place or store a razor or Jet Clean System where it can fall or be pulled into a tub or sink. Do not place or drop a razor or Jet Clean System into water or other liquid.
5. Always unplug this razor/Jet Clean System from the electrical outlet immediately after use, except when razor is (re)charging.
6. Unplug and remove power supply cord from razor before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this razor/Jet Clean System is used by, on, or near children or invalids.
2. Use this razor/Jet Clean System for its intended household use as described in this manual. Do not use attachments or a cleaning solution not recommended by Philips Electronics North America Corporation.
3. Never operate this razor/Jet Clean System if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. Return the razor/Jet Clean System to the Philips Norelco Service Location for examination and repair.

4. Keep the razor, Jet Clean System, cord and charging plug away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not clean, charge or plug in razor/Jet Clean System outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this razor with a damaged or broken comb, as facial injury may occur.
8. Always attach plug to razor/Jet Clean System first, then to outlet. Be certain that plug is inserted firmly into razor/Jet Clean System, up to mark indicated on plug. For Jet Clean System use, always put razor in first, attach cord to Jet Clean System, then plug into outlet. To disconnect, turn razor/Jet Clean System off then remove charging plug from outlet.
9. Never put the razor/Jet Clean System in direct sunlight or store at a temperature above 140°F.
10. Razor can be rinsed under running tap water. Do not charge or operate razor corded until fully dried.
11. Keep the Jet Clean System and cord dry at all times. Do not charge or handle with wet hands. Do not store in a damp environment.
12. To prevent possible damage to the cord, do not wrap cord around the razor or Jet Clean System.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.

CAUTION: Keep cleaning solution out of reach of children. Do not take internally. Avoid contact with eyes. In case of eye contact, thoroughly flush with cold water. If irritation persists, get medical attention.



60 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Philips Norelco Men's Razor, the razor should be used exclusively for 3 weeks. This allows your hair and skin enough time to adapt to the Philips Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Philips Norelco Men's Razor, send the product back and we'll refund you the full purchase price. **The razor must be shipped prepaid by insured mail, insurance prepaid, and have the sales slip, indicating purchase price and the date of purchase, enclosed.** The razor must be postmarked no later than 60 days after the date of purchase. Philips Norelco reserves the right to verify the purchase price of the razor and limit refunds not to exceed suggested retail price.

Send dated sales slip, your complete name and address as indicated below, and the razor, prepaid to:

Philips Domestic Appliances and Personal Care Company
A Division of Philips Electronics North America Corporation
 450 North Medinah Rd, Dock 16
 Roselle, IL 60172-2329

Please allow 4-6 weeks for delivery of check. (Please Print)

Name _____
 Address _____
 City _____
 State _____ Zip _____
 Daytime Telephone No. (____) _____
Area Code
 E-mail Address _____
 REASON FOR RETURNING: _____

Table of Contents

Features.....8-11
 Easy Read LCD Display12-15
 Charge Meter16
 Before First Use.....16
 Charging17-19
 Recharging.....20
 Quick Charge.....20
 Put It To The Test & Shaving Tips20-21
 Personal Comfort Control21
 How To Shave With An
 Electric Razor22
 Trimming.....23
 Cleaning.....23-32
 Replacing the Razor Heads.....33
 Maintenance.....33
 Storage34-35
 Assistance.....35
 Accessories.....36
 Warranty.....37
 Spanish38

Features

SmartTouch Contour Following System

Personal Comfort Control Dial

Razor Head Assembly

Protective Razor Head Cap

Individually Floating Heads

Razor Head Release Button

- Hair Chamber captures shaven hair

Electronic ON/OFF Button



Travel Lock

Easy Read LCD Display

- Shows remaining power level in batteries or actual remaining shaving minutes

Automatic Cleaning Indicator

- Indicates razor heads should be cleaned

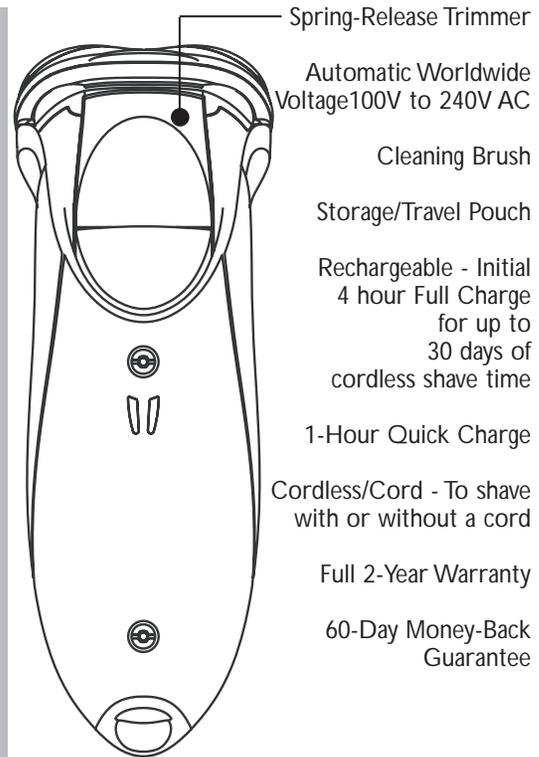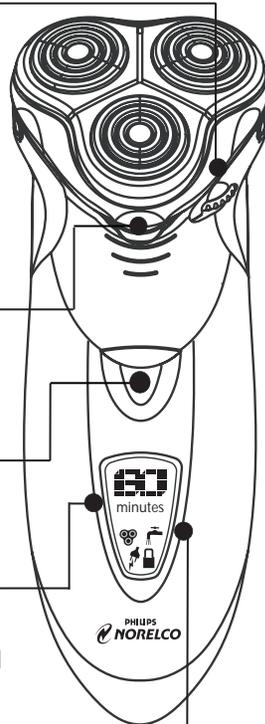

Spring-Release Trimmer

Automatic Worldwide Voltage 100V to 240V AC

Cleaning Brush

Storage/Travel Pouch

Rechargeable - Initial 4 hour Full Charge for up to 30 days of cordless shave time

1-Hour Quick Charge

Cordless/Cord - To shave with or without a cord

Full 2-Year Warranty

60-Day Money-Back Guarantee

How the Unique  Philips Norelco Lift and Cut® Shaving System Makes Close Comfortable:



Groove channels beard closer to cutting system



Lifter raises hair

Slots to cut long hairs


Holes to cut short hairs even closer



Features

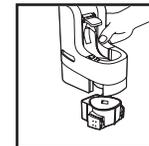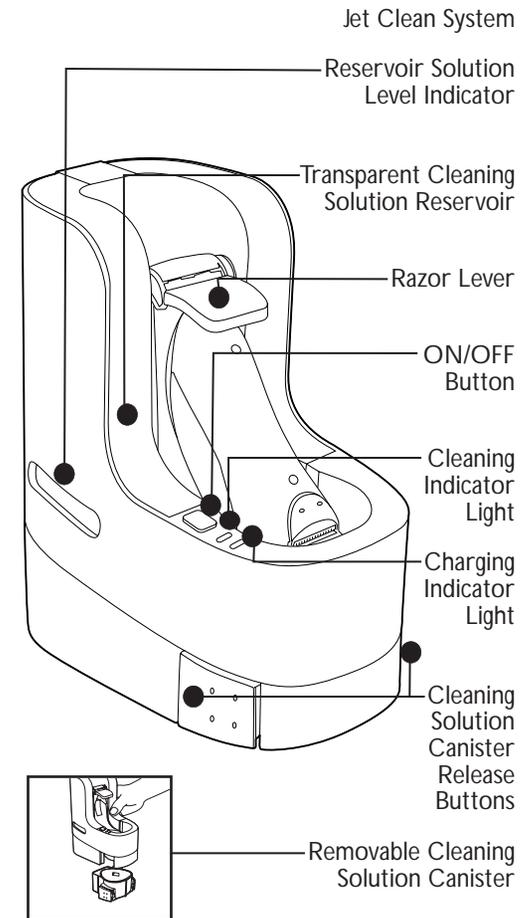


Easy Read LCD Display

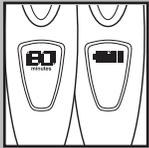

▶ LCD Display

Allows you to choose the display mode you personally prefer. There are two display modes to choose from: a numeric or battery symbol display.

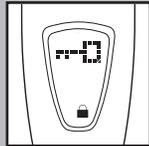


- 1** Press the ON/OFF button for about 3 seconds. A key symbol appears on the display.
- 2** To select one of the two modes, press the ON/OFF button briefly until the preferred mode appears and wait a few seconds.

▶ If you do not press the ON/OFF button, the travel lock stays activated. (see "Storage").

NOTE: For first time use of the razor, or after non-use for one month or more, it could take several minutes before the display appears!

The display provides the following information:


When you turn the razor ON or OFF the display will come on for approximately 10 seconds.

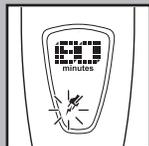

▶ Charging Indicator


-The Numeric Display:

As soon as you connect the charging plug to an electrical outlet, the display goes on. The minutes indication appears as well as the plug

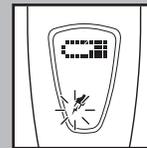


- The Battery Display:

As soon as you connect the charging plug to an electrical outlet, the display goes on. The battery indication appears as well as the plug symbol with a blinking power or "spark" symbol. The spark symbol starts blinking. The display shows an increase in blocks in the battery symbol.

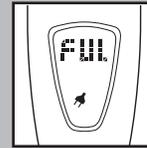

▶ Full Charge Indicator


When batteries have been fully charged, "FULL" scrolls across the display together with plug symbol. After a few hours the word "FULL" stops appearing and the display shows the remaining shaving time in minutes along with the plug symbol.

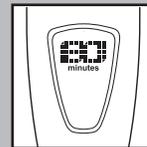

▶ Minutes Left Indicator

- The Numeric Display:

The number on the display shows remaining shaving time in minutes.

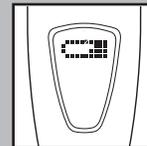

- The Battery Display:


The amount of filled in blocks in the battery symbol shows the remaining shaving time or battery power level.



► **Low Battery Indicator**


- **The Numeric Display:**

When the battery is running low, the plug symbol and the minutes indicator will blink after you have turned the razor OFF. If this occurs while shaving, you should have enough power to complete your shave. When you turn razor ON or OFF the display will come on for approximately 10 seconds.

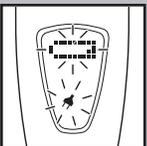

- **The Battery Display:**

When the battery is running low, the plug and battery symbols will blink after you turn razor OFF. When you turn razor OFF or ON the display will stay on for approximately 10 seconds.

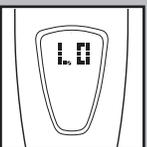

► **Battery Empty**

To indicate that the battery power is too low to operate the razor, 'Lo' appears on the display.


► **Demonstration Program**

The razor has a demonstration program that will run through the display of razor functions. During the demonstration the razor will automatically turn ON and OFF 2 times. To activate, press and hold the ON/OFF button for approximately 6 seconds. After 3 seconds the lock symbol appears; keep the ON/OFF button pressed. Then release the button and the razor will continue through the demonstration program. You can interrupt the demonstration by pressing the ON/OFF button again.



► **Cleaning Indicator**

The blinking faucet symbol will remind you that razor heads need to be cleaned. This happens after each shave.

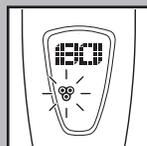

► **Replacement Head Indicator**

Every year, depending on your shaving behavior, after turning the razor OFF, the replacement head symbol indicator starts to blink. It will remain visible for the next 7 shaves to remind you that with new shaving heads you will guarantee yourself optimal shaving performance.

► You can reset the razor by pressing the ON/Off button for 3 seconds while the replacement head symbol is blinking. The symbol then disappears.

► If you do not reset the razor, after 7 shaves the razor will automatically reset itself.

NOTE: If the display shows the word 'CHECK' and a blinking replacement head symbol and faucet symbol, clean the razor thoroughly before you continue shaving (see 'cleaning'). After cleaning, if the word 'CHECK' and a blinking replacement head symbol and faucet symbol remain on the display, immediately replace the razor heads (see 'replace the razor heads').

Charge Meter

- ▶ Charge Meter monitors amount of remaining battery power and actual remaining shaving minutes available. 'Minutes Left' is based on the amount of power consumed shaving per minute and is dependent upon your skin and beard type, whether you use pre-shave lotion, and how often the trimmer is used.
- ▶ Initially your razor may need to go through 2 or 3 full charge/recharge cycles before "Minutes Left" indicator (numeric or battery) begins to display your accurate "Shaving Minutes Left."

Before First Use

- ▶ Charge the razor before you start using it (see 'Charging'). Make sure the razor is switched off before you start charging it.
- ▶ Remove any sticker or protective foil from the LCD Display before using razor.

Important

- ▶ Only use the power plug and/or Jet Clean System provided to charge the razor.
- ▶ The charging plug converts 100 – 240V AC to less than 24V DC.


Charging

- ▶ Battery performance is best if you recharge only when the batteries are (almost) completely empty.
- ▶ Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of batteries.
- ▶ Continuously recharging or continuously using as a corded razor will reduce life of batteries.
- ▶ You may also shave using the cord provided. This razor will not recharge while being used corded.
- ▶ Do not charge razor in a pouch.
- ▶ Recharge only when the plug symbol starts blinking. This symbol may appear when your razor is ON or OFF.
- ▶ Do not charge/recharge or use razor corded until fully dried.

Charging Razor with a Cord




- 1 Connect cord directly to razor and connect the charging plug into any 100V to 240V AC outlet. Use only the charging plug provided.
- ▶ An adaptor plug may be necessary for charging plug usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet. The charging plug will automatically convert to work on 100V to 240V AC systems.

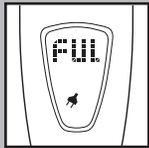

- 2** First time charging and recharging after non-use for 1 month or more requires a full 4 hours. After initial charge, recharging requires 1 hour. A fully charged razor has a cordless shaving time of up to 30 days.
- ▶ When batteries are fully charged, the word "Full" scrolls across the display. After a few hours the word "FULL" stops appearing and the display shows the remaining shaving time in minutes along with the plug symbol.

Charging Razor with Jet Clean System

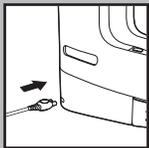

- 1** Connect the small plug to the Jet Clean System. Connect the charging plug into any 100V to 240V AC outlet. Use only the charging plug provided.


The razor holder automatically moves up to the highest position.



- 2** Remove protective razor head cap from razor.



- 3** Place the razor head side down in the razor holder so that the razor head fits into the configuration shown inside the Jet Clean System. Gently press the base of the razor towards the back of the Jet Clean System so that the razor base fits snugly in place. Lock the razor into place by pushing the

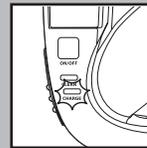

- lever down completely. The lever will not lock down unless the razor has been properly placed in the holder. Do not force lever.
- ▶ The charging light blinks to indicate the razor is being automatically (re)charged and will light up continuously when fully charged.
- 4** First time charging and recharging after non-use for 1 month or more requires a full 4 hours. After initial charge, recharging requires 1 hour. A fully charged razor has a cordless shaving time of up to 30 days.

When batteries are fully charged, the charging light on the Jet Clean System will light up continuously.

- ▶ You may store your razor in the Jet Clean System. Unplug from outlet when charging/cleaning is complete.



- 5** Raise the lever holding the razor to the highest position (1) and carefully remove razor from the Jet Clean System (2). When razor is removed from the Jet Clean System, the charging light will turn off.

Recharging

- 1** First time charging requires 4 hours. After initial charge, recharging requires 1 hour. Recharge only when the plug symbol starts blinking. This symbol may appear when your razor is ON or OFF.
- 2** When razor is fully charged, disconnect the charging plug from outlet. Do not keep razor or Jet Clean System permanently plugged into outlet.

Quick Charge


When batteries are totally depleted, recharging the razor for approximately 3 minutes gives enough energy for a 3-minute cordless shave.

Put It To The Test & Shaving Tips

- ▶ 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new shaving system.
- ▶ Use your new razor exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- ▶ At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new razor.
- ▶ Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.


- ▶ If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price, guaranteed.

Personal Comfort Control

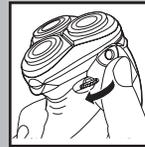


- ▶ Your Smart Touch razor has 3 adjustable settings that allow you to personalize your shave for your specific skin type from sensitive to normal skin. You can select your personal comfort control setting by turning the dial. Each setting is indicated by a "click".

Choose a comfort control setting:

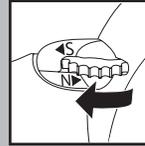


- ▶ For Sensitive Skin: Choose comfort control setting "S" to relax the spring and pressure of the floating heads against your skin for a gentler, more comfortable shave.

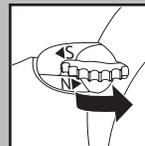

- ▶ For Normal Skin: Choose comfort control setting "N" to tighten the spring and pressure of the floating heads against your skin for a faster shave.
- ▶ The in-between position is best suited for skin types between normal and sensitive.


How To Shave With An Electric Razor

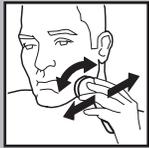

- ▶ Use this razor for its intended household use as described in this manual.
 - ▶ Shaving with a clean, dry face gives the best results.
- 1** Turn razor ON by pressing the on/off button once. Shave against the direction of beard growth using both straight and circular movements.
 - 2** Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press razor to skin so the floating heads can follow the contours of your face. DO NOT press too hard. Too much pressure can pinch the skin into the combs.
 - 3** Turn razor OFF by pressing the on/off button once.




- ▶ Numeric Display: The display lights up for a few seconds and the minutes indication appears as well as the plug and spark symbols.
 - ▶ Battery Display: The display lights up for a few seconds and the battery indication appears as well as the plug and spark symbols.
- 4** Put the protective razor head cap on the razor to protect razor heads.

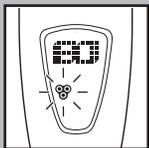


For optimal shaving results, replace razor heads (model #HQ9) once a year or when the replacement head symbol starts blinking.

Trimming

To groom sideburns and moustache:

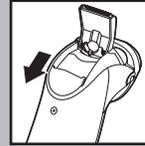

- 1** Turn razor ON.
- 2** Push down spring-release trimmer switch. The trimmer can be activated while the razor is running.
- 3** Hold trimmer as shown and move in downward strokes with gentle pressure.

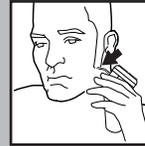

- 4** Close trimmer by pressing trimmer down.
- 5** Turn razor OFF.



Cleaning

- ▶ Regular cleaning guarantees better shaving results.
- ▶ Always switch Razor OFF, unplug and remove power cord before cleaning.
- ▶ Never clean, remove or replace head assembly while motor is on.
- ▶ Do not apply pressure to combs. Do not touch razor heads with hard objects as this may dent or damage precision-made slotted combs.





- ▶ Do not use razor if combs are damaged or broken. Facial injury may occur.
- 1** The faucet symbol will start blinking after each shave to remind you that the razor needs to be cleaned.

Preparing Jet Clean System For Use


Important

- ▶ Only use the razor, power plug, Jet Clean System and HQ200 cleaning solution provided to charge or clean razor.
- ▶ Only use a Philips Norelco 'XLCC' model razor with the Jet Clean System.
- ▶ Other Philips Norelco 'X', 'XL' or 'LC' model razors **DO NOT** work with a Jet Clean System.
- ▶ Empty the cleaning solution canister and thoroughly rinse the canister clean with warm water **every 2 weeks**.
- ▶ The Jet Clean System thoroughly cleans but does not disinfect your razor, therefore, do not share razor with others.
- ▶ The charging plug converts 100-240VAC to less than 24V DC.
- ▶ Place the Jet Clean System on a flat, stable surface to avoid any leakage. Be careful not to tip or move the Jet Clean System if it is filled with the cleaning solution.
- ▶ To avoid evaporation, do not expose cleaning solution to direct sunlight.

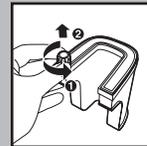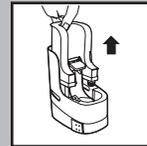


- ▶ Remove the protective razor head cap from the razor before charging or cleaning the razor in the Jet Clean System.
 - ▶ Use this appliance for its intended household use as described in this manual.
- 1** Place the Jet Clean System on a flat, level surface.
 - 2** Lift the transparent cleaning reservoir from the Jet Clean System.
 - 3** Turn the reservoir cap counterclockwise (1) and remove from the cleaning reservoir (2).
 - 4** Unscrew the lid on the Jet Clean Solution bottle (Model HQ200) provided with the razor. Remove the airtight seal by lifting up the tabs on the seal. Replace lid on the bottle making sure the lid is screwed on securely.
 - 5** Open lid and pour the Jet Clean Solution into the transparent cleaning reservoir. The reservoir can be completely filled with one (1) bottle of the Jet Clean Solution (Model HQ200). Discard cleaning solution bottle after contents have been poured into the reservoir.

NOTE: ONLY USE PHILIPS NORELCO JET CLEAN SOLUTION (MODEL HQ200) WITH THE JET CLEAN SYSTEM. ANY OTHER SOLUTION MAY CAUSE DAMAGE TO YOUR RAZOR.

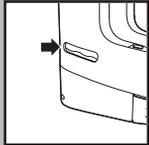

- 6** The amount of cleaning solution in the transparent cleaning reservoir is visible on both sides of the Jet Clean System. When the level gets low, refill with Philips Norelco HQ200 Cleaning Solution.

- ▶ The cleaning solution is automatically supplied from the reservoir to the cleaning canister through a special mechanism in the reservoir cap.

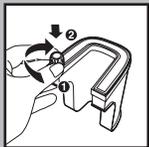

- 7** Replace cap on reservoir (2) and turn clockwise (1) making sure cap is screwed on securely.

- ▶ The cleaning solution may foam if the reservoir level is too low. Discard remaining solution, rinse the reservoir with warm water from the tap and refill with new cleaning solution.


- ▶ If you clean your razor every day, you should refill the reservoir approximately once a month.



- 8** Carefully lower the cleaning reservoir back into the Jet Clean System making sure the reservoir is properly aligned with the base unit.


Jet Cleaning the Razor

- ▶ If the razor does not contain enough power for one (1) shave, the Jet Clean Cleaning System may not work properly. Charge the razor in the Jet Clean System before using it to clean your razor.

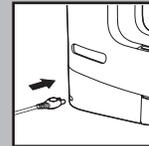


- 1** Connect the small plug to the Jet Clean System. Connect the charging plug into any 100V to 240V AC outlet. Use only the charging plug provided.

The razor holder automatically moves up to the highest position.

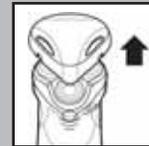

- 2** Place the Jet Clean System on a flat, level surface. Fill the cleaning reservoir with cleaning solution (see 'Preparing Jet Clean System For Use').

- 3** Remove protective razor head cap from razor.

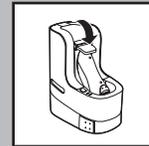

- 4** Place the razor head side down in the razor holder so that the razor head fits into the configuration shown inside the Jet Clean System. Gently press the base of the razor towards the back of the Jet Clean System so that the razor base fits snugly in place. Lock the razor into place by pushing the lever down completely.


The charging light will blink to indicate the razor automatically begins to charge.



- 5** Press the ON/OFF button to start the cleaning cycle.

The cleaning light on the Jet Clean System starts blinking and the razor is automatically lowered into the cleaning solution. The razor stops charging while it is cleaning.

- ▶ During the first few minutes of the cleaning cycle, the razor will automatically turn on and off several times while the razor holder lowers and raises the razor's position in the cleaning solution, removing all debris.
- ▶ After approximately 5 minutes, the razor holder will be raised slightly and will stay in this position for about 55 minutes. The cleaning light will remain blinking until the entire process is complete.
- ▶ Do not lift the razor lever or press the ON/OFF button while the cleaning cycle is running. If this does occur, the cleaning cycle will stop and the razor holder will automatically move to the highest position. The cleaning cycle can be re-started by pressing the ON/OFF button once.
- ▶ If the power plug is disconnected before the cleaning cycle is complete, the razor holder will remain in its current position. Reconnect the plug into the outlet or Jet Clean System and the razor holder will automatically move to the highest position. The cleaning cycle can be re-started by pressing the ON/OFF button once.

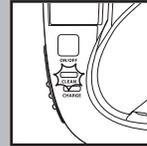

- 6** When the entire cleaning cycle is complete and the razor is hygienically clean, the razor will be raised to the highest position and the cleaning light on the Jet Clean System will light up continuously.



- 7** Raise the lever holding the razor to the highest position (1) and carefully remove the razor from the Jet Clean System (2).

- ▶ You may quickly rinse the razor heads with warm water after using the Jet Clean System to remove any residual cleaning solution.
- ▶ If the razor needs to be recharged, you can simply leave it in the Jet Clean System after cleaning and the razor will automatically recharge. The charging light on the Jet Clean System will blink to indicate the razor is recharging.
- ▶ For optimal razor drying time after cleaning, remove razor from Jet Clean System after the cleaning cycle is complete and allow to air dry.
- ▶ You may store your razor in the Jet Clean System. Unplug from the outlet when charging/cleaning is complete.

Quick Cleaning: Razor Heads




The razor heads may also be quickly cleaned after each use by rinsing with hot water. Water from the tap should be on a hot setting, BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.

- ▶ Regular cleaning guarantees better shaving results.



- ▶ Do not immerse razor in water.
- ▶ The tap symbol on the back of the razor indicates that the razor can be rinsed under running tap water.

- 1** Always turn razor OFF, unplug from outlet and remove cord from razor before cleaning.
- 2** Press the Razor Head Release Button, flip open the Razor Head Assembly.
- 3** Clean inside razor heads and hair chamber by running under hot water.
- 4** Clean outside of Razor Head Assembly by running under hot water.
- 5** Close the Razor Head Assembly and shake off excess water.
- 6** Open Razor Head assembly again and leave open to air dry.

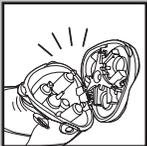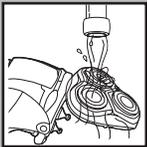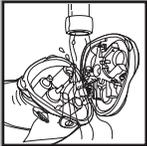


NOTE: Do not wipe or dry the shaving heads with a towel or tissue. This could damage the shaving heads.



- 7** If the shaving unit becomes detached from the razor, you can easily reattach it.
- 8** You may also clean the hair chamber without water by using the supplied brush.

After Each Use: Trimmer

- 1** Turn razor OFF.
- 2** Push down spring-release trimmer switch.
- 3** Clean trimmer with the brush every time you use it.
- 4** Lubricate the trimmer teeth with Philips Norelco Razor Lubricant (model AL80) or with one drop of mineral oil every 6 months.
- 5** Close trimmer by pressing trimmer down.

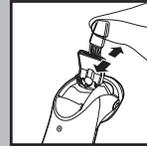


This razor and Jet Clean System have no other user-serviceable parts. Any other service should be performed by the Philips Norelco Service Location.

Cleaning the Jet Clean Canister

For optimal performance of the Jet Clean System, it is recommended that you empty the cleaning solution canister and thoroughly rinse the canister clean every 2 weeks.

- 1 Place the Jet Clean System on a flat, level surface.

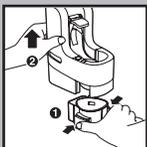


- 2 Simultaneously press the buttons located on both sides of the Jet Clean System (1) and lift the appliance off the Jet Clean canister (2).

Always remove appliance from canister by lifting straight up. Do not tilt Jet Clean System.



- 3 Discard any remaining cleaning solution in the canister.

The cleaning solution can be safely poured down the sink as there are no harmful ingredients.

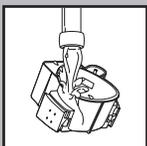

- 4 Simply rinse the canister with warm water. Wipe the canister with a towel or tissue to remove excess water.



- 5 Carefully lower the Jet Clean System over the canister making sure the release buttons snap back into position.

Replacing the Razor Heads

- ▶ Replace the razor heads once a year for optimal shaving results.
- ▶ Replace damaged or worn razor heads with model HQ9 Philips Norelco razor heads only.

Razor head check indication

- ▶ The replacement head indicator symbol starts blinking to remind you to check if it's time to replace your razor heads to obtain optimal shaving results.

Maintenance

- ▶ Always remove razor from the Jet Clean System before cleaning appliance.
- ▶ Unplug the Jet Clean System. The Jet Clean System may be wiped clean using a damp cloth.
- ▶ Before refilling transparent cleaning reservoir, discard remaining cleaning solution and rinse the outside and inside of the reservoir completely with warm water from the tap.
- ▶ Water from the tap should be on a warm setting to clean all washable parts.

Note: DO NOT place or clean any parts of the Jet Clean System in a dishwasher.

Storage




- ▶ The razor can be placed in the Jet Clean System for safe storage. If storing razor in Jet Clean System, remove the plug from outlet as soon as the razor is fully charged or cleaned.
- ▶ If appliance will not be used for an extended period of time, it is recommended that the cleaning solution in both the reservoir and canister be emptied out before storing.
- ▶ Be sure razor is turned off. Remove cord from outlet and razor or Jet Clean System before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap cord around razor or Jet Clean System when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not keep razor or Jet Clean System permanently plugged into outlet.
- ▶ Do not place or store razor or Jet Clean System where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- ▶ If storing razor outside the Jet Clean System, put the Protective Razor Head Cap on razor to protect heads.



Travel Lock

If you are going to travel, it is possible to lock the razor. The travel lock prevents the razor from being switched on by accident.

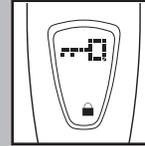

Activating the travel lock

- ▶ Press the ON/OFF button for 3 seconds. The razor is switched OFF and the key symbol rotates once. The travel lock is now activated.

Deactivating the travel lock

- ▶ Press the ON/OFF button for 3 seconds. The razor turns ON to indicate that the razor has been unlocked. The razor is now ready for use.

Assistance

- ▶ For assistance, call toll free:

1-800-243-3050

or visit our website:

www.philips.com/norelco

- ▶ Information is available 24 hours a day, 7 days a week.

Accessories

- ▶ **Replacement Heads**
 Model HQ9 - For maximum razor performance, replace your Philips Norelco razor heads once a year or as soon as the replacement head symbol starts blinking.
- ▶ **Razor Lubricant**
 AL80 - Philips Norelco Razor Lubricant.
- ▶ **Cleaning Solution**
 HQ200 - Philips Norelco Jet Clean Solution, 10 fl. oz. /300 ml.
- ▶ **Car Cord Adaptor Cable**
 HQ8010 - Charges razor from a 12V battery in your car, truck, van, boat or camper.
- ▶ **Philips Norelco Razor Accessories may be purchased at a store near you or on our website www.philips.com/norelco**

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips Norelco Product, Model 9170XLCC (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply ship the product postage prepaid to the Philips Norelco Service Location (information available online at www.philips.com/norelco or at 1-800-243-3050). It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:
 Philips Domestic Appliances and Personal Care Company
 A Division of Philips Electronics North America Corporation
 1010 Washington Blvd., Stamford, CT 06912-0015



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco, Personal Comfort Control, Tripleheader, Lift and Cut, and  are Registered Trademarks of Philips Electronics North America Corporation.



is a Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V.

© 2006 Philips Electronics North America Corporation. All Rights Reserved.