

Always there to help you
Register your product and get support at
www.philips.com/support

AE1850



User manual

PHILIPS

Contents

1 Safety	2
Important Safety Instructions	2
Hearing safety	3
<hr/>	
2 Get started	4
Install batteries	5
Power on	5
Set the clock	5
<hr/>	
3 Listen through the headphone	6
<hr/>	
4 Listen to radio	6
<hr/>	
5 Use the timer	6
<hr/>	
6 Adjust the display brightness	7
<hr/>	
7 Troubleshooting	7
<hr/>	
8 Notice	8
Compliance	8
Care of the environment	8
Copyright	9

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

1 Safety

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑧ Only use attachments/accessories specified by the manufacturer.
- ⑨ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑩ **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑪ Apparatus shall not be exposed to dripping or splashing.
- ⑫ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
-

Hearing safety



Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



Note

- The type plate is located on the back of the product.

2 Get started

Always follow the instructions in this chapter in sequence.

Install batteries



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of product damage! When the product is not used for a long period, remove the batteries.
- Batteries contain chemical substances, so they should be disposed of properly.

- 1 Open the battery compartment.
- 2 Insert 2 alkaline batteries (not supplied), type AA, R06, or UM3, with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

Power on

Press

- To switch the product to standby mode, press

Set the clock

- 1 In standby mode, press and hold **SET TIME**.
 - Do not release the button until the clock setting is complete.
- 2 Press **HOUR** repeatedly or press and hold it to set the hour.
- 3 Press **MIN** repeatedly or press and hold it to set the minute.
- 4 Release **SET TIME**.
↳ The set clock is displayed.

3 Listen through the headphone


Plug a headphone into the  socket on the unit.

4 Listen to radio



Note

- For optimal reception, fully extend the antenna and adjust its position.

- 1 Press **FM** or **MW** to select a band.
- 2 Turn the **TUNING** wheel to tune to the target radio station.
 - To increase or decrease volume, turn the **VOL**  wheel.

5 Use the timer

You can set a time at which the product powers on automatically.

- 1 In standby mode, press and hold **SET TIMER**.
 - Do not release the button until the timer setting is complete.
- 2 Press **HOUR** repeatedly or press and hold it to set the hour.
- 3 Press **MIN** repeatedly or press and hold it to set the minute.
- 4 Release **SET TIMER**.
 - To deactivate the timer, press **SET TIMER**.
 - To re-activate the timer, press **SET TIMER** again.

6 Adjust the display brightness

Press LIGHT.

7 Troubleshooting



Warning

- Never remove the casing of this product.

To keep the warranty valid, never try to repair the product yourself. If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact the Consumer Care, make sure that the product is nearby and the model number and serial number are available.

No power

- The batteries are not installed correctly. Insert the batteries correctly as indicated on the battery compartment.
- The batteries are out of energy. Replace with new ones.

No sound

- Adjust volume.
- Disconnect the headphone from the unit.

Poor radio reception

- For FM, fully extend the telescopic antenna and adjust its position for better reception.
- For MW, a built-in antenna works. Adjust the position of the unit for better reception.

8 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.

Compliance

This product complies with the radio interference requirements of the European Community.



Care of the environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.



Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Copyright

2015 © Gibson Innovations Limited. All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by Gibson Innovations Limited under license from Koninklijke Philips N.V.®

Specifications are subject to change without notice. Gibson reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



2015 © Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

AE1850_00_UM_V4.0

