

Philips
CD Soundmachine

Compact design

USB

AZ382



Enjoy music wherever you go

Want to enjoy the music collections stored at portable music player without using headphone? Plug the USB Direct socket to the Philips CD soundmachine and enjoy your favorite digital music through the powerful speakers - anytime, anywhere.

The ultimate listening experience

- USB Direct for MP3/WMA music playback
- Play MP3/WMA-CD, CD and CD-RW
- FM/MW tuner for radio enjoyment

Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- Line-in connection for your portable music playback

Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

PHILIPS
sense and simplicity

Highlights

USB Direct



With the USB Direct mode, you can simply select the music on a USB device and playback all your content. All you have to do is plug in your USB device to playback music or export content from the device.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the


music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat



The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

FM/MW tuner

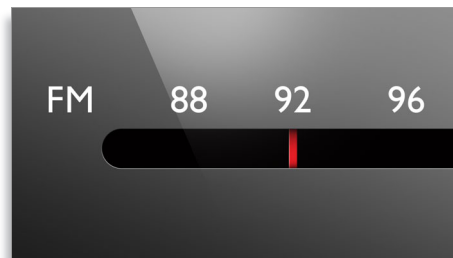

FM/MW (AM) stereo tuner

Line-in connection

MP3 line-in connectivity allows direct playback of MP3 content via your audio system. By simply connecting your portable MP3 player to the audio system via its built-in line-in jack, you can enjoy superb sound quality while playing your favorite music from your portable MP3 player.

Specifications

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/previous album search, next/previous track search, repeat/shuffle/program

Tuner/Reception/Transmission

- Tuner bands: FM, MW
- Antenna: FM antenna

Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Connectivity

- MP3 Link: 3.5mm stereo line in
- USB: USB host

Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC Input

Accessories

- Cables/Connection: power cord
- Others: User Manual
- Warranty: Warranty Certificate

Dimensions

- Gross weight: 1.84 kg
- Packaging width: 284 mm
- Packaging height: 264 mm
- Packaging depth: 155 mm
- Weight: 1.5 kg
- Main unit depth: 245 mm
- Main unit height: 123 mm
- Main unit width: 262 mm

Convenience

- Display Digits: 3
- Loader type: top
- Display type: LCD display



Issue date 2012-02-07

Version: 1.0.9

12 NC: 8670 000 37476
EAN: 87 12581 41004 9

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com