
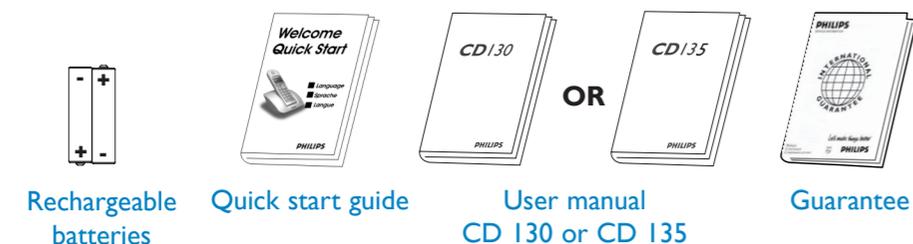


## What's in the box

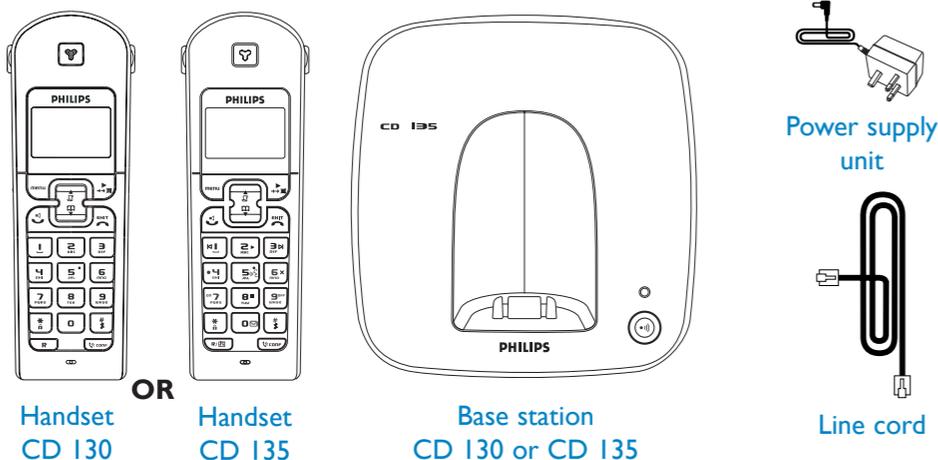


In multipack sets you will find additional handsets, chargers power supplies, line cords and batteries.

Always use the cables and batteries that came with your phone.

## 1 Connect

### A Connect the base station

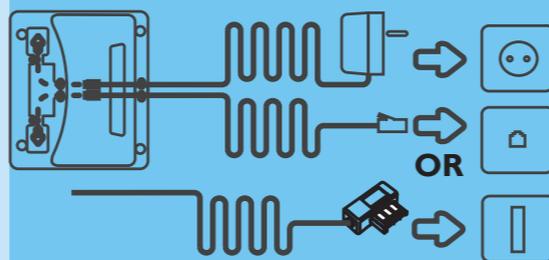


- Insert the plug of the power cord into the socket on the rear of the base station.
- Insert the plug of the line cord into the socket on the rear of the base station.
- Plug the power supply unit into your power outlet.
- Plug the line cord into the line socket.

## 2 Install

Always use rechargeable batteries.

### A Insert batteries

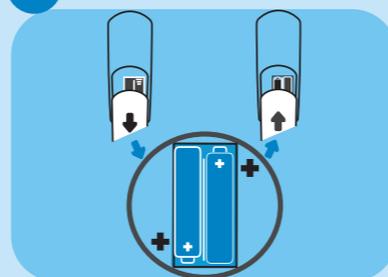

### B Charge handset for 24 hours



### To set the date and time

1. Press .
2. Press Down to reach **CLOCK/ALARM**.
3. Press to display **DATE & TIME**.
4. Press and enter the current date.
5. Press and enter the current time.
6. Press to confirm the settings.

## 3 Enjoy

### To make a call

Press and dial the number.

### To answer a call

Press .

**TIP** : You can predial the number before seizing the line.

During a call, press 2 times to activate the handset loudspeaker.

### To adjust earpiece volume while on line

Press Up or Down to increase or decrease the volume.

### To set the handset ring melody

1. Press and press Down to reach **PERSONAL SET**.
2. Press , **HANDSET TONE** is shown.
3. Press and scroll Down to reach **RING MELODY**.
4. Press , the melody is played.
5. Press Up or Down to browse the list of melodies.
6. Press to confirm your choice.

### To save a name & number in the phonebook

1. In idle mode, press , **PHONEBOOK** is shown.
2. Press , **ADD NUMBER** is shown.
3. Press , **ENTER NAME** is shown.
4. Enter the name and press , **ENTER NUMBER** is shown.
5. Enter the number and press to save the number.

### To set or change the alarm clock settings

1. Press  and press Down  to reach **CLOCK/ALARM**.
2. Press  and press Down  to reach **SET ALARM**.
3. Press , scroll  to select **OFF** or **ON ONCE** or **ON DAILY**.
4. Press  to confirm.

If you select **ON ONCE** or **ON DAILY** :

Enter the time and press  to confirm.

**TIP** :When the alarm rings, press any key to stop the alarm.

### To rename a handset

1. Press  and press Down  to reach **PERSONAL SET**.
2. Press  and press Down  to reach **HANDSET NAME**.
3. Press  and enter the name (text entry, see manual).
4. Press  to confirm.

### Listen to new messages recorded on answer phone

When new messages are recorded on the answering machine, the icon  is flashing on the handset display and the LED on the base CD 135 blinks.

Press  on the handset. Playback of the newest message will begin.

**TIP** : for details about answer machine functions, see user manual CD 135.

## Troubleshooting

For expanded overview see user manual.

### Problem

- No dialling tone.
- Poor audio quality.
- No symbol on the display.
- No Caller ID, poor connection quality with broadband DSL Internet.

### Tip

- Check the connections.
- Use the line cord provided in the box.
- Try to place the base station at least one metre away from any electrical appliances.
- Make sure the product is plugged.
- Recharge the batteries.
- Check you have one DSL filter plugged directly on each line socket used in the house.
- Check the modem and the phone are plugged in correct filter slot (one specific for each).
- Filters can be defective, replace it and make another test.

## Need help ?

### User manual

See the user manual that came with your CD 130 or CD 135.

### Online help

[www.p4c.philips.com](http://www.p4c.philips.com)

# Welcome

## Quick start guide

1 Connect

2 Install

3 Enjoy



# PHILIPS