

Discover your phone



Philips continuously strives to improve its products. Therefore, Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Philips provides this user guide "as is" and does not accept, except as required by the applicable law, liability for any error, omission or discrepancy between this user guide and the product described. The device is meant to be connected to GSM/GPRS/EDGE networks.

How to...

Switch the phone On/Off	Long press the power on/off key  on the top of the phone.
Enter your PIN code	Enter your PIN code through the on-screen keypad and tap on OK to confirm.
Unlock/lock the screen	Short press  on the top of the phone. To lock the screen, short press  .
Enter SIM settings on the idle screen	On the idle screen, tap SIM settings shortcut  .
Make a call	On the idle screen, tap on  to select a contact, or  to enter a phone number, and then, press  .
Answer a call	When the phone rings, press  .
Mute the ringing call or sounding alarm	When the phone/alarm rings, turn over the phone, front side to the back, or back side to the front (if you have turned on the options in  > Settings > General > Motion sensor).
Activate/Deactivate handsfree mode	During a call, tap on H-Free/H-Held .
End a call	Press  .

View prompt screen of new message/missed call	If receiving a new message/missed call, the prompt icon  will keep flashing on the idle screen. Tap on the icon to check for new message/missed call.
Check or write messages	On the idle screen, tap on  .
Access the main menu	On the idle screen, tap on  .
Quickly return to idle when browsing menus	Press  .
Show functional displays on the idle screen	Go to  > Settings > Dashboard . Select and turn on your desired displays.
Switch between displays	Slide the bar below displays. Or, tap on  or  .
Access the status pull-down menu	Tap on  at the top of idle screen. Tap to select options.
Enter the camera/video mode	Long press the Camera key on idle screen. Tap  /  to select the camera/video mode.

Select on-screen input keypads/
modes

Qwerty keypad : On the editing screen, turn the phone counterclockwise by 90 degrees, vertical to horizontal.

Alphanumeric keypad : Turn the horizontal phone clockwise by 90 degrees, horizontal to vertical.

Handwriting recognition mode : Tap on  / 
to switch between the two modes.

Tap on the language, numeric, or input method icon to select.

Quick access to functions

You can quickly access functions directly from the idle screen (using the shortcut icons, functional displays, or status pull-down menu), or through the main menu.

Shortcut icons

On the idle screen, the four shortcut icons lead you directly to four functional displays.

-  : Quick access to messaging
-  : Quick access to phonebooks
-  : Quick access to dial pad
-  : Quick access to main menu

Main menu

The main menu gives you access to all the different features of your mobile phone. The table below summarizes the functional icons on the main menu. To find more information about their functions, refer to the pages.

<i>Fun</i>  page 62	<i>Browser</i>  page 50	<i>Music</i>  page 64
<i>Camera</i>  page 52	<i>Messaging</i>  page 26	<i>My files</i>  page 70
<i>Tools</i>  page 42	<i>Contacts</i>  page 37	<i>Profiles</i>  page 78
<i>Bluetooth</i>  page 75	<i>Calls</i>  page 73	<i>Settings</i>  page 79

Tap on  on idle screen to access the main

menu. To select your option, tap on the icons and lists, and then **OK**. Tap on **Options** to access the options related to the selected item. Tap on **Back** to return to the previous menu. Press  to return to the idle screen.

Functional displays

On the idle screen, you can switch between up to 9 displays. You can use the empty idle screen, show clock time (if you select **Analog** or **Digital** in **Settings > General > Time & date > Display time**), or select a functional display.

With such functional displays, you can quickly check world clock (**World clock**); or check or edit to-do list (**Calendar**) or memos (**Quick notes**); or conveniently send messages to up to 3 recent contacts/numbers of outgoing messages (**Messaging**); or place a call to preset contacts just by a long tap (**Quick call**); or play music (**Music**) or listen to radio (**FM radio**) from the idle screen.

Customize functional displays

Select up to 7 functional displays as needed.

1. Go to **Settings > Dashboard**.
2. Select your option. Tap on **On/Off** to select or unselect.
3. Tap on **Done** to finish setting.

Switch between different displays

- Slide the bar below displays.
- Or, tap on / .

Status pull-down menu

By dragging  at the top of the idle screen, you can quickly turn on/off the alarm, torch, Bluetooth, or silent mode; check battery level; and select your desired profile, or ring type for incoming calls or messages.

SIM settings shortcut and prompt screen

SIM settings shortcut and prompt screen are located under status bar.



Tap SIM settings shortcut icon to set your SIM card slot1 and slot2.(see "SIM settings" on page 79).

The prompt screen displays current prompt information of phone. If receiving a new message, E-mail or missed call, the prompt icon  will keep flashing. Tap on this icon to open prompt screen, and tap to select the desired information.

Stylus

The touch screen allows you to enter text by directly writing on the screen, or tap to select the desired option. The supplied stylus makes it easier to do so.

The first time you switch on the phone, you are asked to do calibration for the stylus. Thus, strokes or taps by the stylus will be precisely displayed on the screen.

You can also do the calibration in [Settings](#) > [General](#) > [Pen calibration](#) by following the screen instructions.

Sensor

With built-in motion and light sensors, the phone can react to motion and ambient luminance as desired or necessary.

To use the motion sensor

- In [Settings](#) > [General](#) > [Motion sensor](#) > [Mute incoming call](#) or [Snooze alarm](#), select [On](#).

If a call rings, turn over the phone (front side to back, or back side to front) to mute the ringtone.

To interrupt the sounding alarm in the same way, check that the [Snooze](#) is set to a time interval in [Tools > Alarm](#) (see "To set an alarm" on page 45). To stop the alarm, tap on [Stop](#) (see "To use an alarm" on page 45).

To use the light sensor

- In [Settings > Display > Light sensor](#), select [On](#). The phone will adjust backlight level automatically according to ambient brightness. For power-saving purposes, always turn on the light sensor.

Power-saving mode

After the set time span, the phone has the idle screen turned off automatically. To exit the power-saving mode, press any key. For power-saving purpose, set the time span to a low value in [Settings > Display > Backlight duration](#).

Auto screen lock

In the idle mode, your phone can have the screen locked automatically after the set time span. When the screen is locked, a set of concentric circles keep moving on the screen.

To set the auto screen lock

Go to [Settings > General > Auto screen lock](#).

To unlock the screen

Short press  on the top of the phone. Or, drag out the innermost dot.

To lock the screen manually

Short press  on the top of the phone.

Table of contents

1 Getting Started	12		
Insert the SIM card	12		
Charge the battery	14		
Set clock	15		
Display local and international clocks	16		
Insert the micro-SD card	16		
2 Text Entry	17		
Using the Qwerty keypad	17		
Using the supplied stylus (the handwriting recognition mode)	18		
Using the alphanumeric keypad	18		
3 Calling	21		
Making a call	21		
Answering and ending a call	22		
Options during a call	23		
		Handling multiple calls (Network-dependent)	24
		Making an emergency call	25
		4 Messaging	26
		Creating messages	26
		Sending messages from idle screen	28
		Organizing your messages	29
		Defining your message settings	30
		E-mail	32
		Broadcast messages	35
		5 Contacts	37
		Adding or editing contacts	37
		Searching for a contact	38
		Managing your contacts	39
		Sharing contact information with others	40

Backing up important contacts	40	Using the torch	47
Special numbers	41	Using your business assistant	
6 Tools	42	Back up your phonebook	48
Using your business organizer		Firewall	48
Create your to-do list	42	Calculator	49
Check your calendar	43	Currency converter	49
Edit your to-do list	43	7 Browser	50
Delete expired tasks	43	Managing your browser	51
Using your memo		Accessing web sites	50
Display a text memo on the idle screen	43	Enabling/ disabling push messages	50
Record a sound memo	44	STK	51
Using your clock and timer		8 Camera	52
Alarm	45	Camera	52
World clock	46	Video recorder	58
Stopwatch	46	9 Fun	62
Text reader	46	Java	62

Sensor games	63	Getting connected by a Bluetooth device	76
10 Music	64	Editing your device list	77
Music player	64	14 Profiles	78
FM radio	67	Adjusting ringer settings to different scenes	78
11 My files	70	15 Settings	79
Finding your files	70	SIM settings	79
Managing your files	70	Customize the functional displays on idle screen	80
Sharing your files	71	General	80
Using your files	72	Display	83
12 Calls	73	Sounds	83
Call history	73	Connectivity	84
Call options	73	Icons & Symbols	86
13 Bluetooth	75	Precautions	88
About Bluetooth	75		
Connecting to a Bluetooth device	75		

Tips	94
Troubleshooting	95
Philips Authentic Accessories	99
Trademark Declaration	102
Specific Absorption Rate Information	103
Limited Warranty	105
Declaration of Conformity	109

I Getting Started

Congratulations on your purchase and welcome to Philips!

To get the most of your product and enjoy all Philips has to offer, register your product at www.philips.com/welcome.

Please read the safety instructions in the "Precautions" section before use.

To use your phone, you must insert a valid SIM card supplied by your GSM operator or retailer. The SIM card contains your subscription information, your mobile telephone number, and a memory in which you can store phone numbers and messages.

Insert the SIM card

Follow the steps below to insert your new SIM card. Remember to switch off your mobile phone before removing the back cover.

- I. Press on the back cover and slide the cover as shown.



2. As shown, take out the battery.



You may lose all your personal settings if you remove the battery when the phone is switched on.

3. As shown, align your SIM card with the SIM card slot, clipped corner facing you and gold

contact downwards. Insert your SIM card under the metal clip holder.

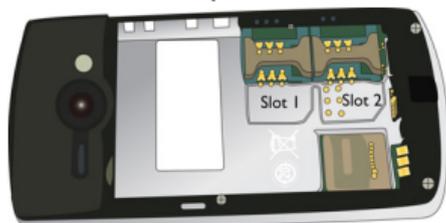


Figure 1



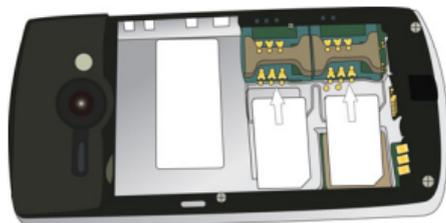


Figure 2

4. As shown, align the metallic connectors on the battery and battery slot. Press the battery down until it is locked.

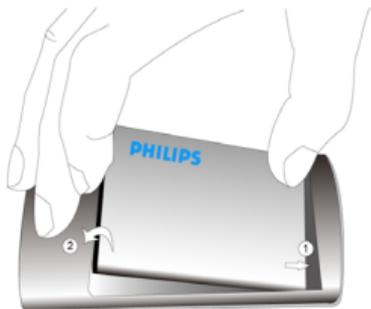

5. As shown, slide the back cover along the slots until it is locked.

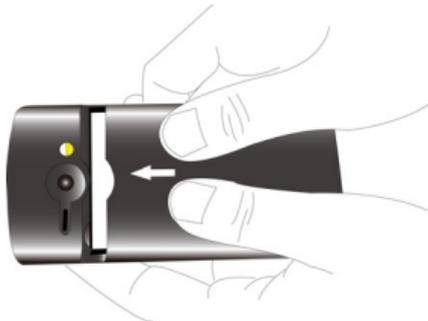

Remove the protective film covering the screen and camera lens before using the phone.

Charge the battery

Your phone is powered by a rechargeable battery. A new battery is partially charged. The battery symbol indicates the state of the battery.

To charge the battery, plug in the connector as shown below. Then plug the other end into a power socket.



During charging, the battery symbol scrolls.

Keeping the charger plugged to the mobile phone when the battery is fully charged will not

damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socket.

If you do not intend to use your phone for several days, we recommend that you remove the battery.

You can use the phone while it is charging. If the phone is extremely low on power, the low battery images will only appear after a few minutes of charging.

Set clock

1. Check that your phone is switched on. Long press the power on/off key  if necessary. Enter the PIN code if required. A PIN code is a 4- to 8-digit secret code of your SIM card. It is preconfigured and communicated to you by your network operator or retailer.

If you enter an incorrect PIN code three times in succession, your SIM card will be blocked. To unblock it, you must request the PUK code from your operator.

2. On the idle screen, tap on  and go to *Settings > General > Time & date*.
Set format: Select the time (12-hour or 24-hour clock) and date format by tapping the desired options, and  or .
Set time / Set date: Enter the time and date. Tap on the box to be defined. To enter your desired digits, tap  or  repeatedly, or long press  or  until you reach the desired digits.
3. To select how to display the time, go to *Settings > General > Time & date > Display time*:
Analog: Tap to show the time in a clock.
Digital: Tap to show the time in digits.
Tap *OK* to confirm.

4. To show the clock display on idle screen, slide the bar below displays (see "Switch between different displays" on page 5).

Display local and international clocks

You can display two clocks on the idle screen, one showing your local time and one the time of your destination.


1. Check that you have set your local time and date.
2. Go to *Tools > World clock*.
Local setting/Foreign setting: Tap  or  repeatedly to select a city. If necessary, tap *Options* to turn *Daylight saving/Daylight saving for foreign city* on or off.
3. Check that you have set world clock as your functional display on the idle screen (see "Functional displays" on page 5).

Insert a micro-SD card (memory card)

You can expand the memory of your phone by adding a micro-SD card.

Storage capacity: up to 8 GB

1. Follow Step 1 and 2 under "Insert the SIM card".
2. As shown, push down the card holder and lift it up. Align your micro-SD card with the slot. Put it in place.

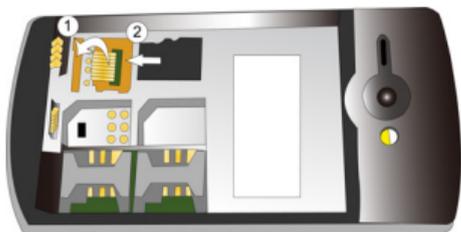

3. Press down the card holder and pull it until it is locked.

2 Text entry

Your mobile phone supports text entry through the on-screen Qwerty keypad, on-screen alphanumeric keypad, or the supplied stylus (handwriting format).

Using the Qwerty keypad

Select text entry modes

- On the editing screen, turn your phone, if in the vertical position, counterclockwise by 90 degrees.

Check that you are in an input mode other than   or .

Enter text

1. Tap to select

 : for English entry

 : Pinyin input for Simplified

Chinese

 : for numeric entry

Depending on the language you select for your phone, the supported input formats may vary.

2. Tap on the keys to enter your desired letters or numbers.

: Tap to move to the beginning of the next line.

: Tap to delete the previous character.

: Tap to enter a space.

@#*: Tap to enter symbols and punctuations. Tap again to exit.

/ : Tap to switch between upper and lower cases (for English entry).

3. Tap on *Done* to complete editing.

Using the supplied stylus (the handwriting format)

Select text entry modes

1. On the editing screen, turn your phone, if in the horizontal position, clockwise by 90 degrees.
2. If necessary, tap on  to select : text entry through the supplied stylus (handwriting format)

Enter text

1. Tap to select  : for English entry
 : for the entry of Simplified Chinese
 : for the entry of Traditional Chinese
 : for numeric entry

[Depending on the language you select for your phone, the supported input methods may vary.](#)

2. Write on the screen using the supplied stylus, as you do on paper using a pen.

: Tap to move to the beginning of the next line.

: Tap to enter a space.

: Tap to enter symbols and punctuations. Tap again to exit.

Using the alphanumeric keypad

Select text entry modes

1. Follow Step 1 under "Using the supplied stylus (the handwriting format)".
2. If necessary, tap on  to select : text entry through the alphanumeric keypad

Enter text

1. Tap to select, or repeatedly press ,
  /  /  / : for English entry
 : stroke input for Traditional

Chinese

 : Pinyin input for Simplified Chinese

 : for numeric entry

- Long press  to turn T9 input on or off (for suitable input formats only).
- To set preferred input formats, long press . On the screen, you will only find the icons for preferred input formats.

Depending on the language you select for your phone, the supported input formats may vary.

2. Tap on the keys to enter your desired letters, numbers, or strokes.

 to  Tap to input letters (T9 input)
Tap repeatedly to input the desired letter (multi-tap input)

 to  Tap to enter strokes (stroke input)

  Tap to browse candidate words on the previous/next page.

 Tap to input symbols and punctuations

 Tap to input a space

Clear Short press to clear a letter, long press to clear all entries. If necessary, tap on *Clear* to exit the input mode first.

- Tap on a candidate word or *Select* to select.
- To move to the beginning of the next line, tap on  and select .

3. If necessary, tap on *Clear* to exit the input mode.

T9[®] input



Tegic Euro. Pat.
App. 0842463

T9[®] predictive text input is an intelligent editing mode for messages, which includes a comprehensive dictionary. It allows you to quickly enter text. You need to press only once on the key corresponding to each letter needed to spell a word: keystrokes input are analyzed and

the word suggested by T9[®] is displayed at the pop-up window.

Examples: how to enter the word "home":

1. Tap on , , , .
The screen displays a list of candidate words.
2. Tap to select "home".

Multi-tap input (ABC/abc)

Press the keys that are marked with the corresponding letter you wish to enter. Press once to get the first letter on the key, press twice quickly to get the second letter and so on until the letter you want is displayed on the screen.

Example: how to enter the word "home":

Press ,  (**GHI**), , , 
(**MNO**), ,  (**MNO**), ,  (**DEF**).

Stroke input

The principle of stroke input is to dissect and separate every stroke of a Chinese character according to sequence. When you wish to input the character, press the keys corresponding to the required strokes according to sequence to get the desired character. The stroke input method in this phone classifies a Chinese character into 5 basic strokes: (horizontal, vertical, left falling stroke, right falling stroke and over-down) as well as a special stroke ().

3 Calling

Making calls

From the idle screen

1. Tap on  to enter the phone number.
An on-screen dial pad appears.
2. Press  to dial the number.
If you want to dial the number by using secondary SIM, tap *Options* > *Dial(Secondary SIM)*.
3. Press  to hang up.

For international calls, long press  on the dial pad to enter "+" (the international prefix).

Use the phonebook (see "Contacts" on page 37)

1. On the idle screen, tap on .
To search for a contact, tap on  beside the text box. Enter

the contact name (up to 5 characters). Tap on the input method icon to select.

2. Press  to dial the selected number.
If you want to dial the number by using secondary SIM, tap *Options* > *Call(Secondary SIM)*.
3. Press  to hang up.

Quick call

On the idle screen, by using the functional display of quick call, you can call a preset contact just with a long tap on the contact icon. Set your quick-call list before making such a call.

To set your quick-call list

1. Go to  > *Settings* > *Dashboard* (see "Functional displays" on page 5).
2. Select *Quick call*, and tap to turn it on.
The functional display of quick call will appear on the idle screen.
3. Press  to return to the idle screen. To select the quick-call display, if necessary,

slide the bar below displays (see "Switch between different displays" on page 5).

4. Tap on an empty contact icon, and select your desired one from the phonebook.

On the quick-call display, the contact name appears below the icon.

For those with contact pictures (see "Add a contact to Smart Phonebook" on page 37), the associated picture also appears.

To replace a contact in the quick-call dashboard

1. Go to *Settings* > *General* > *Quick call dashboard*.
2. Tap to select the contact to be replaced.
3. Tap on *Options* > *Replace* to replace the contact with your desired one from the phonebook.

Speed dial

On the idle screen, tap on , and you can call a preset speed-dial number by long pressing a numeric key.

Set your speed-dial number before dialing it.

To assign a speed-dial key to a contact or phone number,

1. Go to  > *Settings* > *General* > *Speed dial*.
2. Select one of the locations ( to ). Tap on *Add*.
3. In *Contacts*, assign to the location a contact from your phonebook.
In *Phone number*, assign to the location a preset phone number.

Answering and ending a call

When you receive a call, the number of the caller may be displayed, depending on whether or not the caller has chosen to display his or her ID. If the number is stored in the phonebook, then the corresponding name is displayed.

- **Answer the call:** Press , or tap on *Answer*.
- **Hang up:** Press  .

- **To answer or end a call using the supplied one-key headset**, see "Headset" on page 99.
- **To reject calls from certain contacts**, you can add the contacts or numbers to your blacklist. (For more information about the blacklist, see "Firewall" on page 48).

The phone will not ring or vibrate if it is in Silent mode (see "Profiles" on page 78).

Options during a call

During a call, you can tap to select *H-Free* or *H-Held* mode. Tap on *Keypad* to use the on-screen dial pad. Tap on *Options* to access the following options:

- *Contacts*: Select or edit contacts in the phonebook.
- *Hold*: Put current call on hold.
- *End call*: End current call.
- *Sound recorder*: Record conversation during a call.
- *Mute*: Mute/unmute the call.

- *Messaging*: Send and receive messages.
- *Calendar*: Check your calendar (see "Check your calendar" on page 43) during a call.
- *Quick note*: Edit a text memo to be shown on the idle screen.
- *Calculator*: Use the calculator (see "Calculator" on page 49) during a call.

Sound recorder

In most countries, recording of telephone conversation is subject to legislation. We advise you to notify the caller if you intend to record the conversation and only do so if they agree. You should also ensure confidentiality of the recordings.

To record a conversation during a call, tap on *Options* and select *Sound recorder*. Recorded sound is saved in *.amr format and stored in *Audio* of *My files* menu (see "Finding your files" on page 70).

Mute or unmute a call

During a call, tap on *Options* and select to set the *Mute* function to *On* or *Off*. If you select *Mute On*, the microphone will be deactivated.

Adjust the volume

During a call, press the side volume key + or - to increase or decrease the volume.

Handling multiple calls (Network-dependent)

You can handle two or more calls at the same time, as well as make conference calls with your phone. The availability of this feature is dependent on your network operator and/or your subscription.

Make a second call

You can make a second call when there is an active call or a call on hold. While on the phone, tap on *Options* > *Contacts* or *Keypad* to select a

contact or enter a phone number, and then press . The first call is put on hold and the second number is dialed. When the second call is received, you can tap on *Swap* to toggle between 2 calls, or select *Options* to access the following options:

- *Contacts* to select or edit contacts in the phonebook.
- *H-Free* to receive the call in handsfree or handheld way.
- *Conference* to introduce the party into conference call.
- *Transfer* to connect the two calls. You are disconnected when the transfer is completed.
- *End call* to disconnect one party from the call.
- *End all calls* to disconnect all parties from the call.
- *Sound recorder* to record the phone conversation.
- *Mute* to deactivate the microphone.
- *Messaging* to send or receive messages

- [Calendar](#) to check your calendar (see "Check your calendar" on page 43) during a call.
- [Quick note](#): Edit a text memo to be shown on the idle screen.
- [Calculator](#) to use the calculator (see "Calculator" on page 49) during a call.

Answer a second call

When you receive a second call while already in communication, the phone screen displays information about the incoming call. You can then:

Press  or tap [Answer](#) To answer the call (the first one is put on hold).

Press  or tap [Options](#) > [Reject](#) To reject the call.

To receive a second call, you must first deactivate Call divert (see 74) and activate Call waiting (see 74).

Making an emergency call

Without a SIM card in phone, you can tap on [SOS](#) to make the emergency call.

With a SIM card in phone, you can tap on  to enter the emergency number in idle mode, then press .

In Europe, the standard emergency number is 112, in the UK, it is 999.

4 Messaging



Creating messages

SMS

SMS enables you to send text messages to the other party, using Short Messaging Service (SMS). You can use the *Create SMS* menu to send messages to another handphone or a device that is capable of receiving SMS. To compose and send an SMS, follow the steps below:

1. Tap on  on the idle screen, or go to *Messaging*. Select *SMS* > *Create SMS*, and write your message.

2. Tap on *Options* to access the following options:

Save as *Draft (Primary card)/(Secondary card)*: Save the SMS message to *Drafts* of SIM 1 and SIM 2.
Template: Save the SMS message as an SMS template.

Insert contact Select to insert the name and phone number of your contacts.

Use templates Select to insert a preset message.

Exit editor Exit the editing screen.

3. Tap on *Send* to send the message to the desired contact or contact group (see "Contacts" on page 37).

MMS

Your mobile phone can also send and receive MMS (Multimedia Messaging Service) messages. With MMS, you can send messages that contain pictures, sound and text.

When sending MMS messages, make sure that your recipient also has an MMS-enabled phone in order to view your messages. Follow the steps described below to compose and send an MMS.

1. Select *MMS* > *Create MMS*, and enter the following:

To Enter the number or e-mail of the recipient.

Cc Enter the number or e-mail of other recipients to whom you wish to send a copy of the message.

Bcc Enter the number or e-mail of the recipients to whom you wish to send a copy of the message, by which the recipients in the Bcc list will be invisible to other recipients.

Subject Enter the subject of the MMS.

2. In *Edit content*, tap on *Options* to select your options.

To insert multimedia slides, select

Add picture, Insert a slide into your message.

Add audio, The multimedia slide can consist of a picture and an audio file, or a video clip.

Add slide before, *Add slide after* Insert more slides into your message.

Slide timing Set the play time of MMS slides. The default value is 5 seconds.

Preview Preview inserted multimedia slides. Tap on  and  to move to previous or next page.

To insert file attachment, select

Add attachment Insert a file attachment to your message.

To insert **Bookmark text**, select

Add bookmark text Add to your message the website information you saved as a bookmark (see "Accessing web sites" on page 49).

3. Tap on **Done** to access the next option:

Send only Send the MMS message only.

Save and send Save and send the MMS message.

Save to Drafts Save the MMS message to **Drafts**.

Send options Set Validity period, Delivery report, Read report, Priority.

Exit Exit the editing screen.

Copyright protected pictures and sound cannot be sent by MMS.

Use templates for messages

You can use ready-made messages as new messages. 10 SMS and 5 MMS messages are preset in the Templates folder.

1. Select **SMS > Templates** or **MMS > Templates**.
2. Select your desired templates.
3. Tap on **Options**, and select **Write message** or **Create message**.

The ready-made message appears on the edit screen.

Sending messages from idle screen

By tapping the functional display of Messaging on the idle screen, you can quickly send messages to 3 contacts/numbers you recently used to send messages.

1. On the idle screen, select your desired functional display (see "Functional displays" on page 5).

2. Tap to select the contact or number as the recipient of your message.
3. Write and send your messages (see "Creating messages" on page 26).

Organizing your messages

Your messages are sorted in the following folders on your phone memory and SIM card:

Inbox: received messages

Sent: sent messages

Outbox: unsuccessfully sent messages

Drafts: messages saved as drafts

Spam box: rejected or filtered messages

Find a message

- Tap to enter a folder, and then, select a message.

Manage messages

- Open a message, and then, tap on *Options* to access the following options:

For the SMS or MMS, or different folders, available options may vary.

- Reply* Reply to the sender.
- Reply by SMS* Reply to the MMS sender by SMS.
- Reply all* Reply to the MMS sender and all recipients on the *Cc* and *Bcc* lists.
- Forward* Forward the selected message.
- Edit* Edit and send the selected message.
- Edit before calling* Edit the sender's phone number before making a call
- Use details, Use number, Use URL* Extract the number or E-mail address of the sender or in the message to create messages, make a call, or save to the phonebook.

Extract the URL in the message to connect to the website, or add as a bookmark.

- Delete** Delete the selected message.
- Delete all** Delete all messages in the folder.
- Multi Select** Select multiple messages to be deleted. Tap on **Select** or **Cancel** to select messages. To delete selected messages, select **Done** > **Delete**.
- Move to SIM** Move current SMS message to the SIM card.
- Save object** Save to your phone or memory card (if inserted) attached files of current MMS message.
- Properties** Show the file information of current message.

Defining your message settings

Some of your message settings are dependent on the service you subscribe with the network operator. Consult your network operator for

your account settings, general settings, server profile, or other relevant settings.

In **SMS** > **SMS Settings**, tap **SMS1 message settings** or **SMS2 message settings**:

Account settings

Profile name: Edit the name of the current profile.

SC address: Select your default SMS center. If not available on your SIM card, you must enter your SMS center number.

Validity period: Select the length of time your messages will be stored in the SMS centre. This is useful when the recipient is not connected to the network (and thus cannot receive your message immediately).

This feature is subscription dependent.

General settings

Message type: Select the format of your sent messages. This option is network dependent.

Delivery report: When selected, this option will inform you via the SMS whether or not your own SMS message was sent.

This feature is subscription dependent.

Reply path: When selected, this option allows you to transmit the number of your SMS message center together with the message. The recipient can then reply using your SMS center and not theirs. This speeds up the rate of transmission. This feature is subscription dependent.

Auto save SMS: Tap to select

Memory status

On: The message is sent and saved to the Sent folder.

Off: The message is sent only.

This option can display the memory status of the messages saved in the SIM card and the phone.

Preferred storage

This option allows you to select the preferred storage. You can select *SIM* or *Phone*.

In *MMS* > *MMS Settings*,

Compose Set *Creation mode*, *Picture resizing*, *Best page time*, *Auto signature* and *Signature*. When *Auto signature* is set to *On*, edit your signature in *Signature*.

Send Set *Validity period*, *Delivery report*, *Read report*, *Priority*, *Slide timing* and *Delivery time* options for sending an MMS message.

Retrieve Set *Home network*, *Roaming*, *Read report* and *Delivery report* options for receiving an MMS message.

Filter Set *Anonymous*, and *Advertisement* from whom you want to filter MMS or E-mail messages.

Server profile Set network configuration. Please contact your network provider for more information.

Memory status View the memory status of your MMS messages.

E-mail

To send and receive E-mail, you need to subscribe relevant services. Contact the operator for the subscription and configuration information.

This menu allows you to send E-mail to one or several recipients at a time, including with an attachment (smaller than 200K in size) such as a JPEG picture. Once received, your messages can be forwarded and the attachments can be visualized with the appropriate software.

Set up E-mail accounts

Select *E-mail* > *E-mail accounts*. This menu allows you to create new E-mail accounts and select

one to activate it. Consult the network operator for the account information. If necessary, consult your mail service provider for the mail server configuration.

1. Go to *E-mail > E-mail accounts*. Tap on *Add* or *Options > New account* to set up a new account.
2. Enter your account information as prompted.
 - When entering symbols like @ and _, tap on  or  to turn on/ off the symbol input keypad.
 - When selecting data account, tap on *Edit* and select *GPRS data*. Check that you have selected a GPRS Internet/Email connection account.
 - Consult your mail service provider for the mail server configuration.
3. When returning to the list of E-mail accounts, tap on *Activate* to activate the selected E-mail account.

Write E-mail

To write E-mail, select *E-mail > Write Email*. Tap to enter the address (*To*), a copy (*Cc*), a blind copy (*Bcc*), subject, and the E-mail content. By tapping *Attachments*, you can attach up to three files. When you have finished writing your E-mail, press *Done*. You can then select to *Send*, *Send and save*, *Save to draft* or *Quit without Saving*.

Send and receive E-mail

Select *E-mail > Send and receive*. This menu allows you to send E-mail from your phone to the Internet, and receive E-mail from the Internet to the mailbox you have preset on your phone.

To receive E-mail automatically

1. Go to *E-mail > E-mail accounts*. Tap to select your desired account.
2. Tap on *Options*, and select *Edit > Advance*.
3. In *Account settings > Check interval*, tap  or  to select your desired time span.

Your mail box will be checked automatically after each time span.

If authentication is required for outgoing mail

1. Go to *E-mail > E-mail accounts*. Tap to select your desired account.
2. Tap on *Options*, and select *Edit > Advance > Outgoing server*. Check that you have selected *On* (by default) in *Authentication*.

Organize your E-mail

For your activated account, the Email is sorted in the following folders:

Inbox: received E-mail

Outbox: unsuccessfully sent E-mail

Sent: sent E-mail

Drafts: Email saved as drafts

1. Go to *E-mail > E-mail accounts*. Tap to select your desired account. Tap on *Activate* to activate the E-mail account.
2. Enter a folder and select a desired message. Tap on *View* to read the mail. When reading

the mail, tap on *Options* to access the following options:

For different folders, available options may vary.

<i>Reply</i>	Reply to the senders.
<i>Reply without content</i>	Reply to the sender without the email history.
<i>Reply all</i>	Reply to all senders.
<i>Reply all without content</i>	Reply to all senders without the email history.
<i>Forward</i>	Forward the E-mail to someone else.

Retrieve options

Retrieve the complete mail.

This option is available when you select *Incoming server* > *Downloaded options* > *Header only* in *Edit* > *Advance* (see Step 1 and 2 under see "To receive E-mail automatically" on page 33).

Mark as unread

Display current E-mail as unread.

Mark as deleted

Display current E-mail as deleted.

Delete

Delete current E-mail.

To delete marked Emails

By tapping on *E-mail* > *Delete marked Emails*, you can delete all the mail marked as deleted.

To clear mailboxes

By tapping on *E-mail* > *Clear mailbox*, you can empty a folder, like **Inbox**, **Outbox**, **Sent**, **Drafts**, or all mailboxes.

Broadcast messages

Broadcast messages are public messages broadcast to a group of mobile users. The messages are broadcast on coded channels. Generally, one broadcast channel can transmit one type of message. Please contact your network operator for a list of channel numbers and their respective broadcast information.

Define settings for broadcast messages

In *Broadcast messages*, select *SIM1 broadcasting message* or *SIM2 broadcasting message*:

Receive mode

Tap to turn the receive mode on or off.

Read message

Read messages when there are received broadcast messages.

Languages

Set language for the broadcast message to be received.

*Channel
settings*

Define the channel for broadcast
messages

5 Contacts



Contacts are stored in one of the two available phonebooks: SIM phonebook (located on your SIM card, by which the number of entries you can store depends on the card capacity) or the Smart Phonebook (located on your phone, which allows you to store up to 1000 names). New contacts will only be added to the phonebook you have selected.

Adding or editing contacts

Add a contact to Smart Phonebook

For contacts on the Smart Phonebook, you can add detailed information, like home number and office number, and identifying features, like contact pictures and ringtones.

1. Go to *Contacts* > *Advanced*:
In *Contact details*, select the items to be defined for a new contact.
2. On the idle screen, tap on  and enter the phone number you wish to save.
3. Tap on *Save* and choose storage *SaveTo phone*.
Name: Tap on *Edit* to go to the editing screen. Select your desired text entry formats (see "Text entry" on page 17). Tap on *Clear* to exit the input mode, if necessary.
Number: Enter the mobile number.
4. Add details as desired in other fields.
When selecting the contact picture, ringtone or caller group, tap on  or  (To use a photo as contact picture, see "Use a picture file as contact picture" on page 72).
5. Tap on *Done* to save.

Add a contact to SIM phonebook

1. On the idle screen, tap on  and enter the phone number you wish to save.
2. Tap on [Save](#) and choose storage [To SIM1](#) or [To SIM2](#).
3. Follow Step 3 under “Add a contact to Smart Phonebook”.

Edit a contact

1. Go to [Contacts](#) > [View contacts](#).
2. Select your desired contact (see see "Searching for a contact").
3. Tap on [Options](#) > [Edit](#) to go to the editing options.
For contacts on SIM phonebook, only name and mobile number are editable.

Searching for a contact

1. Go to [Contact](#) > [View contacts](#).

There are 4 pages on top of phonebook list: all contacts, phone contacts, SIM1 contacts and SIM2 contacts.

2. Select your desired page of contacts.
3. To search for a contact, tap on  , and enter the name (up to 5 characters) using the on-screen keypad.
 - To search contacts by any character in a name, turn on [Smart search](#) in [Contacts](#) > [Advanced](#).
Names containing the character are listed.
 - To search contacts by first characters in a name, turn off [Smart search](#) in [Contacts](#) > [Advanced](#).
Names starting with the character are listed.

Or, move up or down the slider on the right. Initials (English or phonetic letter) appear for current names in an ascending or descending order.

Managing your contacts

You can copy or move your contact entries among the three phonebooks. Also, you can group your contacts as Family, Friends, Business and others as you like. For different groups, you can use different ringtones for identification, and send messages to a group.

Copy, move or delete a contact

1. Go to [Contacts](#) > [View contacts](#). Select your desired page of contacts.
2. Select a desired contact (see "Searching for a contact").
3. Tap on [Options](#) to select [Delete](#), [Copy to](#), or [Move to](#).

Copy, move or delete multiple contacts

1. Go to [Contacts](#) > [View contacts](#). Select your desired page of contacts.

2. Select a desired contact. see "Searching for a contact".
3. Tap on [Options](#) > [Select multiple](#). Select [Select all](#) or [Select one by one](#) to display a fully checked or unchecked contacts list.
4. Tap to check or uncheck your selection.
5. Tap on [Options](#) > [Copy to phone/SIM1](#) or [SIM2](#), [Move to phone/SIM1](#) or [SIM2](#), or [Delete](#).

Copy, move or delete all contacts

1. Go to [Contacts](#) > [Advanced](#).
2. Select [Copy all](#), [Move all](#), or [Delete all contacts](#).

Group your contacts on the Smart Phonebook

1. Go to [Contacts](#) > [View groups](#).
2. Select a group. You can rename the group, select a ringtone and a contact picture, and add contacts to [Member list](#).

Sharing contact information with others

You can share with others the contact information in your phonebook. As desired, the information can be sent via the SMS, MMS, E-mail or Bluetooth.

1. In [Contact](#) > [View contacts](#), select your desired page of contacts.
2. Select a desired contact (see see "Searching for a contact").
3. Tap on [Options](#) > [Send contact](#) to send the contact information via the SMS, MMS, E-mail or Bluetooth.

Backing up important contacts

You can save the information of important contacts as files in your phone or memory card. To back up your entire phonebooks, see "Back up your phonebook" on page 48.

1. In [Contact](#) > [View contacts](#), select your desired page of contacts.

2. Select your desired contact. (see see "Searching for a contact").
3. Tap on [Options](#), and select [Send contact](#) > [Save as file](#).
 - Select your desired backup location, phone or memory card.
 - Select your desired folder where the backup information is to be stored. To create a sub-folder, tap on [Create](#), or [Options](#) > [New folder](#).
4. Tap on [Done](#), and name backup file. The backup file is created.

To restore the contact to your phonebook

1. Go to [My files](#). Find and select the contact information file (.vcf) you saved.
2. Tap on [Options](#) > [Use](#) to restore the contact to your desired phonebook.

Special numbers

This menu allows you to keep a list of useful numbers such as own numbers, service numbers, voicemail and emergency numbers.

Options	Description
---------	-------------

<i>My numbers</i>	Tap on <i>Edit</i> to edit the phone number or name to be shown on the idle screen.
-------------------	---

<i>Emergency</i>	Tap on <i>Edit</i> to edit your emergency phone number.
------------------	---

<i>Voice mail</i>	This menu allows you to set your voice mail server number, as well as retrieve your voice mails. Consult the network operator for the account information.
-------------------	--

Select a voice mail box, and tap on *Edit*: Edit voice mail server number.

Connect: Retrieve your voice mail.

Service numbers

This service is provided by your network operator. For more information regarding the corresponding function, please contact your network operator.

6 Tools



Using your business organizer

You can add your new tasks to the phone. Such to-do tasks are marked in your calendar. You can always check your calendar and remind yourself as desired.

Create your to-do list

1. In *Tools* > *Calendar*, select a date in the calendar, and tap on *Tasks* to add a kind of task.

You can also add a task by tapping *Options* > *Add event*.

To create or edit the to-do list of current date, you can tap the functional display of calendar on the idle screen (see "Functional displays" on page 5).

2. To keep yourself reminded, do the following:

Subject Add a note about the task.
Tap on *Edit* to edit the task. On the editing screen, tap on *Template* to use the preset note.

Alarm Tap on  or  once or more to turn the alarm on, have it sound 5, 15 or 30 minutes before the specified time, or turn the alarm off.

Repeat Tap on  or  once or more to repeat the alarm at the specified time once, everyday, weekly or monthly.

To repeat the alarm at certain days, tap on  or  to select *Days*, tap on a weekday or weekend, and then *On/Off* to select or unselect the day.

3. Tap on *Done* to save the task.

At the set time, the new event icon appears on the idle screen.

Check your calendar

After creating your to-do lists, you can check your calendar in weekly, or monthly views. In *Tools* > *Calendar*, tap on *Options* > *Go to monthly/weekly view* to switch between the views.

You can also create your to-do list in the calendar of different views.

To view the to-do list of current date

- Select your desired date. Tap on *Tasks*.

To view all to-do lists

- Tap on *Options* > *View all*.

Edit your to-do list

1. Go to your desired to-do list (see “Check your calendar”).
2. Select your desired task. Tap on *Options* to do the following:

Add Add a task.

Edit Edit the selected task.

Delete Delete the selected task.

Delete all Delete all the tasks.

Send Send the task as a message.

vCalendar

Delete expired tasks

You can quickly delete all tasks before current date and time.

- In *Tools* > *Calendar*, tap on *Options* > *Delete expired tasks*.

Using your memo

You can use this phone to record your text or sound memos.

Display a text memo on the idle screen

You can save up to 5 text memos, and display them on the idle screen.

1. In *Tools* > *Quick note*, tap on *Edit*. Or, tap on the functional display of Quick notes on idle screen.
You can write a text memo, or draw an image as desired on the page.
2. To turn over a page, drag to lift its lower right corner.
3. Tap on *Save* to finish editing.
On the idle screen, you can see the text memo pages.

To delete an existing page

- In *Tools* > *Quick note*, select your desired page (if necessary, turn over a page by dragging to lift its lower right corner). Tap on *Delete*.

Record a sound memo

You can make your own recording, and share it with your friends via the MMS, E-mail, or Bluetooth. Also, you can use the recording as the ringtone of incoming calls or a contact.

Make recording

1. Go to *Tools* > *Sound recorder*.
To select your storage location, file format, and audio quality, tap on *Options* > *Settings* to select your options.
2. Tap on *Record* or *Options* > *Record* to start recording.
3. Tap on *Stop* to stop recording.
A file name is generated.
4. Edit the file name as desired.
The recording file is saved to *My files* > *Audio*.

Append recording to a file

1. Select the desired file.
2. Tap on *Options* > *Append*.
The new recording is added to the file.

Edit recording files

1. Select the desired file.
2. Tap on *Options* to select *Rename*, *Delete*, or *Delete all files*.

Send an audio file

1. Select the desired file.

2. Tap on *Options* > *Send* to send the audio file via the MMS, E-mail, or Bluetooth.

Set your recording as a ringtone

1. Select the desired file.

2. Tap on *Options* > *Set as ringtone*.

The recording is added to your ringtone file list.

The ringtone of your incoming calls is changed to the recording. To change the ringtone, see "Sounds" on page 83. To use the ringtone for contacts, see "Adding or editing contacts" on page 37 or see "Group your contacts on the Smart Phonebook" on page 39.

Using your clock and timer

Alarm

You can set up to five alarms.

To set an alarm

1. Check that your clock is correctly set (see "Set clock" on page 15).
2. Go to *Tools* > *Alarm*.
The screen of alarm list appears.

3. Select an alarm, and tap on *Edit* to enter the alarm setting screen.

Time: Set the alarm time.

Repetition: Repeat the alarm on one or some of the weekdays or weekends. Tap to select your option. Tap on *Done* to finish setting.

Alarm tone: Tap to select an alarm tone.

Snooze: Select an alarm interval: *5*, *10*, or *20* minutes.

Alert type: Select how the alarm sounds at the set time.

4. Tap on *Done* when you finish setting the alarm.
5. To turn off an alarm, tap on an alarm, and then *Off*.

To use an alarm

At the set alarm time, your alarm rings or vibrates, depending on the alert type you have selected (see "To set an alarm").

Select *Stop*: The alarm stops. If you have selected repeat mode for the alarm (see "To set an alarm"), it will sound again at the set time.

Select *Snooze*: The alarm will sound again after the set *Snooze* interval.

To mute the sounding alarm, you can also turn over the phone (front side to the back, back side to the front, see "Sensor" on page 6).

The alarm clock will ring or vibrate, even if your mobile phone is switched off, or the *Profiles* is set to *Meeting* or *Silent*.

World clock

You can display two clocks on the idle screen, one showing your local time, and one the time of your destination.

1. Check that you have set your local time and date.
2. Go to *Tools* > *World clock*.

Local setting/Foreign setting: Tap  or  repeatedly to select a city. If necessary, tap *Options* to turn *Daylight saving/Daylight saving for foreign city* on or off.

Switch local/foreign: Tap to switch between local and foreign clock.

Alarms, reminders, programmed events are time zone independent! If you set an alarm or an event at 9:00 AM in time zone A, it will still ring or be due at 9:00 AM if you change to time zone B.

Stopwatch

Use the stopwatch for your timing needs.

In *Tools* > *Stopwatch*,

- Tap on *Start* to start timing.
- Tap on *Pause/Continue* to pause or resume.
- Tap on *Restart* to reset the timer.
- Tap on *Back* to exit.

Text reader

This menu allows you to view text files (.txt file) saved on your phone or memory card. To view a file through the text reader,

1. Copy and save the file to *My files* > *Phone* or *Memory card* > *Others* > *Ebook*.
2. Go to *Tools* > *Text reader*. Tap on *Options* > *Global settings* > *Select storage* to select the storage location: phone or memory card, if you have inserted a memory card into your phone.
Existing files are listed in the Bookshelf screen.
3. To display a file correctly, open it and tap on *Options* > *Global settings* > *Encoding*. Select the encoding suitable to your language.

To search for information when viewing a file

You can search for specific words, marked information, or different parts of the file. After opening the file, tap on *Options* to select:

- *Find*: Find specific words in the file.
- *Go to bookmark*: Go to the marked information. To do so, add a bookmark where desired by tapping *Options* > *Add bookmark*.

- *Jump to*: Go to the beginning, middle, or end of the file. To skip a certain percentage of the file, select *Input percentage* and tap on *Edit* to enter your desired percentage number.

To clear the files created by the system during E-book reading

- Go to *Tools* > *Text reader*. In the screen of file list, tap on *Options* > *Cleanup bookshelf*.

Using the torch

On the back of the phone, a torch function is equipped, which you can also use as the flash for camera. To turn on the torch,

- Select *Tools* > *Torch*. Tap on *On*.
- To turn on the torch from idle screen, drag



Using your business assistant

Back up your phonebook

You can back up all your contact information stored in phonebooks, and restore such information when necessary.

To back up your phonebook

1. Go to **Tools** > **Phonebook backup**, and select **Back-up to memory**.
 - Select your desired backup location, phone or memory card.
 - Select your desired folder where the backup file is to be stored.
To create a sub-folder, tap on **Create** or **Options** > **New folder**.
2. Tap on **Done**, and name backup file.
The backup starts.

To restore the backup phonebook

1. Go to **Tools** > **Phonebook backup**, and select **Restore from memory**.
2. Select the backup file. Tap on **OK**.
The contact information is restored to where it is.

Firewall

Use the firewall to reject the incoming calls or messages from those included in the blacklist.

Mode: Turn the firewall mode on or off.

Black list numbers: Edit a list of phone numbers. You can reject all the calls or messages from such numbers.

To add a phone number from your phonebook

1. Go to **Contacts** > **View contacts**. Select your desired page of contacts.
2. Select your desired contact from the list.
3. Tap on **Options**, and select **Add to blacklist**.

To change the type of firewall

You can use the firewall to reject incoming calls only, incoming SMS messages only, or both incoming calls and SMS messages.

1. Go to *Tools > Firewall > Black list numbers*.
The black list of contacts and numbers appear.
2. Tap to select a contact or number. Tap on *Options > change type*.
Current type is highlighted.
3. Tap to select the desired type. Tap on *Select* to confirm.

Calculator

Enter figures and operation symbols by using the the on-screen numeric keypad.

Currency converter

Convert between different currencies based on exchange rates.

1. In *Tools > Currency converter*, enter your exchange rate in *Rate*. Tap on *Done* to confirm.
2. In *Rate*, if necessary, press  or  to switch foreign versus local currency to local versus foreign currency.
3. Enter the sum of money in *Local*. Tap on *Done*.
You will get the result in *Foreign*.

The result of the calculator is indicative only. The calculation accuracy is 10 decimal places. The result is then truncated after the 10th decimal digit for the next operation.

7 Browser



You can use this function to browse the Internet. Consult your network operator for the service subscription, data account information, and WAP settings.

Managing your browser

In *Browser* > *Settings*,

Edit account: Define or select your Internet access settings.

Browser options: Define the time for an access attempt, or choose whether to show images on web pages.

Clear cache, *Clear cookies*: Clear the history and cookies of the browser.

Accessing web sites

You can access a web site in different ways:

Home: Access the homepage. Save your favorite web site as the homepage.

Bookmarks: Access the web site saved as a bookmark. By storing a website as bookmark, you can save and quickly access your favorite websites, and forward them in your messages (see "Add bookmark text" on page 28).

Enter address: Enter a web site address.

History: Access a web site you visited before.

Select SIM: Select a SIM card to access Internet, default is *SIM1*.

Or choose *Always ask*, always select SIM card before accessing Internet.

Enabling/disabling push messages

WAP push messages are specially formatted SMS messages that contain a URL. With such a URL, you can connect to a web site address

through the WAP browser of your phone.
To enable or disable the function, go to [Browser](#)
> [Settings](#) > [Service message settings](#).

STK

The availability of the features in this menu depends on whether or not your SIM card supports STK. If your SIM card supports STK function, the STK menu will be displayed on the screen.

8 Camera



Your mobile phone features a digital camera that allows you to take pictures (up to 5.0 Mega pixels) and record short video clips.


Camera

Take photos

- To go to the camera mode from idle screen,
 - long press the side camera key;
 - or, tap on  > *Camera*.Tap on  to switch to the camera, if necessary.
- To use the photo for different purposes, tap on  to select settings:
 - **To send the photo via MMS or Email**, check that *VGA(640 x 480)* is

selected in *Image size* and *Normal* in *Adv. settings > Image quality*.

- **To set the photo as contact picture** (see "Add a contact to Smart Phonebook" on page 37), check that *Contact pictures* is selected in *Image size*.
- Press the side camera key gently to focus. A green square appears. Hold down the camera key until the auto focus is completed and picture captured.

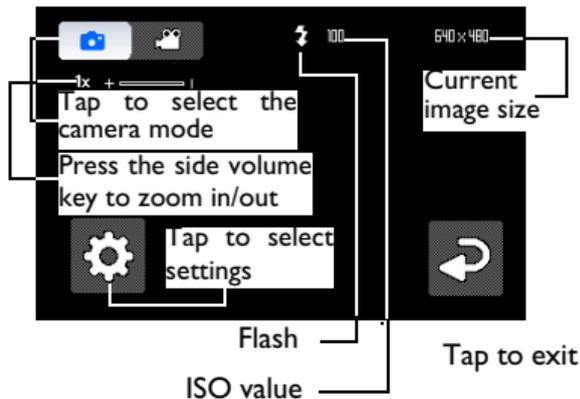


After a photo is taken



After a photo is taken, the photo is saved to *My files* > *Phone* or *Memory card* > *Pictures*, depending on the storage location you select in > *Adv. settings* > *Storage*.

- Tap on to delete the photo.
- Tap on to set the photo as wallpaper.
- Tap on to send the photo via the MMS (for file size smaller than 100k), E-mail (for file size smaller than 200k), or Bluetooth.
- Tap on to exit and continue photographing.

Select settings

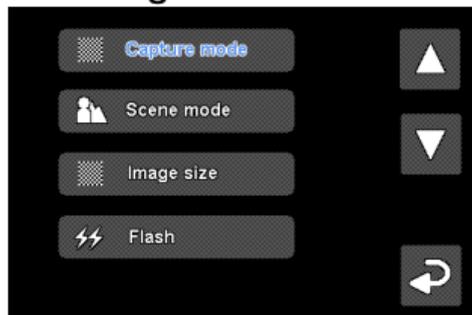

- Tap on to select settings. Press or to browse options. Tap an option to select. Press to return to the previous menu.
- To restore default settings, tap on *Adv. settings* > *Restore*.

To adjust settings to different scenes

- In *Scene mode*, select
 - *Auto*: Automatic adjustment to scenes
 - *Portrait*: Settings for portrait shooting
 - *Landscape*: Settings for landscape shooting

- **Night**: Settings for shooting at night
- **Sport**: Settings for sports shooting. When the sport scene is selected, the auto focus range is set for panoramic shots automatically.
- **Document**: Settings for document shooting. When the document scene is selected, the auto focus range is set for close-up shots automatically.
- **Anti-shake**: Settings to detect vibration and keep steady shot.

To use optimal settings

- In **Capture mode**, select
 - **Best shot**: for ideal exposure and clarity
- Select **Face detection** for ideal exposure and clarity of faces.

To easily adjust focus on off-center subjects

- In **Adv. settings** > **AF zone**, select **Multi-zone**.
5 viewfinders appear when you gently press the side camera key to focus. Move the lens to adjust focus areas in relation to the central one.

To shoot photos under insufficient brightness

- Use the flash. At the back of the phone, the built-in flash helps increase the brightness.
 - In **Flash**, tap to select **On**.
 - To use the flash when capturing faces, also select **Red-eye reduction** in **Flash**.
- Select a higher ISO value. However, high ISO values may cause noises in your photo, harming the sharpness.
 - In **ISO**, tap to select a higher value.

To shoot photos with desired frames

- In **Capture mode**, select
 - **Add frame**: to add a frame around to-be-captured subjects.

To take photos in a sequence

1. In **Capture mode**, select **Continue shot**.
 appears on the screen.
2. Press the side camera key gently to focus. A green square appears. Hold down the camera key until the auto focus is completed and all pictures captured.

Photos are captured continuously until you release the press on the side camera key. All the photos are saved.

Or,

1. In *Capture mode*, select *Burst shot sel.*



appears on the screen.

2. Take photos as described in Step 3 under "Take photos".

3 photos are captured at a time. Thumbnails appear on the screen.

3. Select a photo. Tap on  to save the selected photo;

Tap on  to send the photo via the MMS, E-mail, or Bluetooth (see Step 2 under "Take photos" on page 52);

Tap on  to cancel the selection;

Tap on  to exit and continue photographing.

To take a close-up shot

Adjust the auto focus range to shoot subjects within a short distance.

- In *AF range*, tap to select *Macro*.

To take a panoramic shot

Adjust the auto focus range to shoot subjects in panoramic view.

- In *AF range*, tap to select *Infinite*.

To take photos for yourself

To take photos for yourself, you need time to point the lens to yourself after you select the view, and hold down the side camera key. To delay the shooting,

1. In *Self-timer*, select a time span.

The selected time span appears on screen when you return to the photographing mode.

2. Take photos as described in Step 3 under "Take photos".

Photographing will start after the set time span.

3. Turn over the phone (front side to back) to point the lens to yourself.

To take photos using different exposure values

At a time, 3 photos can be captured in different exposure values.

1. In *Capture mode*, select *EV bracket sel.*
2. Take photos as described in Step 3 under "Take photos".
3 photos are captured at a time. Thumbnails appears on the screen.
3. Select a photo. Tap on  to save selected photos;
Tap on  to send it via the MMS, E-mail, or Bluetooth (see Step 2 under "Take photos" on page 52);
Tap on  to cancel the selection;
Tap on  to exit and continue photographing.

Advanced light settings

- To select how to highlight different areas in a photo, tap on *Adv. settings > AE meter*.
- To avoid the impacts on photos caused by flickers from lighting sources, such as

fluorescent lamps, tap on *Adv. settings > Remove flicker*. Select *50Hz* if the AC power supply is 220V, and *60Hz* if 110V.

Color settings

- To remove the effects on colors by surroundings, tap on *White balance* to select the scenes similar to yours.
- To add effects, tap on *Effects* to select the your options.
- To increase or decrease contrast, tap on *Adv. settings > Contrast*.
- To make colors more or less pronounced, tap on *Adv. settings > Saturation*.
- To sharpen or blur the borders between objects, tap on *Adv. settings > Sharpness*.

Other settings

- **Select image size and quality as needed.**
Lower image quality may decrease the photo clarity, but reduce the file size. Set your desired value in *Image size* and *Adv. settings > Image quality*.

- **Contact pictures:** for photos to be set as contact picture
 - **WQVGA (400 x 240)** or higher: for photos to be zoomed in and set as full-screen wallpaper
 - **VGA (640 x 480)** size and **Normal** image quality: best resolution for photos sent via the MMS and E-mail
 - **3M:** for to-be-printed photos in postcard size
 - **4M/5M:** for to-be-printed photos in a larger size
- **Display time on photos.** Tap on *Adv. settings* > *Time stamp*.
- **Adjust the shutter sound in the time of shooting.** Tap on *Adv. settings* > *Shutter sound*.

View photos

You can view photos in the camera, or, under *My files* > *Phone* or *Memory card* > *Pictures*.

1. In the camera mode, tap on  > *View pictures*. Select your desired photo.

If necessary, tap on  > *Adv. settings* > *Storage* to select storage location.

2. **To move to the previous or next photo,**
 - On the screen, move your finger to the left or right;
 - Or, tap on the screen to show the on-screen menu, if necessary. Tap  or .
- To zoom in or out the photo,**
If the photo is taken in a size equal to or greater than 400 x 240,
 - Tap on the screen to show the on-screen menu, if necessary. Tap on the zoom icon  or .
 - After zooming in a photo by tapping on , slide the screen using your finger. You can browse the details on different portions of the photo.  shows the position of current portion in the photo.

To view photos one by one

1. Go to *My files* > *Phone* or *Memory card* > *Pictures*.

2. Select the photo you will start with. Tap on *Options* > *Slide show*.
3. To select the playback settings, tap on *Settings*:
Type of play > *Auto (Once)*: Play photos one by one once and automatically.
Type of play > *Auto (Repeat)*: Play photos one by one repeatedly and automatically.
Type of play > *Manual*: Tap on  /  to move to previous or next photo.
Speed: Select long or short interval between photos.
Effect: Select the transition between two photos.
Horizontal view > *On*: Show photos in horizontal view.
Horizontal view > *Off*: Show photos in vertical view.

Set photos as wallpaper

You can set a photo as wallpaper, or use the default wallpapers (see "Wallpaper" on page 83).

1. Select your desired photo (see Step 1 under "View photos").
2. Tap on the screen to show the on-screen menu, if necessary. Tap on .

To set the photo as full-screen wallpaper

1. Tap on  to zoom in the photo. Slide the bar in  to select your desired portion. Tap on .
2. To save the full-screen wallpaper as another file, tap on the screen to show the on-screen menu, if necessary. Tap on .

Share and use photos

see "Sharing your files" on page 71, and see "Use a picture file as contact picture" on page 72.

Video recorder

Video recording

1. To go to the video mode from idle screen,
 - long press the side camera key;

- or, tap on  > *Camera*.
Tap on  to switch to the video, if necessary.
2. To set the video length, tap on  > *Record limit*.
 - To send the video clip via MMS, select *Size 95 k*, if you have selected *176 x 144* or *320 x 240* in  > *Record size*.
 3. Press and hold the side camera key until the video recording starts.
 4. To stop recording, tap on , or press and hold the camera key.

To zoom in or out

- Press the side volume key (if you have selected *176 x 144* or *320 x 240* in  > *Record size*).

To keep adjusting focus during recording

- Tap on  > *Adv. settings* > *AF mode*. Select *Cont. focus*.
During the video recording, keep holding down the side camera key.

After a video clip is recorded

After a video clip is recorded, the recording is saved to *My files* > *Phone* or *Memory card* > *Videos*, depending on the storage location you select in  > *Adv. settings* > *Storage*.

- Tap on  to delete the video clip.
- Tap on  to send the video clip via the MMS (for file size smaller than 100k), E-mail (for file size smaller than 200k), or Bluetooth.
- Tap on  to exit and continue recording.

Select settings

- Tap on  to select settings. Press  or  to browse options. Tap an option to select. Press  to return to the previous menu.

- To restore default settings, tap on [Adv. settings](#) > [Restore](#).

To adjust settings to different scenes

- In [Scene mode](#), select
 - [Auto](#): Automatic adjustment to scenes
 - [Night](#): Settings for shooting at night

To turn on/ off audio recording in the time of video recording

- In [Adv. settings](#) > [Record audio](#), select [On](#) or [Off](#).

To take a close-up shot

Adjust the auto focus range to shoot subjects within a short distance.

- In [AF range](#), tap to select [Macro](#).

To take a panoramic shot

Adjust the auto focus range to shoot subjects in panoramic view.

In [AF range](#), tap to select [Infinite](#).

To select video size or quality

- Select the video size according to the screen resolution. For ideal playback on this phone, select [640 x 480](#) in [Record size](#).

- To select video quality, tap on [Adv. settings](#) > [Video quality](#). You can reduce the file size by selecting a low video quality.

To set time or size limit to video clips

- In [Record limit](#), tap to select your option.

Color settings

see "Color settings" on page 56.

To remove flickers during recording

- To avoid the impacts on photos caused by flickers from lighting sources, such as fluorescent lamps, tap on [Adv. settings](#) > [Remove flicker](#). Select [50Hz](#) if the AC power supply is 220V, and [60Hz](#) if 110V.

Play video clips

Your video recording is saved to [My files](#) > [Phone](#) or [Memory card](#) > [Videos](#). To play a video clip,

1. In the video mode, tap on  > [View videos](#). Select your desired video clip.
If necessary, tap on  > [Adv. settings](#) > [Storage](#) to select storage location.

2. Tap on the screen to show the on-screen menu, if necessary.

: Tap to start or pause playback.

: Tap to select playback speed.

: Tap to exit.

: Tap to select your playback settings.

: Tap to capture a screenshot during video playback.

All screenshots are saved as photos.

Share video clips

see "Sharing your files" on page 71.

9 Fun



Java

Your mobile phone features a Java run-time environment, which allows you to run Java applications, such as games downloaded from the network.

The first time you launch Java, a message appears to alert you that the installation and configuration of Java will take several moments.

Install Java games and applications

You can download Java games and applications from the Internet to your phone via the WAP, or install them from PC via the supplied USB cable.

Consult your network operator for the services.

When installing games via a USB data cable, make sure that you save the .jar file under *My files* > *Others*. Tap on *Intall* to start the installation.

Run Java games and applications

Your phone is preloaded with some Java games and applications. Select your desired program, tap on *Launch* to start it.

To run some Java applications (untrusted third party software) on your phone, you may need to adjust the Java settings.

1. In *Fun* > *Java*, select the application to be launched.
2. Tap on *Options* > *Settings*, and select your option as needed:
 - Network access*: permission to network access
 - Auto invocation*: permission to launch the MIDlet automatically
 - Messaging*: permission to send and receive

messages

Multimedia: permission to photographing, or sound/video recording

Read user data: permission to read your data, like contacts and calendar entries

Write user data: permission to write your data

Local connectivity: permission to local connectivity, like the Bluetooth connectivity.

Sensor games

In *Fun* > *Sensor games*, your phone is preloaded with some sensor games, for which you can use the built-in motion sensor.

In the games, to go to the left or right, you can move your phone in the direction.

10 Music



Music player

Save MP3, WMA, AAC, AAC⁺, MIDI, WAV and AMR music files under the [Audio](#) folder on your phone or memory card. You can play the music on your phone.

Create your music library

Edit music files on your PC

1. Run Windows Media Player (or other music management program) on your PC.
2. To add music files, click [Media Library](#) on the left menu, and then click [Add](#) on the top menu.
3. On the left pane, select [All Music](#).
On the right pane, all the music files you added are displayed.

4. Click [Title](#), [Artist](#), [Album](#) to edit them as desired.

Operations may vary according to music management software or Windows Media Player versions. Consult the help file of the software.

Transfer music files from PC to your phone

1. Use the supplied USB data cable to connect your phone with the PC. Select [Mass storage](#) on your phone.
2. Copy the music files from the PC to the [Audio](#) folder on your phone or memory card (see "Insert the SIM card" on page 12).
3. Remove your phone (a USB mass storage device) from the PC safely.
4. On your phone, go to [Music](#) > [Music player](#) > [Settings](#) > [Refresh list](#).
All the music files are transferred.

Play music

The music files are organized in two folders on the phone or memory card.

Tracks: all the songs on your phone.

Artists: songs sorted by artist.

Play music files

1. If you have inserted a memory card on your phone, select your music source in *Music* > *Music player* > *Settings* > *Music source: Phone* or *Memory card*.

2. Select your desired song in a folder. You start playback from the song. On the playback screen, the file information and selected playback settings are displayed.

3. To select your playback settings, tap on

Options:

Set as ringtone: Set current song as the ringtone of incoming calls.

Play in background: Continue to play music after exiting the music player.

Turn off audio player: Exit the music player.

Add to playlist: Add current song to a selected playlist.

Equaliser: Select sound settings suitable to your songs.

Repeat: Select *One* to play current file repeatedly; select *All* to play all the files in the folder repeatedly.

Shuffle > *On*: Play music files in the folder randomly.

4. During playback (on the playback screen), if necessary, select *Now playing* on the *Music player* screen to go to the playback screen.

: tap to start or pause playback.

: tap repeatedly to select a song.

: long tap for rewinding or fast forwarding.

Back: tap to return to the previous menu.

- Press the side volume key to adjust the volume.

- Press  to go to the idle screen.

To continue to play music after exiting the music player

- Go to *Music > Music player > Settings > Play in background*, and select *Ask first* or *Always*.

To turn off the music player on the idle screen

- Press , and then tap on *Yes*.

When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing.

Create playlists

You can create up to 10 playlists for songs that you wish to play at this time. Your last played songs are saved to *My playlists > Last played*.

1. Select your desired song.
2. Tap on *Options > Add to playlist*. Existing playlists are displayed.
3. To create a new playlist, tap on *Create* or select *My playlists > New playlist*, and then assign a file name to the playlist. Repeat Step 1 and 2.

4. Select the playlist where you add the song. The song is added to the selected playlist.

Listen to music through a stereo Bluetooth headset

1. Check that your phone is connected to a stereo Bluetooth headset that supports A2DP profile (Bluetooth stereo output). For the Bluetooth connection, see "Connecting to a Bluetooth device" on page 75.
2. In *Music > Music player > Settings > Bluetooth settings*,
BT stereo output: Tap on  or  to select *On*.
BT stereo headset: Tap to select a connected stereo Bluetooth headset.
3. Play your music files (see "Play music" on page 65).

To play music through the loudspeaker again

1. Select *Off* in *BT stereo output* (see Step 2 in "Listen to music through a stereo Bluetooth headset").
2. Turn off the Bluetooth headset.

FM radio

Tune to a radio station

To tune to a radio station, always plug the supplied headset into your phone.

• Auto tune:

- In *Music > FM radio*, select *Options > Auto preset*.

The radio frequency scanning starts automatically. Up to 20 available radio stations are saved to *Channel*.

The first preset radio station starts to play.

Or,

- In *Music > FM radio*, press  or  to start the auto tuning to the next available station, if you have selected *On* in *Options > Settings > Auto search*.

• Manual tune:

- In *Music > FM radio*, select *Options > Manual input* to enter your desired radio frequency.

Or,

- In *Music > FM radio*, repeatedly long press  or  to tune to a frequency, if you have selected *On* in *Options > Settings > Auto search*.

Edit the channel list

You can assign a preset to a certain location. In this way, you can quickly tune to the desired station.

1. In *Music > FM radio*, tap on *Channel* to enter the channel list.
2. Tap on a location for your preset .

3. Tap on [Options](#) > [Edit](#) to edit the channel list:
[Channel name](#): Name or rename the channel.
[Frequency](#): Enter your desired frequency. The old frequency in the location is replaced.

Listen to a radio station

1. Go to [Music](#) > [FM radio](#).
The last played station starts to play.
2. Tune to your desired station (see "Tune to a radio station" on page 67). To select a preset station,
 - press  or  repeatedly, if you have selected [Off](#) in [Options](#) > [Settings](#) > [Auto search](#);
 - or, tap on [Channel](#).
3. On the radio playback screen,
: Tap to pause or resume radio playback. Press the side volume key to adjust the volume.
[Options](#) > [Settings](#) > [Background play](#): Select

[On](#) to exit the radio and continue playback on idle screen.

[Options](#) > [Loudspeaker](#): Turn it on to listen to the radio through the speaker.

4. To return to the idle screen during playback, press .

To turn off the radio on the idle screen

- Press , and then tap on [Yes](#).

Record radio programs

You can record a radio program when listening to it.

1. On the radio playback screen, tap on [Options](#) > [Record](#) to start recording.
2. Tap on [Pause/Cont.](#) to pause or resume recording. Tap on [Stop](#) to stop recording. A file name is generated for the recording file.
Edit the file name as desired, if necessary.
3. Tap on [Save](#) to save the file.
You can find the recording file under [My files](#) > [Phone](#) or [Memory card](#) > [Audio](#).

RDS (dependent on the radio station service)

The feature RDS (Radio Data System) is a service that allows FM stations to send additional information along with the regular FM radio signal.

When you are listening to an RDS station, received text information appears on the screen, including station name, program type (for example, News, Sports, and Info), and frequency.

To enable the RDS reception of your phone

In *Music* > *FM radio*, tap on *Options* > *Settings* > *RDS*, and select *On*.

My files



On the phone, all the files are stored under the folders of the phone memory or memory card.

Finding your files

1. Go to *My files*.
2. Select *Phone* or *Memory card*, if you have installed a memory card on your phone. Select your desired file folder:
Pictures: for photos, .jpg files and others
Videos: for video files, and others
Audio: for audio files, like sound recording, radio recording, music files, ringtones, and others
Others: for all other files, like Ebook (for files readable through *Tools* > *Text reader*), and files received via the Bluetooth

3. If necessary, open a folder, and tap on *Options* to select your view settings:
Sort by: Show files in the order of name, type, time or size.
Browse style (for pictures only): Show files as a list (file details and thumbnails), or thumbnails only.

Select your default storage location

- Go to *Settings* > *General* > *Default storage*. Tap to select the default location, phone or memory card.

Managing your files

Create sub-folders

You can create sub-folders under the folders (like *Pictures*, *Videos*, *Audio* and *Others*) or an existing sub-folder.

1. Select a folder or sub-folder under which you wish to create a folder.
2. Tap on *Create* or *Options* > *New folder*.

3. In the editing screen, enter a file name.
A sub-folder is created.

Manage your files

You can copy and move, delete, or rename your files.

To copy, move, or delete a file

1. Select a file under a folder.
2. Tap on *Options* to select your desired option.
3. To copy or move a file, select the desired folder, and tap on
Done: Move or copy the file to current folder or sub-folder.
Open > *Options* > *Open*: Open a sub-folder under current folder/sub-folder.
Open > *Options* > *New folder*: Create a sub-folder under current folder/sub-folder.

To copy, move, or delete multiple files

1. In a file folder, tap on *Options* > *Select multiple*.

2. Select *Select all* or *Select one by one* to display a fully checked or unchecked list.
Tap to check or uncheck your selection.
3. Follow Step 2 and 3 under "To copy, move, or delete a file".

Sharing your files

You can share your picture, audio or video files with others via the MMS, E-mail, or Bluetooth.

1. Select your desired picture, audio or video file, and tap on *Options* > *Send*.
2. Select the option to send the file via the MMS, E-mail, or Bluetooth.
 - MMS: for photos smaller than 100k in size (see Step 2 under "Take photos" on page 52);
for videos 95k in size (see Step 2 under "Video recorder" on page 58).
 - E-mail: for file sizes smaller than 200k. To take photos as E-mail attachment, see Step 2 under "Take photos" on page 52.

- If you send your files via the Bluetooth, check your Bluetooth connection first. (see "Bluetooth" on page 75)

Using your files

Use a picture file as contact picture

- Select the photo, and tap on *Options* > *To Phonebook*.

The photo is set to the contact picture of a contact in your Smart Phonebook (see "Add a contact to Smart Phonebook" on page 37).

- To take photos as contact picture, select *Contact pictures* in *Image size* (see Step 2 under "Take photos" on page 52).

Use a picture file as wallpaper

see "Set photos as wallpaper" on page 58.

Set an audio file as ringtone

- Select an audio file, and tap on *Options* > *Set as ringtone*.

You can set the audio file to ringtone (see "Sounds" on page 83), or associated sound of contacts (see "Add a contact to Smart Phonebook" on page 37).

12 Calls



Call history

You are provided with the records about your incoming and outgoing calls.

Go to [View calls](#) to check your call history.

There are three pages on top of all calls: [All](#), [SIM1](#) and [SIM2](#). Select one of them, the call history is listed accordingly.

You can reply to such calls or add such contacts to your phone book. Go to the call list, select the contact or phone number, and tap on [Options](#) to select your options.

Go to [Clear history](#) to clear your call history as desired.

Call options

This menu allows you to set call-related options.

[Headset answer](#)

Turn it on to answer an incoming call automatically when using a headset (see "Headset" on page 99). Tap to turn it [On](#) or [Off](#).

[Any key answer](#)

Turn it on to answer an incoming call by briefly pressing any key (except for ). Tap to turn it [On](#) or [Off](#).

[Call time reminder](#)

Get reminded after the call time span once or repeatedly.

[Call services](#)

[Call timers](#): Depending on your network, rounding-off for billing purposes, taxes and others, the actual time invoiced for calls and services by your service provider may vary.

Call cost: network-dependent

Call waiting: Get informed of an incoming call when on phone (network-dependent, see "Answer a second call" on page 25).

Caller ID: Set how to show your number to the called party (network-dependent).

Call divert

Divert incoming calls to your voice mailbox or to another phone number (regardless of whether or not the number is in your phonebook).

Call barring Set limits to your incoming and outgoing calls. Select *Change barring password* to change the call barring password.

This feature is network dependent and requires a specific call barring password supplied by your service provider.

Auto redial Keep redialing the call number that fails to go through.

Fixed dial Restrict your outgoing calls to certain numbers (PIN2 code required).

13 Bluetooth



About Bluetooth

Your phone supports Bluetooth wireless technology, allowing connection to a compatible Bluetooth device within 10 meters. The Bluetooth connection can be subject to interference from obstructions such as walls or other electronic devices.

Before you can apply Bluetooth, make sure the other device supports Bluetooth function by contacting the device's manufacturer or its accompanied documentation.

Connecting to a Bluetooth device

Consult the user documentation of the Bluetooth device to be connected. Prepare the Bluetooth device for pairing.

1. Go to **Bluetooth** > **Power**. Tap on **On**, if necessary, to turn on the bluetooth function.
You can also turn on the Bluetooth function from the idle screen. Drag the  at the top of the idle screen, and tap on **On**.
2. Select **Find devices** to start searching for available Bluetooth devices.
A list of available Bluetooth devices appears.
3. Select the device you wish to connect.
4. Enter your Bluetooth password (0000 by default) to start pairing.
The pairing is made if your pairing request is accepted by the other device.

To connect to a device you connected previously

1. On the device, check that the Bluetooth function is enabled.
2. Turn on the Bluetooth of your phone.
3. On your phone, go to *Bluetooth* > *My devices*. Check that the device is in the list. The connection is established. If necessary, select the device and tap on *Connect*.

Use the Bluetooth stereo headset

1. Consult the user documentation of the Bluetooth headset.
 - Check that your Bluetooth headset supports A2DP profile (Bluetooth stereo output).
 - Prepare the Bluetooth headset for pairing.
2. On your phone,
 - Check that the Bluetooth function is enabled. Select *Bluetooth* > *Find devices* to

start the connection with the Bluetooth headset (see "Connecting to a Bluetooth device" on page 75).

3. Select and play your desired music or audio files.

To control music playback through a Bluetooth headset

Consult the user documentation of the Bluetooth headset. Check that your Bluetooth headset supports AVRCP profile (Audio/video remote control).

Getting connected by a Bluetooth device

- Go to *Bluetooth* > *Settings*:
 - Change device name*: Edit the name of your phone.
 - Visibility*: Turn it on to make your phone visible to other Bluetooth devicesThe pairing is made when you receive and accept the pairing request (enter the password 0000 if necessary).

Editing your device list

All the devices you have connected are saved to *My devices*. To edit the device list,

1. Go to *Bluetooth > My devices*.
2. To rename or delete a device, tap on *Options* to select your options.

If you do not use the Bluetooth feature for some time, you should deactivate it in order to conserve battery power.

14 Profiles



Adjusting ringer settings to different scenes

The profiles are defined for several scenes. They consist of the settings for ringtones, volume, and others. With preset profiles, you can easily adjust the settings for incoming calls and messages as desired.

Define your profiles

This phone has provided you several preset profiles. You can use the default settings or change them as desired.

The settings for *Flight mode* (on a plane) and *Silent mode* are unchangeable.

To change the settings

1. In *Profiles*, select the profile to be changed. Tap on *Modify*.
2. Select the item to be changed. Tap to select your desired options.
3. Repeat Step 2 until you finish the settings. Tap on *OK*.

Apply a profile

1. In *Profiles*, select the profile to be applied.
2. Tap on *Activate* to activate the profile.

If you select *Flight mode*, you disable the connection between your phone and your mobile phone network.

I5 Settings



SIM settings

Dual SIM There are shortcut for SIM settings on the idle screen, see "SIM settings shortcut and prompt screen" on page 6.

Change current SIM card slot settings:

Slot 1 settings/Slot 2 settings

- Set SIM card name;
- Select an icon for displaying SIM card to identify which card is receiving a call or message;

- *Active mode*: select on or off.
 - *On*: receive calls and messages.
 - *Off*: do not receive calls and messages.

Primary settings

The default SIM card is SIM1. You are provided services by primary SIM by default.

Tap on *SIM1* or *SIM2* to select the primary SIM card.

Ask when power on

Display SIM settings screen or not while power on the phone.

Customize the functional displays on idle screen

Dashboard Select functional displays to be shown on the idle screen (see "Functional displays" on page 5).

General

Language Select a language for your phone.

Time & date Set the clock of the phone (see "Set clock" on page 15).

Auto power-on time: Set time for the phone to be switched on automatically.

Auto power-off time: Set time for the phone to be switched off automatically.

Quick call dashboard

Call a contact by long pressing the relating contact icon on the idle screen (see "Quick call" on page 21).

Speed dial

Call a contact by long pressing a numeric key (see "Speed dial" on page 22).

Motion sensor

Turn on/ off functions that are enabled by the motion sensor. see "To use the motion sensor" on page 6.

Pen calibration

see "Stylus" on page 6.

Security setup

This menu allows you to use passwords to protect your SIM card, phone, and information stored on the phone.

PIN protection: Set PIN or PIN2 password protection for your SIM card. (The PIN or PIN2 are provided by the network operator.)

If you enter an incorrect PIN code three times in succession, the PIN code of your SIM card will be locked automatically and you will be prompted to enter the PUK code to unlock it. You can obtain the PUK code from your network operator.

If you enter an incorrect PUK code ten times in succession, the SIM card will be locked permanently. When this happens, please contact your network operator or retailer.

Change PIN and *Change PIN2:* Change your PIN and PIN2 passwords as desired.

Phone lock: Set password protection for your phone. You are required to enter the password each time you turn on the phone (1122 by default).

Safeguard: Set password protection for the information stored on your phone.

- **Safeguard:** Enter your password to turn the password protection on or off (1122 by default).
- **Activation:** Enter your password to select the information that accepts the password protection: *msg(s)*, *Contacts*, *View calls* or/and *Speed dial*.
- **Change safeguard password:** Change your password as desired.

Default storage

Select the default storage location for your files: phone or memory card (if a memory card is inserted on your phone).

Memory status

Check the memory occupancy of Contacts, Messaging and My files: on phone and SIM card, or on phone and memory card (if a memory card is inserted on your phone).

Auto screen lock

Set an idle time span for the screen to be locked automatically.

To unlock the screen, short press  on the top of the phone. Or, drag out the innermost dot.

Factory settings

Restore your phone settings to the default values. You need to enter your phone lock password (1122 by default).

Display

Wallpaper Select an image as the wall paper of your phone. You can select either a default wallpaper or one of your pictures stored in *My files* (see "Use a picture file as contact picture" on page 72).

Themes Define the theme for your phone.

Backlight level Select the brightness of backlight.

Backlight duration Select the duration of backlight.

Greeting Select whether to show greetings when your phone is turned on.

Light sensor Select whether the phone adjust backlight level automatically according to ambient brightness.

Sounds

Alert type Select alert types.

Ringtones Select a ringtone for incoming calls and messages.

Ring volume Adjust the volume of rings.

Key sound Select whether the key sounds when pressed.

Tap vibration Select whether there is accompanying vibration for each tap.

Shutter sound Select shutter sounds for your camera.

Battery low Select whether a warning tone is emitted when the battery level is low.

Connectivity

This menu allows you to define the service settings available on your phone.

Call options

see "Call options" on page 73.

Network settings

You can set SIM1 and/or SIM2 network.

Network selection Select the network for your phone (service subscription-dependent).

Automatic is recommended.

Preferences Select your preferred network.

You can select a network other than your home network only if it has a valid roaming agreement with your home network. If you change the network, some problems may arise during the operation of your phone.

Browser

See "Managing your browser" and "Enabling/disabling push messages" on page 50.

Connections

The menu allows you to define the Internet access profiles of your phone. Such profiles are usually pre-defined in your SIM card. Consult your network operator for details.

Java settings

- Java audio* Set the volume level.
- Java vibration* Turn the vibration *On* or *Off*.
- Select SIM* Select SIM1 or SIM2.
- Java SIM1 Profile/Java SIM2 Profile* Select Java network for SIM1 and SIM2 (service subscription-dependent).
- Java network* Select a Java network (service subscription-dependent).
- Heap Size* Display allowed maximum size for Java memory.

Icons & symbols

In idle mode, several symbols can be displayed simultaneously on the main screen. When pressing some of the status icons, the corresponding menu will be displayed on the screen.

If the network symbol isn't displayed, the network is currently not available. You may be in a bad reception area, moving to a different location may help.



Silent - Your phone will not ring when receiving a call.



Vibration only - Your phone will vibrate when there is an incoming call.



Battery - The bars indicate the battery level
(4 bars = full, 1 bar = low).



SMS - You have received a new SMS message.



MMS - You have received a new multimedia message.



Wap message - You have received a Wap push message in the message inbox.



Missed call - You have a missed call.



Call divert - All your incoming voice calls are being forwarded to a number.



Bluetooth - Bluetooth feature is activated.



Bluetooth headset - The Bluetooth headset is connected.



Headset - The headset is plugged into the phone.



Alarm - The alarm clock has been activated.



Roaming - Displayed when your phone is registered to a network other than your own (especially when you're abroad).



Home zone - A zone designated by your network operator. Subscription dependent, contact your service provider for details.



GSM network: your phone is connected to a GSM network.

Reception quality: the more bars are shown the better the reception is.

Tap on the icon to switch between the flight mode and normal mode.



Wap message - You have received a Wap push message in the message inbox.



GPRS attach - Your phone is connected to the GPRS network.



EDGE - Your phone is connected to the EDGE network.



Memory card - Indicates the memory card is in use. You can access your memory card through the **My files** menu.

Precautions

Radio Waves



Your cellular mobile phone is a **low power radio transmitter and receiver**. When it is operating, it sends and receives radio waves. The radio waves carry your voice or data signal to a base station that is connected to the telephone network. The network controls the power at which the phone transmits.

- Your phone transmits/receives radio waves in the GSM frequency (900 / 1800 / 1900 MHz).
- The GSM network controls transmission power (0.01 to 2 watts).
- Your phone complies with all relevant safety standards.
- The CE mark on your phone shows compliancy with European electromagnetic

compatibility (Ref. 89/336/EEC) and low voltage directives (Ref. 73/23/EEC).

Your cellular mobile phone is your responsibility. To avoid damage to yourself, to others or to the phone itself, read and follow all the safety instructions and make them known to anyone borrowing your phone. Furthermore to prevent unauthorised use of your phone:



Keep your phone in a safe place and keep it out of small children's reach.

Avoid writing down your PIN code. Try to remember it instead.

Switch off the phone and remove the battery if you are going to leave it unused for a long time. Change your PIN code after purchasing the phone and to activate call restriction options.



The design of your phone complies with all applicable laws and regulations. However your phone may cause interference with other electronic devices. Consequently you should

follow all **local recommendations and regulations** when using your cellular phone both at home and when away. **Regulations on the use of cellular phones in vehicles and aircraft are particularly stringent.**

Public concern has been focused for some time on the possible health risks for users of cellular phones. The current research on radio wave technology, including the GSM technology, has been reviewed and safety standards have been drawn up to ensure protection from exposure to radio wave energy. Your cellular telephone **complies with all applicable safety standards** and the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Always switch off your phone...

Inadequately protected or **sensitive electronic equipment** may be affected by radio energy. This interference can lead to accidents.



Before boarding an **aircraft** and/or when packing the phone in your luggage: the use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.



In **hospitals**, clinics, other health care centres and anywhere else where you may be in the close vicinity of **medical equipment**.



In areas with a potentially **explosive atmosphere** (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders).

In a vehicle transporting flammable products (even if the vehicle is parked) or a vehicle powered by liquefied petroleum gas (LPG), check first that the vehicle complies with the applicable safety rules.

In areas where you are requested to turn off radio transmitting devices, such as quarries or other areas where blasting operations are in progress.



Check with the vehicle manufacturer that **electronic equipment** used in your vehicle will not be affected by radio energy.

Pacemakers

If you have a **pacemaker**:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breastpocket.
- Use the ear opposite to the pacemaker to minimise the potential interference.
- Switch off your phone if you suspect that interference is taking place.

Hearing aids

If you are a user of a **hearing aid**, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

Improved performance

In order to **improve the performance of your phone**, reduce radio energy emission, **reduce battery consumption and ensure safe operation adhere to the following guidelines:**



For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position (when not using in hands-free mode or with a hands-free accessory).

- Do not expose your phone to extreme temperatures.

- Treat the phone with care. Any misuse will void the International Guarantee.
- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.
- Placing and receiving calls consumes the same amount of battery energy. However, the mobile consumes less energy in idle screen when kept in the same place. When in idle screen and while you are moving, your phone consumes energy to transmit updated location information to the network. Setting the backlight for a shorter period of time as well as avoiding unnecessary navigating in the menus will also help to save the battery's energy for longer phoning and stand-by performances.

Battery information

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat ($>60^{\circ}\text{C}$ or 140°F), moisture or caustic environments.



You should only use Philips Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an incorrect type of battery may also cause an explosion.

Make sure damaged parts are replaced immediately by a qualified technician and that they

are replaced with genuine Philips replacement parts.

Your mobile phone and your car



Studies have shown that speaking on the telephone while driving lowers your concentration, which can be dangerous. Adhere to the following guidelines:

- Give your full attention to driving. Pull off the road and park before using the phone.
- Respect the local regulations in countries where you drive and use your GSM phone.
- If you want to use your phone in a vehicle, install the hands-free car kit which is designed for that purpose.
- Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.
- The use of an alarm system to operate a vehicle's light or horn to indicate incoming

phone calls is prohibited on public roads in some countries. Check local regulations.

EN 60950 Norm

In hot weather or after prolonged exposure to the sun (e.g., behind a window or a windscreen), the temperature of your phone's casing might increase, especially when featuring a metallic finish. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40° C.

For your phone, the socket-outlet shall be installed near the phone and shall be accessible.

Environmental care



Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling.

Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



The labelled packaging material is recyclable.



A financial contribution has been made to the associated national packaging recovery and recycling system.



The plastic material is recyclable (also identifies the type of plastic).

WEEE Marking in the DFU: “Information to the Consumer”

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

 Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Tips

How to prolong the battery life of your phone

To have your mobile phone function properly, sufficient battery power is important. For the power-saving purpose, do the following, if applicable:

1. Turn off the Bluetooth function of your phone.
2. Set the backlight level of your phone to a low value. Or, turn on the light sensor.
3. Set the backlight duration of your phone to a low value.
4. Turn on the auto keypad lock. When the keypad is locked, your phone goes to the power-saving mode.
5. Turn off the key sounds, tap vibration, or vibration alerts.
6. Establish GPRS connection when needed. Otherwise, your phone will keep searching for GPRS connection, and drain your battery power.
7. Turn off your phone if there is no coverage. Otherwise, the phone will keep searching for network, and drain your battery power.

Troubleshooting

The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the mobile on.

The display shows **BLOCKED when you switch on the phone**

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The display shows **IMSI failure**

This problem is related to your subscription. Contact your operator.

Your phone doesn't return to idle screen

Long press the hang-up key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.

The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), check that the antenna is in place if your mobile has an external antenna, or contact your network operator for assistance/information.

The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect

the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use the Philips authentic accessory shipped with your phone.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display *Call I* or *Withheld* instead. Contact your operator for detailed information on this subject.

You can't send text messages

Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or

contact your operator for detailed information on this subject.

You can't receive and/or store JPEG pictures

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

You feel that you have missed some calls

Check your call divert options.

When charging, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).

In other cases please contact your phone supplier.

The display shows SIM failure

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

When attempting to use a feature in the menu, the display shows NOT ALLOWED

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows INSERT YOUR SIM CARD

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

The autonomy of your phone seems lower than indicated on the user guide

The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

Your phone doesn't work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

[Check with the local authorities whether or not you are allowed to use the phone while driving.](#)

Your phone is not charging

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear

Make sure that the camera lens on both sides is clean.

Philips Authentic Accessories

Some accessories, such as a standard battery, headset, USB cable and a charger, are included as standard accessories in your mobile phone package. Additional accessories may also be provided or sold separately. Package contents may therefore vary.

To maximize the performance of your Philips mobile phone and not to void the warranty, always purchase Philips Authentic Accessories that are specially designed for use with your phone. Philips Consumer Electronics cannot be held liable for any damages due to use with non authorised accessories.

Charger

Charges your battery in any AC outlet. Small enough to carry in a briefcase/handbag.

Headset

Your phone will activate the headset profile automatically when you plug in the headset.

When using the supplied one-key headset, press the key to answer a call, and long press the key to end the call.

USB cable

When connected to a computer through the USB cable (compatible with most computers), your phone can work as

Charger Charges the battery on the phone.

Mass Storage Allows the data transfer between PC and the phone, or the micro-SD card inserted into the phone;

Allows the data management on the phone, or micro-SD card through your PC.

Webcam Acts as a web camera on your PC.

COM port Allows you to back up phone data, like phonebooks, on a computer or recover the data from the computer.

To do so, install the supplied Data communication software (MobilePhoneTools) on your computer (see "Data communication software" as below).

When the transfer is finished, please make sure that you safely remove your device based on the instruction of your computer.

Data communication software

Data communication software (MobilePhoneTools) offers instant synchronization between your phone and your

computer. You can use the software for the data synchronization between your phone and PC, like phonebook, calendar, SMS messages, and audio/video/picture files. With the software and GPRS service, you can also connect your PC to the Internet through your phone.

Install MobilePhoneTools on your PC

1. Insert the supplied Data communication software into the CD drive.
2. Run the autorun.exe program.
3. Make selections as prompted, and installation starts automatically.

Connecting your Phone to the PC

1. Connect your phone to the PC using the supplied USB cable or through the Bluetooth.

When using the USB cable for connection, select **COM port** on your phone.

The first time you connect your phone to

the PC, wait till the USB driver of your phone is successfully installed.

2. On your PC, double click the MobilePhoneTools icon.

On the bottom left of the menu, “Philips X806 is connected” is displayed.

Trademark Declaration



T9[®] is a registered trademark of Nuance Communications, Inc.



JAVA is a trademark of Sun Microsystems, Inc.



Bluetooth[™] is a trademark owned by telefonaktiebolaget L M Ericsson, Sweden and licensed to Philips.

PHILIPS



PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. manufactured by Shenzhen Sang Fei Consumer Communications Co., Ltd. under license from Koninklijke Philips Electronics N.V.

Specific Absorption Rate Information

International standards

THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) that forecast a substantial safety margin for assuring the protection of all persons, regardless of age and health.

The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is **2.0W/kg averaged over ten grams of tissue**.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

The highest SAR value for this **Philips Xenium X806** model phone when tested for compliance against the standard was **0.197 W/kg** for ICNIRP recommendation.

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.

For body worn operation, this phone has been tested when used with an accessory that contains no metal and that positions the handset a minimum of 1.5cm from the body.

Limited Warranty

1. What Does This Limited Warranty Cover?

Philips warrants to the original retail purchaser (“Consumer” or “You”) that this Philips cellular product and all accessories originally provided by Philips in the sales package (“Product”) are free from defects in materials, design and workmanship under normal use in accordance with the operating instructions and pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in Philips’ intended country of sales of the product.

2. How Long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase of the Product,

documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase.

3. What Will Philips Do if The Product is Not Free From Material Defects in Materials and Workmanship During The Limited Warranty Period?

During the limited warranty period, Philips or its authorized service representative will, at its option either repair or replace, without charge for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working condition. Philips will retain defective parts, modules or equipment.

Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer.

Repair or replacement of Product, at Philips' option is your exclusive remedy.

4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

- a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or
- b) Product that has been damaged due to repair, alteration, or modification by anyone not authorized by Philips; or
- c) Product that has reception or operation problems caused by signal conditions, network reliability or cable or antenna systems; or
- d) Product defects or problems caused by uses with non-Philips products or accessories; or

e) Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illegible; or

f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or

g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.

h) Normal wear and tear or Force Majeure.

5. How Do You Get Warranty Service?

- a) Return the Product to an authorized service center of Philips. You may contact the local Philips office for the location of the nearest authorized service center.

- b) The SIM card must be removed from the Product before it is given to Philips. Philips assumes no liability for damaged or loss of the SIM card or the data contained therein.
 - c) If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.
 - d) IMPORTANT - you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.
6. Other Limitation: This Warranty is The Entire Agreement.

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY AGREEMENT, PHILIPS PROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLIED (WHETHER BY STATUTE, UNDER THE OPERATION OF LAW OR OTHERWISE) AND SPECIALLY DISCLAIMS ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

PHILIPS' TOTAL LIABILITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT OR TOPIT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT.

HOWEVER IN NO EVENT SHALL PHILIPS BE LIABLE FOR ANY PUNITIVE, SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES) RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT PHILIPS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

This limited warranty represents the complete and exclusive agreement between the Consumer and Philips with respect to this cellular Product and it supercedes all prior agreements between the parties, oral or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of Philips is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.

Declaration of Conformity

We,
**Shenzhen Sang Fei Consumer
Communications Co., Ltd.**
**11 Science and Technology Road,
Shenzhen Hi-tech Industrial Park,
Nanshan District, Shenzhen 518057
China**

Declare under our sole responsibility that the product:

Xenium X806
Philips GSM/GPRS/EDGE 900/1800/1900
TAC number: 35733703

to which this declaration relates, is in conformity with the following Standards:

SAFETY : EN 60950-1:2001+A11:2004
IEC 60950-1:2001
HEALTH: EN 50360:2001
EN 62209-1:2006
EMC: ETSI EN 301 489-1 v1.8.1

ETSI EN 301 489-7 v1.3.1
ETSI EN 301 489-17 v1.3.2
SPECTRUM: ETSI EN 301 511 v9.0.2
ETSI EN 300 328 v1.7.1

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

British Approvals Board for
Telecommunications TUV SUD Group Balfour
House Churdhfield Road-walton-on-Thames
Surrey - KT12 2TD United Kingdom
Identification mark: **0168**

April 23, 2010



Connie Shen
