

DVD VIDEO PLAYER

DVP5960

## User manual

<p><b>STOP!</b> Thank you for choosing Philips.</p> <p><b>Need help fast?</b></p> <p>Read your Quick Use Guide and/or Owner's Manual first for quick tips that make using your Philips product more enjoyable.</p> <p>If you have read your instructions and still need assistance, you may access our online help at <a href="http://www.usasupport.philips.com">www.usasupport.philips.com</a> or call <b>1-888-PHILIPS (744-5477)</b> while with your product.</p>	<p><b>ARRÊT!</b> Philips vous remercie de votre confiance.</p> <p><b>Besoin d'une aide rapide?</b></p> <p>Les Guide d'utilisation rapide et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips. Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse <a href="http://www.usasupport.philips.com">www.usasupport.philips.com</a> ou formez le <b>1-800-661-6162 (Francophone)</b> <b>1-888-PHILIPS (744-5477)</b> (English speaking) <b>Veillez à avoir votre produit à portée de main.</b></p>	<p><b>ALTO!</b> Gracias por escoger Philips</p> <p><b>Necesita ayuda inmediata?</b></p> <p>Lea primero la Guía de uso rápido o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips. Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en <a href="http://www.usasupport.philips.com">www.usasupport.philips.com</a> o llame al teléfono <b>1-888-PHILIPS (744-5477)</b> y tenga a mano el producto.</p>
---	--	---



# PHILIPS

## Return your Product Registration Card today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

### \*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

### \*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

### \*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

# PHILIPS

*Congratulations on your purchase,  
and welcome to the "family!"*

### Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.


Most importantly, you can count on our uncompromising commitment to your total satisfaction.


All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

**P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once.**

### Know these safety symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture, and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

### For Customer Use

 
Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.


Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_


**PHILIPS** Visit our World Wide Web Site at <http://www.usasupport.philips.com>

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer:



12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install **all** batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).
  - Remove batteries when the unit is not used for a long time.
16. Apparatus shall not be exposed to dripping or splashing.
17. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
18. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. **For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance : [www.eiae.org](http://www.eiae.org).**

**Class II equipment symbol**   
This symbol indicates that the unit has a double insulation system

EL 6475-E005: 04/01

## ATTENTION

*L'utilisation des commandes ou réglages ou le non-respect des procédures ci-incluses peuvent se traduire par une exposition dangereuse à l'irradiation.*

## ATENCIÓN

*El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.*

**This warning label is located on the rear panel and inside this laser product.**

**CAUTION:** INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.  
**DANGER:** INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.  
**VARO!** AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINAJAKYMATTOMAAALLE LASERSATEILYLLE. ÄLÄ KATSO SÄTTEESIEN.  
**VARNING!** OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.

or

**DANGER** - Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

## WARNING

*To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.*

*Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.*

*The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10.*

'CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.'

Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system may require a playability enhancement or upgrade. As DVD technology advances, these enhancements will become common and will be easy to complete.

**Go to [www.philips.com/support](http://www.philips.com/support) for software upgrade.**

## Canada

### English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Class B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

## Index

English ..... 6

Français ..... 52

Español ..... 88

English

Français

Español

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*





Manufactured under license from Dolby Laboratories, "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

## General Information

### Environmental Information

All unnecessary packaging has been omitted. The packaging has been made easy to separate into two materials: cardboard (box, buffer) and polyethylene (bags, protective foam sheet).

Your DVD player consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

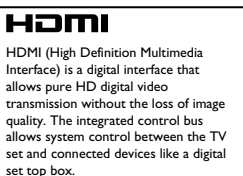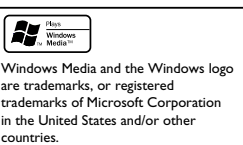

*Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.*

#### For Customer Use:

Read carefully the information located at the rear of your DVD VIDEO player and enter below the Serial No. Retain this information for future reference.

Model No. DVP 5960  
Serial No. \_\_\_\_\_

### Laser safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

**NOTE:**  
**PICTURES SHOWN MAYBE DIFFERENT BETWEEN COUNTRIES.**

**CAUTION**  
**(WARNING LOCATION: ON THE BACKPLATE OF THE SET)**

**NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.**

#### Important Note:

***Due to the numerous versions of new CD-Audio copy protection or enhanced CD-Audio protection recently available on certain discs, Philips is unable to guarantee that this DVD Player is fully compatible with such new discs. Should you have difficulty playing any such CD-Audio discs, kindly refer them to your CD-Audio disc retailer.***

#### LASER

Type	Semiconductor laser GaAlAs
Wave length	650 nm (DVD) 780 nm (VCD/CD)
Output Power	7 mW (DVD) 10 mW (VCD/CD)
Beam divergence	60 degree

## Language Code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	Ivrit	7269	Romanian	8279
Armenian	7289	Japanese	7465	Rundi	8278
Assamese	6583	Javanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhijani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Bulgarian	6671	Lao	7679	South Ndebele	7882
Burmese	7789	Latina	7665	Sundanese	8385
Castellano, Español	6983	Latvian	7686	Suomi	7073
Catalán	6765	Letzeburgesch;	7666	Swahili	8387
Chamorro	6772	Limburgan; Limburger	7673	Swati	8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanja	7889	Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
Chuang; Zhuang	9065	Macedonian	7775	Tajik	8471
Church Slav; Slavonic	6785	Malagasy	7771	Tamil	8465
Chuvash	6786	Magyar	7285	Tatar	8484
Corsican	6779	Malayalam	7776	Telugu	8469
Česky	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7782	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkçe	8482
Euskara	6985	Nauru	7865	Turkmen	8475
Ελληνικά	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	7871	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Gallegan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provençal	7967	Xhosa	8872
Hausa	7265	Old Bulgarian; Old Slavonic	6785	Yiddish	8973
Herero	7290	Oriya	7982	Yoruba	8979
Hindi	7273	Oromo	7977	Zulu	9085
Hiri Motu	7279	Ossetian; Ossetic	7983		
Hr Watkinski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (International)	7365	Persian	7065		
Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		

# Contents

<b>Language Code</b> .....	7
<b>Introduction</b>	
Supplied accessories .....	10
Cleaning discs .....	10
Setup .....	10
<b>Connections</b>	
Connecting TV .....	11-12
Using Composite Video jacks (CVBS) .....	11
Using Component Video jacks (Y Pb Pr) .....	11
Using an accessory RF modulator .....	12
Connecting the power cord .....	13
Optional : Connecting to an Audio System .	14
Stereo system has Dolby Pro Logic or Right / Left Audio In jack .....	14
Optional: Connecting Digital AV Receiver ...	14
Receiver has a PCM, Dolby Digital, or MPEG2 decoder .....	14
Optional: Connecting to a TV with HDMI Jack .....	15
Using HDMI (High Definition Multimedia Interface) sockets .....	15
Optional: Connecting a supported USB devices .....	16
Using USB port .....	16
<b>Functional Overview</b>	
Front and Rear Panels .....	17
Remote Control .....	18
<b>Getting Started</b>	
Step 1: Inserting batteries into the Remote Control .....	19
Using the Remote Control to operate the Player .....	19
Step 2: Setting up the TV .....	19-21
Setting up Progressive Scan feature (for Progressive Scan TV only) .....	20
Selecting the color system that corresponds to your TV .....	21
Step 3: Setting language preference .....	22
Setting the OSD Language .....	22
Setting the Audio, Subtitle and Disc menu language .....	22
<b>Disc Operations</b>	
Playable Discs .....	23
Region Codes .....	23
Playing discs .....	24
Basic playback controls .....	24
Selecting various repeat/shuffle functions	25
Repeat play mode .....	25
Repeating a section within a chapter/track .	25
Operations for video playback .....	26
Using the Disc Menu .....	26
Zooming in .....	26
Resuming playback from the last stopped point .....	26
Slow motion .....	26
Forward / Reverse Searching .....	26
OSD (On-Screen Display) (DVD/VCD/ SVCD) .....	27-26
Using the OSD menu .....	27
Title/Chapter/Track selection .....	27
Time Search .....	27
Audio/Subtitle .....	28
Angle .....	28
Preview Function .....	28
Special DVD Features .....	29
Playing a Title .....	29
Changing the Audio Language .....	29
Subtitles .....	29
Special VCD & SVCD Features .....	29
Playback Control (PBC) .....	29
Playing DivX disc .....	30
Playing pictures or audio files from the supported USB device .....	31
Compatibility of USB device .....	31
Playing MP3/WMA/JPEG/Kodak Picture CD .....	32-33
General Operation .....	32
Playback selection .....	32
Zoom picture (JPEG) .....	32
Playback with multi-angles (JPEG) .....	32
Preview Function (JPEG) .....	33
Playing MP3/WMA music and JPEG picture simultaneously .....	33



# Contents

English

<b>DVD Menu Options</b>	
General Setup menu .....	34-35
Locking/Unlocking the disc for viewing ...	34
Dimming system's display screen .....	34
Programming disc tracks .....	34-35
OSD Language .....	35
Sleep .....	35
DivX VOD registration code .....	35
Audio Setup Menu .....	36-38
Analog output .....	36
Digital Audio Setup .....	37
Sound Mode .....	37
CD Upsampling .....	38
Night Mode - turning on/off .....	38
Video Setup Menu .....	39-42
TV Type .....	39
Setting the TV Display .....	39
Progressive - turning on/off .....	40
Picture Setting .....	40-41
Closed Captions .....	41
HD JPEG Mode .....	42
HDMI Setup .....	42
Preference Page .....	43-46
Audio, Subtitle, Disc Menu .....	43
Restricting playback by Parental Control .....	43-44
PBC .....	44
MP3/JPEG Menu - turning on/off .....	45
Changing the Password .....	45
Setting the DivX Subtitle .....	46
Restoring to original settings .....	46
<b>Specifications</b> .....	47
<b>Troubleshooting</b> .....	48-49
<b>Glossary</b> .....	50
<b>Limited Warranty</b> .....	51

 
## Introduction

### Supplied accessories


Video cable  
(yellow)



Audio cable  
(white, red)



Remote Control  
and  
two AAA batteries

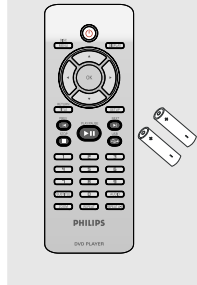

### Cleaning discs

To clean a disc, use a micro fibre cleaning cloth and wipe the disc from the center to the edge in a straight line.

#### CAUTION!

Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static sprays intended for discs.

Since the optical unit (laser) of the DVD system operates at a higher power than regular DVD or CD players, cleaning CDs intended for DVD or CD players may damage the optical unit (laser). Therefore, refrain from using a cleaning CD.


### Setup

#### Finding a suitable location

- Place the set on a flat, hard and stable surface. Do not place the set on a carpet.
- Do not position the set on top of other equipment that might heat it up (e.g., receiver or amplifier).
- Do not put anything under the set (e.g., CDs, magazines).
- Install this system near the AC outlet and where the AC power plug can be reached easily.

#### Space for ventilation



- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10 cm (4.0") clearance from the rear and the top of the set and 5 cm (2.0") from the left and right to prevent overheating.

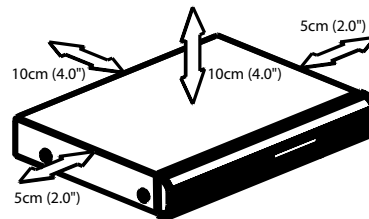

#### Avoid high temperatures, moisture, water and dust

- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g., liquid filled objects, lighted candles).

## Connecting TV

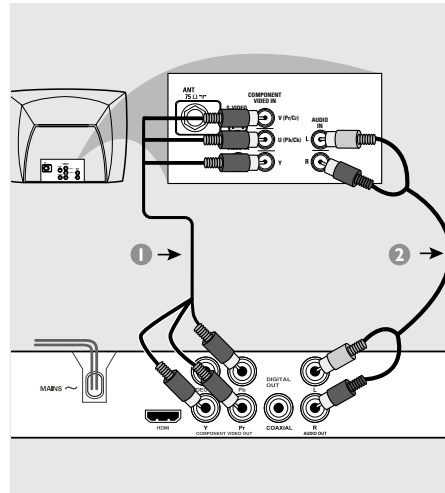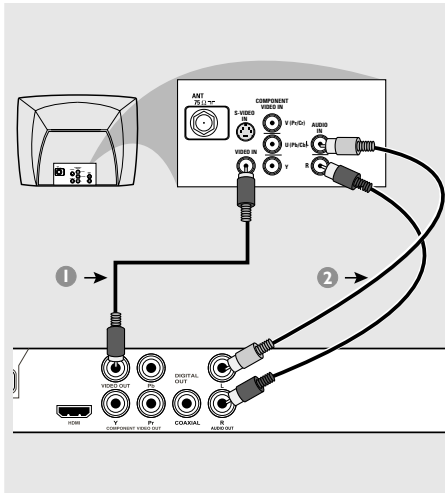

### IMPORTANT!

- You only need to make one video connection from the following options, depending on the capabilities of your TV system.
- Connect the DVD system directly to the TV.

#### Using Composite Video jacks (CVBS)

- 1 Use the composite video cable (yellow) to connect the DVD Player's CVBS (VIDEO) jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV (*cable supplied*).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (*cable supplied*).


### IMPORTANT!

- The progressive scan video quality is only possible when using **Y Pb Pr** and a progressive scan TV is required.

#### Using Component Video jacks (Y Pb Pr)

- 1 Use the component video cables (red/blue/green) to connect the DVD system's **Y Pb Pr** jacks to the corresponding Component video input jacks (or labeled as Y Pb Pr) on the TV (*cable not supplied*).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (*cable supplied*).
- 3 Proceed to page 20 for detailed Progressive Scan set up.

## Connections

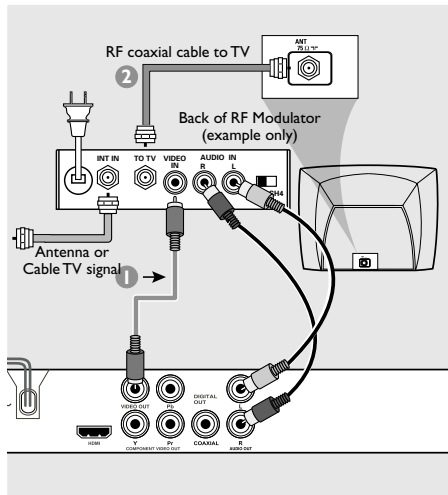

### IMPORTANT!

– If your TV only has a single Antenna In jack (or labeled as 75 ohm or RF In,) you will need an RF modulator in order to view the DVD playback on the TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.


### Using an accessory RF modulator

- 1 Use the composite video cable (yellow) to connect the DVD Player's **CVBS** jack to the video input jack on the RF modulator.
- 2 Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.

## Connections

English

### Connecting the power cord

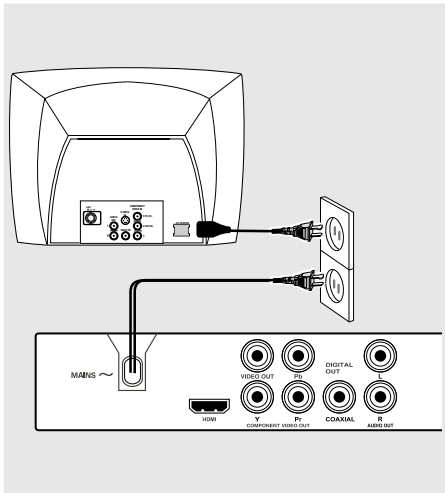

**After everything is connected properly, plug in the AC power cord to the power outlet.**


Never make or change any connections with the power switched on.

When no disc is loaded, press **STANDBY ON** on the DVD Player front panel, **"NO DISC"** may appear on the display panel.



## Connections


### Optional: Connecting to an Audio System

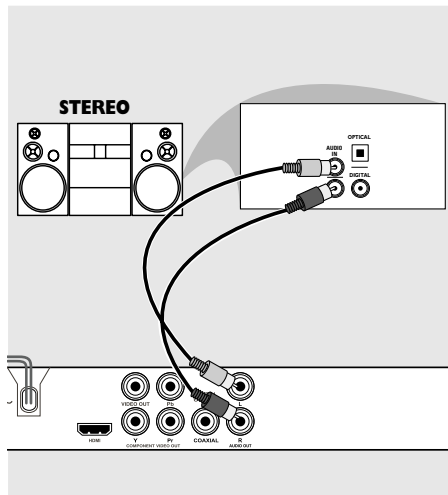

#### Stereo system has Dolby Pro Logic or Right / Left Audio In jack

- 1 Select one of the video connections (CVBS VIDEO IN or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Use the audio cables (white/red) to connect **AUDIO OUT (L/R)** jacks of the DVD Player to the corresponding AUDIO IN jacks on the stereo system (cable supplied).

### Optional: Connecting Digital AV Receiver

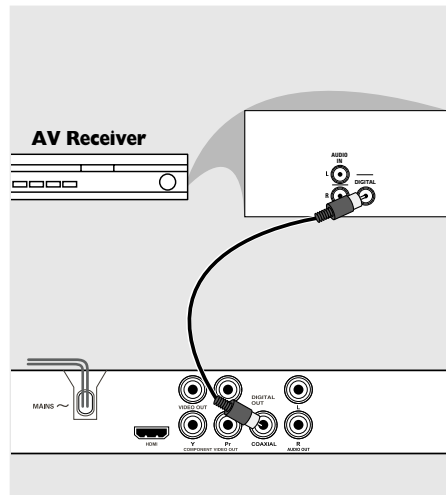


#### Receiver has a PCM, Dolby Digital, or MPEG2 decoder

- 1 Select one of the video connections (CVBS VIDEO IN or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Connect the COAXIAL jack of the DVD Player to the corresponding Digital Audio In jack on your Receiver (cable not supplied).
- 3 Set the DVD Player's Digital Output to PCM-ONLY or ALL depending on the capabilities of your Receiver (see page 37 "Digital Output").

#### Helpful Hints:

- If the audio format of the Digital Output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

### Optional: Connecting to a TV with HDMI Jack

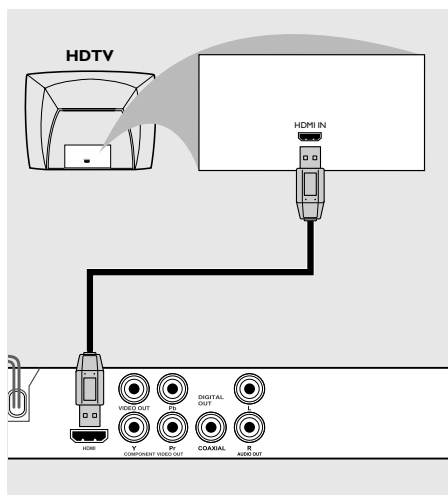

#### Using HDMI (High Definition Multimedia Interface) sockets


- HDMI connects untouched and uncompressed digital transmission for the highest and crispest sound/image quality.
- It has plug and play capability using only one cable for both audio/video output.
- Use a HDMI cable (*not supplied*) to connect the HDMI OUT on the DVD Player to HDMI IN on an HDMI compatible device (e.g.; PC, DVD Player, Set Top Box).
  - It may take a while for the DVD player and input device to communicate and initialise.
  - Playback starts automatically.
- Proceed to page 42 for detailed HDMI set up.

#### Helpful Hint:

- If you are using the HDMI as audio source make sure that “Digital Output” is set to “PCM Only” (see page 37 “Digital Output”).

## Connections

### Optional: Connecting a supported USB devices

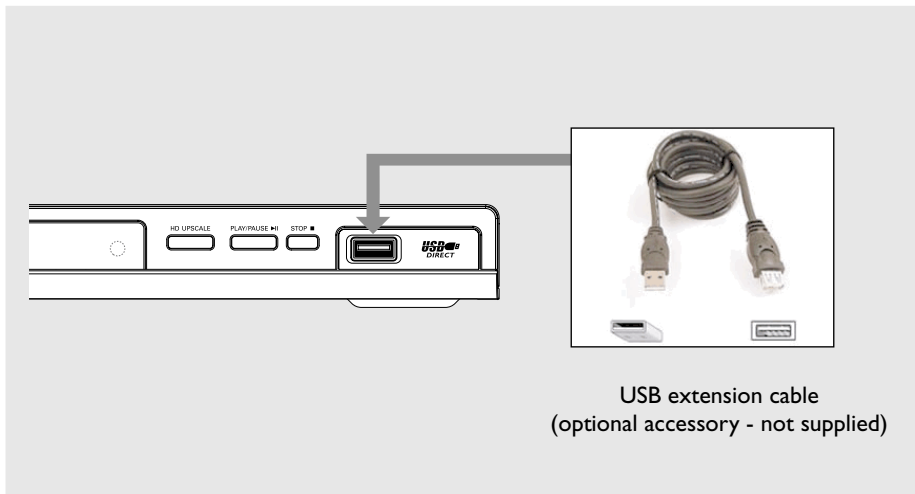

#### Using USB port

You can only view the content of following supported USB devices through this DVD system. Editing the data and recording to a DVD+R/+RW are not possible.

- 1 Connect the supported USB device directly to the USB port on the front panel (as shown on the above illustration).
- 2 Press **USB** button on the remote control in order to view the files stored in the supported USB device.
- 3 You have to stop playback before removing the supported USB device from the USB port.

#### Helpful Hints:



- The USB port only supports to the USB1.1 and the playback of the JPEG/MP3/WMA.
- The USB port is hot swappable and able to read from the following devices: **{Thumb drive or flash drive, Card readers for different kinds of cards, Portable hard disk and MP3 players}**.
- If a non-supported USB device is plugged in, the player will display not supported device.
- If the USB device does not fit into the USB port, a USB extension cable is required.



# Functional Overview

English


## Front and Rear Panels

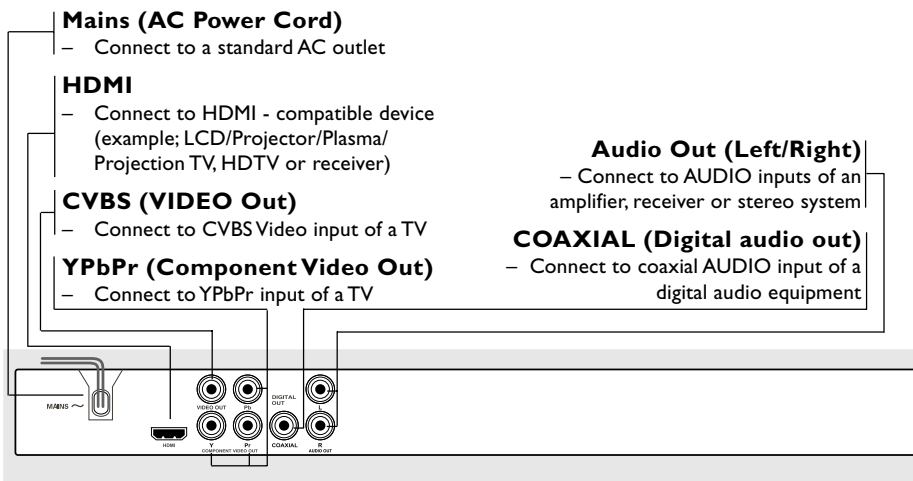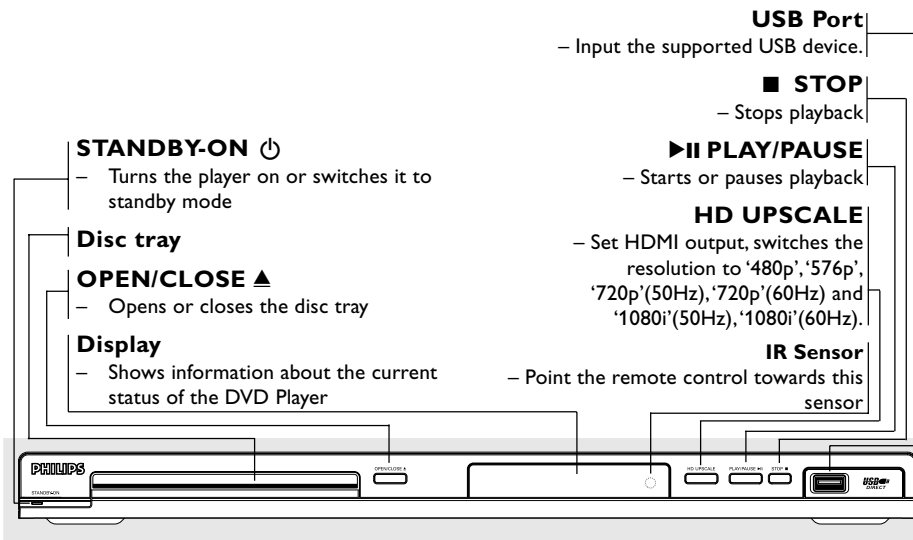

**Caution: Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.**

## Functional Overview


### Remote Control

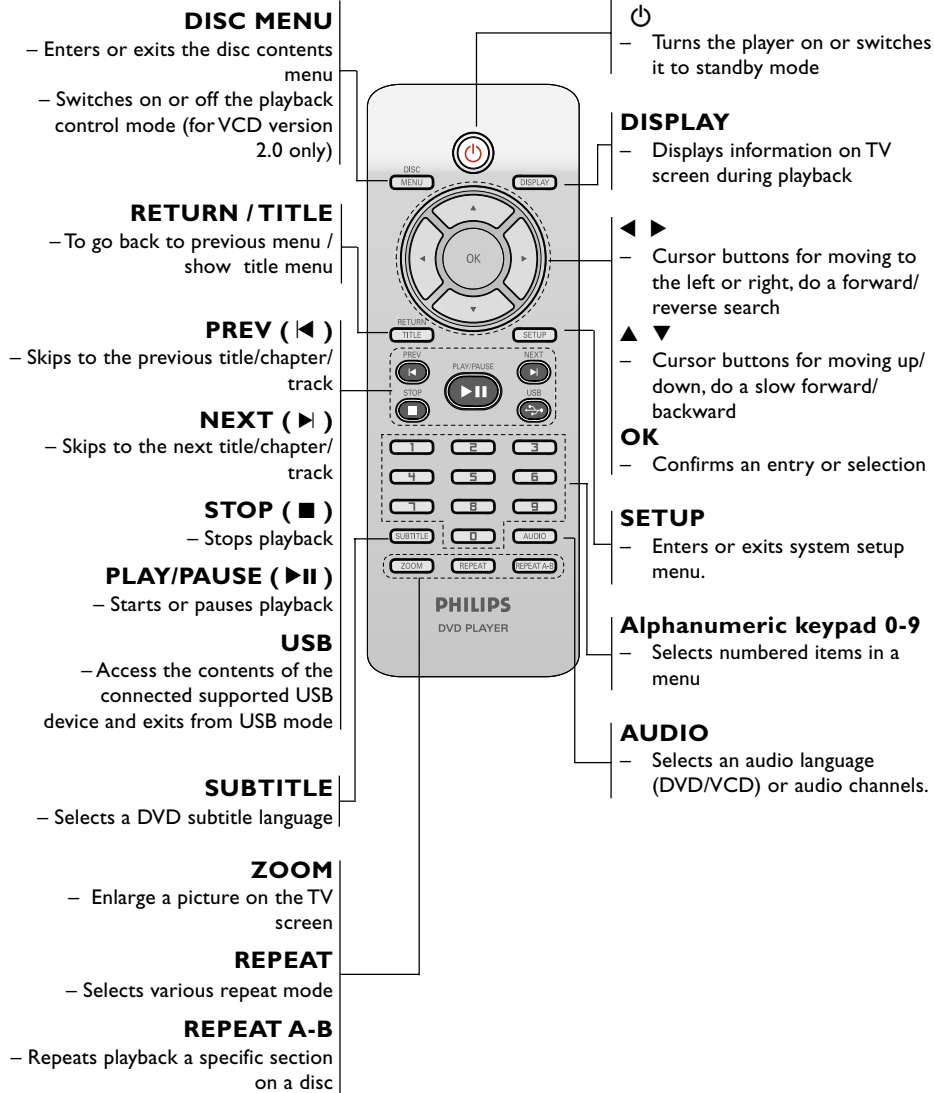

**Helpful Hint:**  
Press “STOP” for about 2 seconds to OPEN or CLOSE disc tray.

## Getting Started

### Step 1: Inserting batteries into the Remote Control

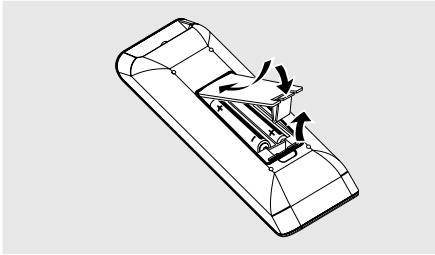

- 1 Open the battery compartment.
- 2 Insert two batteries type R03 or AAA, following the indications (+ -) inside the compartment.
- 3 Close the cover.

### Using the Remote Control to operate the Player

- 1 Aim the Remote Control directly at the remote sensor (IR) on the front panel.
- 2 Do not put any objects between the Remote Control and the DVD Player while operating the DVD Player.



### CAUTION!

- Remove batteries if they are exhausted or if the Remote Control is not being used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed properly.

### Step 2: Setting up the TV

#### IMPORTANT!

Make sure you have completed all the necessary connections. (See pages 11-12 "Connecting TV").

- 1 Turn on the TV and set to the correct video-in channel. You should see the DVD background screen on the TV.
- 2 Usually these channels are between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO. See your TV manual for more details.
  - Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.
  - Or, the TV Remote Control may have a button or switch that chooses different video modes.
  - Or, set the TV to channel 3 or 4 if you are using an RF modulator.
- 3 If you are using external equipment, (eg. audio system or receiver), turn it on and select the appropriate input source for the DVD player output. Refer to the equipment owner's manual for detail.

## Getting Started

### Setting up Progressive Scan feature (for Progressive Scan TV only)


The progressive scan display twice the number of frames per seconds than interlaced scanning (ordinary normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

#### IMPORTANT!

**Before enabling the progressive scan feature, you must ensure:**

- 1) Your TV can accept progressive signals, a progressive scan TV is required.
- 2) You have connected the DVD player to your TV using Y Pb Pr (see page 11.)

- 1 Turn on your TV.
- 2 Turn off your TV progressive scan mode or turn on interlaced mode (refer to your TV user manual.)
- 3 Press **POWER** (⏻) on the remote control to turn on the DVD player.
- 4 Select the correct Video Input channel. (See page 19).  
→ The DVD background screen appears on the TV.
- 5 Press **SETUP**.
- 6 Press **▶** to select {VIDEO SETUP PAGE}.

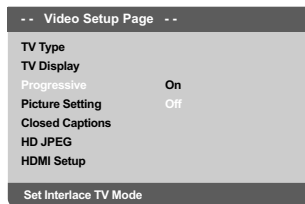


- 7 Select {PROGRESSIVE} to {ON}, then **OK** to confirm.  
→ The instruction menu appears on the TV.



- 8 Press **◀** to highlight **OK** in the menu and press **OK** to confirm.

**There will be a distorted picture on your TV at this state until you turn on the progressive scan mode on your TV.**

- 9 Turn on your TV progressive scan mode (refer to your TV user manual.)  
→ The below menu appears on the TV.

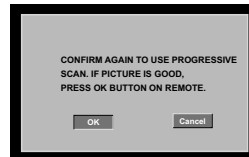

- 10 Press **◀** to highlight **OK** in the menu and press **OK** to confirm.  
→ The set up is complete now and you can start enjoy the high quality picture.

#### To deactivate Progressive manually:

- Wait for 15 seconds for auto recovery.
- OR
- 1 Press **OPEN CLOSE ▲** on the DVD player to open the disc tray.
- 2 Press **numeric keypad '1'** on the remote control for few seconds.  
→ The DVD background screen appears on the TV.

#### Helpful Hint:


– There are some progressive scan TV and High-Definition TV sets that are not fully compatible with this DVD system, resulting in the unnatural picture when playing back a DVD VIDEO disc in the progressive scan mode. In such a case, turn off the progressive scan feature on both the DVD player and your TV set.

**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

## Getting Started

### Selecting the color system that corresponds to your TV

This DVD Player is compatible with both NTSC and PAL. In order for a DVD disc to play on this Player, the color system of the Disc, the TV and the DVD Player should match.

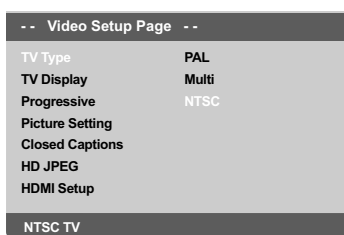

- 1 Press **SETUP**.
- 2 Press **▶** to select {VIDEO SETUP PAGE}.
- 3 Press **▲ ▼** to highlight {TV TYPE}, then press **▶**.
- 4 Press **▲ ▼** to highlight one of the options below:

**PAL** – Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format.


**NTSC** – Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc and output in NTSC format.

**Multi** – Select this if the connected TV is compatible with both NTSC and PAL (multi-system). The output format will be in accordance with the video signal of the disc.

- 5 Select an item and press **OK**.  
→ Follow the instructions shown on the TV to confirm the selection (if any).

#### Helpful Hints:

- **Before changing the current TV Standard setting, ensure that your TV supports the 'selected TV Type' system.**
- **If there is no proper picture on your TV, wait for 15 seconds for auto recovery.**

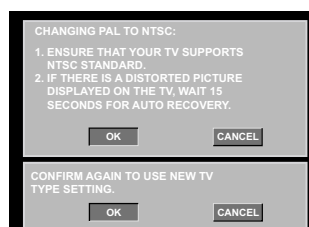

#### To reset to default TV color system manually:

- Wait for 15 seconds for auto recovery.  
OR
- 1 Press **OPEN CLOSE ▲** on the DVD player to open the disc tray.
- 2 Press **numeric keypad '3'** on the remote control for few seconds.  
→ The DVD background screen appears on the TV.

**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.


## Getting Started

### Step 3: Setting language preference

The language options are different depending on your country or region. It may not correspond to the illustrations shown on the user manual.

#### Setting the OSD Language


The On-screen language for the system menu will remain as you set it, regardless of various disc languages.

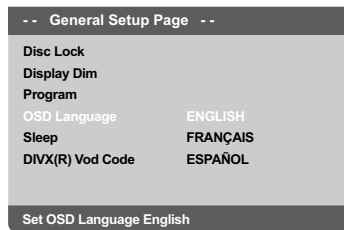

- 1 Press **SETUP**.
- 2 Press **▶** to select {GENERAL SETUP PAGE}.
- 3 Press **▲▼** to highlight {OSD LANGUAGE}, then press **▶**.
- 4 Press **▲▼** to select a language and press **OK**.

### Setting the Audio, Subtitle and Disc menu language

You can choose your own preferred language or soundtrack from audio, subtitles and disc menu languages. If the language selected is not available on the disc, the disc's default language will be used instead.

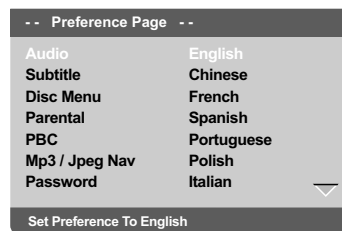

- 1 Press **STOP** twice then, press **SETUP**.
  - 2 Press **▶** to select {PREFERENCE PAGE}.
  - 3 Press **▲▼** to highlight one of the options below at a time, then press **▶**.
    - 'Audio' (disc's soundtrack)
    - 'Subtitle' (disc's subtitles)
    - 'Disc Menu' (disc's menu)
  - 4 Press **▲▼** to select a language and press **OK**.
- If the language you want is not in the list, then select {OTHERS}, then use the numeric keypad (0-9) on the remote to enter the 4-digit language code 'XXXX' (see page 7 "Language Code") and press **OK**.**
- 5 Repeat steps 3~4 for other language settings.

**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

## Disc Operations

### IMPORTANT!

- If the inhibit icon (⊘) appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.
- Depending on the DVD or VIDEO CD, some operations may be different or restricted.
- Do not push on the disc tray or put any objects other than disc on the disc tray. Doing so may cause the disc player malfunction.

### Playable Discs

#### Your DVD Player will play:

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Video Discs + Recordable[Rewritable] (DVD±R[W])
- Compact Discs (CDs)
- MP3 discs, picture (Kodak, JPEG) files on CD-R(W).
  - JPEG/ISO 9660 format
  - Maximum 30 characters display.
  - Supported sampling frequencies : 32 kHz, 44.1 kHz, 48 kHz (MPEG-1) 16 kHz, 22.05 kHz, 24 kHz (MPEG-2)
  - Supported Bit-rates : 32~256 kbps (MPEG-1), 8~160 kbps (MPEG-2) variable bitrates
- WMA files on CD-R(W).
  - Supported Bit-rates : 32~192 kbps
- DivX disc on CD-R[W]/DVD±R[W]:
  - DivX 3.11, 4.x, 5.x and 6.x
  - Q-pel accurate motion compensation
  - Global Motion Compensation (GMC) playback
- DivX Ultra on CD-R[W]/DVD±R[W]:






### Region Codes

This DVD player is designed to support the Region Management System. Check the regional code number on the disc package. If the number does not match the player's region number (see table below), the player may be unable to playback the disc.

#### Helpful Hints:

- It may not be possible to play CD-R/RW or DVD-R/RW in all cases due to the type of disc or condition of the recording.
- If you are having trouble playing a certain disc, remove the disc and try a different one. Improper formatted disc will not play on this DVD player.

Region	Discs that can be played (Example)
U.S.A. and Canada regions	 
U.K and Europe regions	 
Asia Pacific, Taiwan, Korea	 
Australia, New Zealand, Latin America	 
Russia and India regions	 
China, Calcos Islands, Walls and Futuna Islands	 

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Playing discs

- 1 Connect the power cords of the DVD Player and TV (and any optional stereo or AV receiver) to a power outlet.
- 2 Turn on the TV power and set to the correct Video In channel. (See page 19 "Setting up the TV").
- 3 Press **STANDBY-ON** to turn on the DVD player.
  - The DVD background screen appears on the TV.
- 4 Press **OPEN/CLOSE ▲** on the front of the DVD player.
  - You can also hold down the **STOP ■** button on the remote control to open and close the disc tray.
- 5 Place a disc into the disc tray with the label facing up, then press **OPEN/CLOSE ▲**.
  - For double-sided discs, load the side you want to play facing up.
- 6 Playback will start automatically. If not press **PLAY/PAUSE ►II**.
  - If a disc menu appears on the TV, see page 26 "Using the Disc Menu".
  - If the disc is locked by parental control, you must enter your six-digit password. (See page 43-44).
- For more playback features, see pages 24–29.

### Basic playback controls

Unless otherwise stated, all operations described are based on Remote Control use.

#### Pausing playback

- 1 During playback, press **PLAY/PAUSE ►II** to pause playback and display a still picture.
  - Sound will be muted.
- 2 To resume normal playback, press **PLAY/PAUSE ►II** again.

#### Selecting track/chapter

- Press **PREV ◀ / NEXT ▶** to go to the previous or next track/chapter.
- In STOP mode, press **DISPLAY** to display the disc information text line for title/chapter/track (example - 00/08).
- Use **alphanumeric keypad (0-9)** to enter valid title/chapter/track number, then press **OK**.
  - The playback skips to the selected title/chapter/track.

#### Stopping playback

- Press **STOP ■**.

#### Helpful hints:

- Screen saver will start automatically if the disc playback is stopped/paused for 5 minutes.
- The player will automatically switch to Power Standby mode if you do not press any buttons for 15 minutes after the disc has stopped playing.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.



## Disc Operations

### Selecting various repeat/shuffle functions

#### Repeat play mode

The repeat play options vary depending on the disc type.

- While playing a disc, press **REPEAT** continuously to choose a repeat options.

#### For DVD

- Chapter (currently playing chapter)
- Title (currently playing title)
- All (entire disc)
- Shuffle (random playback)
- Off (cancel)

#### For Video CD, Audio CD

- Track (currently playing track)
- All (entire disc)
- Shuffle (random playback)
- Off (cancel)

#### For MP3

- Repeat One (currently playing file)
- Repeat Folder (all files in selected folder)
- Folder (playing all files in one folder once)
- Shuffle (all files in current folder at random playback)
- Single (currently playing file once)

#### For JPEG, DivX

In STOP mode,

- Repeat One (currently playing file)
- Repeat Folder (all files in selected folder)
- Folder (playing all files in one folder once)
- Shuffle (all files in current folder at random playback)
- Single (currently playing file once)

In PLAY mode,

- Repeat One (currently playing file)
- Repeat All (playing all files in one disc)
- Repeat Off (cancel)
- Shuffle (all files in current folder at random playback)
- Single (currently playing file once)

- To cancel repeat playback, press **STOP ■**.

*Helpful Hint:*

- For VCD, repeat playback is not possible if the PBC mode is switched on.

#### Repeating a section within a chapter/track

- While playing a disc, press **REPEAT A-B** at your chosen starting point.
- Press **REPEAT A-B** again at your chosen end point.
  - The section A and B can be set only within the same chapter/track.
  - The section will now repeat continuously.
- To exit the sequence, press **REPEAT A-B**.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Operations for video playback (DVD/VCD/SVCD)

#### Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load in the disc.

#### To select a playback feature or item

- Use ◀▶ ▲ ▼ keys or **numeric keypad (0-9)** on the remote, then press **OK** to start playback.

#### To access or remove the menu

- Press **DISC MENU** on the remote.

#### Zooming in

This function allows you to enlarge the picture on the TV screen and to pan through the enlarged picture.

- 1 During playback, press **ZOOM** repeatedly to display the picture with different scales.
  - Use ◀▶ ▲ ▼ keys to pan through the enlarged picture.
  - Playback will continue.
- 2 Press **ZOOM** repeatedly to return to the original size.

#### Resuming playback from the last stopped point

Resume playback of the last 5 discs is possible, even if the disc was ejected or the power switched off.

- Load one of the last 5 discs.
  - "LOADING" appears.
- During loading mode, press **PLAY/PAUSE ▶II** and the disc will be played back from the last point.

#### To cancel resume mode

- In stop mode, press **STOP ■** again.

#### Helpful Hint:

– This function is not possible on CD/MP3 disc.

#### Slow Motion

- 1 Press ▲ ▼ during playback to select the required speed: 1/2, 1/4, 1/8 or 1/16 (forward {DVD/SVCD/VCD} or backward {DVD}).
  - Sound will be muted.
- 2 To return to normal speed, press **PLAY/PAUSE ▶II**.

#### Forward / Reverse Searching

- 1 Press ◀▶ during playback to select the required speed: 2X, 4X, 8X, 16X or 32X (backward or forward).
  - Sound will be muted (DVD/VCD) or intermittent (CD).
- 2 To return to normal speed, press **PLAY/PAUSE ▶II**.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.


## Disc Operations

### OSD (On-Screen Display) (DVD/ VCD/SVCD)

#### Using the OSD menu

OSD menu shows the disc playback information (for example, title or chapter number, elapsed playing time, audio/subtitle language), a number of operations can be done without interrupting disc playback.

- During playback, press **DISPLAY**.  
→ A list of available disc information appears on the TV screen.

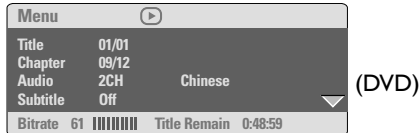

(DVD)



(VCD)

#### Title/Chapter/Track selection

- 1 Press ▲ ▼ to highlight {Title} / {Chapter} or {Track}, then press ► to access.
- 2 Use the **numeric keypad (0-9)** to enter a valid number (e.g. 04/05).
- 3 Press **OK** to confirm.  
→ The playback skips to the selected title/chapter/track.

#### Time Search

- 1 Press ▲ ▼ to highlight {Time Disp.} (Time Display), then press ► to access.  
→ The following display types appears on the TV, depending on the disc in the player.

#### For DVD discs:

TT Elapsed - elapsed playing time of current Title;  
 TT Remain - remaining playing time of current Title;  
 CH Elapsed - elapsed playing time of current Chapter;  
 CH Remain - remaining playing time of current Chapter;

#### For VCD/SVCD discs:

Total Elapsed - elapsed playing time of current Disc;  
 Total Remain - remaining playing time of current Disc;  
 Single Elapsed - elapsed playing time of current Track;  
 Single Remain - remaining playing time of current Track;

- 2 Press ▲ ▼ to highlight {TT Time} / {CH Time} / {Disc Time} or {Track Time}, then press ► to access.
- 3 Use the **numeric keypad (0-9)** to input the valid time (e.g. 0:34:27).
- 4 Press **OK** to confirm.  
→ The playback skips to the chosen time.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Audio/Subtitle

- 1 Press ▲▼ to highlight {Audio} or {Subtitle}, then press ► to access.  
→ Audio or Subtitle menu appears on the TV.
- 2 Press ▲▼ to select one language, then press **OK** to confirm.  
→ Current audio or subtitle language will be changed to the selected language.

 
### Angle

- 1 Press ▲▼ to highlight {Angle}, then press ► to access.
- 2 Use the **numeric keypad (0-9)** to key in a valid number.
- 3 Press **OK** to confirm.  
→ Playback will go to the selected angle.


### Preview Function

The preview function allows you to reduce the picture of 6 tracks enough to display in a full screen.

- 1 Press ▲▼ to highlight {Preview}, then press ► to access.  
→ The preview menu appears on the TV screen.




(DVD example)

 

(Video CD example)

- 2 Press ▲▼ to select the **PREVIEW** type, then press **OK**.  
→ The picture of each segment will appear on the screen.

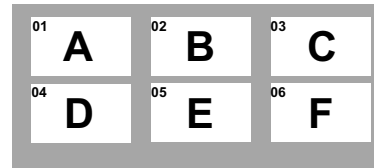

(example for 6 thumbnail pictures display)

- 3 Press ▲▼◀▶ to select a track or input your selected track number using the numeric keypad (0-9), then press **OK**.  
→ Playback will start automatically on the selected track.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Special DVD Features

#### Playing a Title

- 1 Press **DISC MENU**.  
→ The disc title menu appears on the TV screen.
- 2 Use **▲ ▼ ◀ ▶** keys or **numeric keypad (0-9)** to select a play option.
- 3 Press **OK** key to confirm.

#### Changing the Audio Language

##### For DVD

- Press **AUDIO** repeatedly to select different audio languages.

##### Changing the Audio Channel

##### For VCD

- Press **AUDIO** to select the available audio channels provided by the disc (MONO LEFT, MONO RIGHT, MIX-MONO, STEREO).

#### Subtitles

- Press **SUBTITLE** repeatedly to select different subtitle languages.

### Special VCD & SVCD Features

#### Playback Control (PBC)

##### For VCD with Playback Control (PBC) feature (version 2.0 only)

- Press **DISC MENU** to toggle between 'PBC ON' and 'PBC OFF'.  
→ If you select 'PBC ON', the disc menu (if available) will appear on the TV.  
→ Use the **PREV ◀ / NEXT ▶** or the numeric keypad (0-9) to select a play option.
- During playback, pressing **RETURN/TITLE** will return to the menu screen (if PBC is on).

##### If you want to skip the index menu and playback directly from the beginning,

- Press **DISC MENU** key on the remote control to switch to PBC off.

English

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Playing a DivX disc

This DVD player supports the DivX movie playback that you download from your computer onto a CD-R/RW or DVD±R/RW (see page 35 for more information).

- 1 Load a DivX disc.  
→ Playback will start automatically. If not press **PLAY/PAUSE ►II**.
- 2 Pressing **SUBTITLE** on the remote control will turn on or off the subtitle.
- If multilingual subtitles are embedded on the DivX disc, pressing **SUBTITLE** will change the subtitle language during playback.

*Helpful Hints:*

- Subtitle files with the following filename extensions (.srt, .smi, .sub, .ssa, .ass) are supported but do not appear on the file navigation menu.
- The subtitle filename have to be the same as the filename of the movie.

### Advance features of the DivX Ultra

- **XSUB™ subtitles** let you author movies with multiple language subtitle sets.
- **Interactive video menus** offer unprecedented convenience and control so you can quickly navigate between various scenes or bonus features, and select from audio track and subtitle options.
- **Alternate audio tracks** enable audio tracks in multiple language versions or separate audio tracks for specific speaker configurations
- **Chapter points** provide flexibility, allowing you to jump straight to the scene you want to watch from anywhere within the video.

 
**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations


### Playing pictures or audio files from the supported USB device

This DVD system able to access and view the data (JPEG, MP3 or WMA) in the supported USB device.

- 1 When disc playing, insert a supported USB device into the USB port on the front panel.
  - A dialog will be displayed on the left down corner.
  - When playing ISO disc, the dialog will not be displayed.



- 2 Press **USB** on the remote control to access the data in the drive.
  - A file menu that contains all supported files will be displayed on the TV screen.

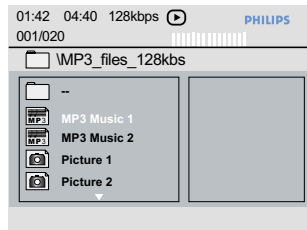

- Use **▲▼** to navigate within the menu and select the device you want to access, then press **OK**.
- Press **USB** on the remote control to exit the file menu.
- Press **USB** before removing the supported USB device from the slot.

### Compatibility of USB device

- The USB port does not support the connection of other USB devices except the supported USB device.
- The USB port can supports the playback of JPEG/MP3/WMA files.
- It is not possible to record from the data from USB ports to this DVD system.
- Copy protected contents are not playable.

#### Helpful Hints:

- Supported USB device include: {**Thumb drive or flash drive, Card readers for different kinds of cards, Portable hard disk and MP3 players**}.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Playing MP3/WMA/JPEG/Kodak Picture CD

This DVD system can playback WMA, MP3, JPEG, VCD & SVCD files on a personally recorded CD-R/RW disc, commercial CD or USB device.


- For USB device, only WMA, MP3 and JPEG data can be access.

#### IMPORTANT!

You have to turn on your TV and set to the correct Video In channel. (See page 19 "Setting up the TV").

#### General Operation

- 1 Load a disc or USB device.
  - The device reading time may exceed 30 seconds due to the complexity of the directory/file configuration.
  - The data disc menu appears on the TV screen.

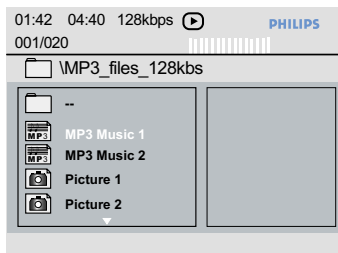

- 2 Press **▲▼** to select the folder and press **OK** to open the folder.
- 3 Press **▲▼** to select a track/file.
- 4 Press **PREV ◀ / NEXT ▶** to go to previous/next page.
- 5 Press **OK** to confirm.

#### Playback selection

During playback, you can;

- Press **PREV ◀ / NEXT ▶** to select the previous/next track/file in the current folder.
- Press **◀ ▶▲▼** on the remote to rotate/flip the picture files.
- Press **PLAY/PAUSE ▶||** repeatedly to pause/resume playback.

#### Zoom picture (JPEG)

- During playback, press **ZOOM** repeatedly to display the picture with different scales.
- Use **▲▼◀▶** to view the zoomed picture.

#### Playback with multi-angles (JPEG)

- During playback, press **▲▼◀▶** to rotate the picture on the TV screen.
  - ▲: flip the picture vertically by 180°
  - ▼: flip the picture horizontally by 180°
  - ◀: rotate the picture counter-clockwise by 90°
  - ▶: rotate the picture clockwise by 90°

#### Helpful Hints:

- It may not be possible to play certain MP3/JPEG disc due to the configuration and characteristics of the disc or condition of the recording.
- It is normal to experience an occasional "skip" while listening to your MP3 disc.
- For multi-session discs with different formats, only the first session will be available.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.



## Disc Operations

### Preview Function (JPEG)

This function shows the content of the current folder or the whole disc.

- 1 Press **DISPLAY** during playback.  
→ 12 thumbnail pictures will appear on the TV screen.



- 2 Press **PREV** ◀ / **NEXT** ▶ to display the other pictures on the previous/next page.
- 3 Press ◀ ▶ ▲ ▼ on highlight one of the picture and press **OK** to start playback.
- 4 Press **DISC MENU** to return to Picture CD menu.

### Playing MP3/WMA music and JPEG picture simultaneously

- 1 Load a disc that contains music and picture.  
→ The disc menu appears on the TV screen.
- 2 Select an MP3/WMA track.
- 3 During MP3/WMA music playback, select a picture from the TV screen and press **OK**.  
→ The picture files will be played back one after another until end of the folder.
- 4 To quit simultaneous playback, press ■.

#### Helpful Hint:

- Some files on Kodak or JPEG disc may be distorted during playback due to the configuration and characteristics of the disc.

English


**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## DVD Setup Menu Options

This DVD Player setup is carried out via the TV, enabling you to customise the DVD Player to suit your particular requirements.

### General Setup menu

- 1 In disc mode, press **SETUP**.
- 2 Press **◀▶** to select 'General Setup' icon.
- 3 Press **OK** to confirm.

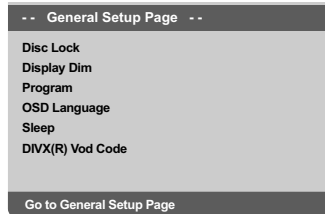

### Locking/Unlocking the disc for viewing

Not all discs are rated or coded by the disc maker. You can prevent a specific disc from playing by locking the disc. Up to 40 discs can be locked.

- 1 In 'GENERAL SETUP PAGE', press **▲▼** to highlight {DISC LOCK}, then press **▶**.

#### LOCK

Select this to block the playback of the current disc. Subsequent access to a locked disc requires six-digit password. The default password is '136 900' (see page 45 "Changing the password").

#### UNLOCK

Select this to unlock the disc and allow future playback.

- 2 Press **▲▼** to select a setting, then press **OK** to confirm your selection.

**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

### Dimming player's display panel


You can select different levels of brightness for the display screen.

- 1 In 'GENERAL SETUP PAGE', press **▲▼** to highlight {DISPLAY DIM}, then press **▶**.  
**100%** – Select this for full brightness.  
**70%** – Select this for medium brightness.  
**40%** – Select this for dimming the display.
- 2 Press **▲▼** to select a setting, then press **OK** to confirm your selection.

### Programming disc tracks (not for Picture CD/MP3/WMA/DivX)

You can play the contents of the disc in the order you want by programming the tracks to be played. Up to 20 tracks can be stored.

- 1 In 'GENERAL SETUP PAGE', press **▲▼** to highlight {PROGRAM}, then press **▶** to select {INPUT MENU}.
- 2 Press **OK** to confirm.

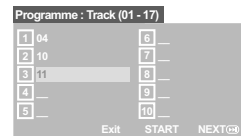

### To input your favorite tracks/chapter

- 3 Use the **numeric keypad (0-9)** to enter a valid track/chapter number.
- 4 Use **◀▶▲▼** keys to move the cursor to the next position.  
→ If the track number is more than ten, press **NEXT ▶** to open the next page and proceed with programming or,  
→ Use **◀▶▲▼** keys to highlight {NEXT} on the program menu, then press **OK**.
- 5 Repeat steps 3~4 to input another track/chapter number.

## DVD Setup Menu Options

### If you want to remove a track

- Use ◀▶ ▲ ▼ keys to move the cursor to the track you want to remove.
- Press **OK** to remove this track from the program menu.

### To start program playback

- Use ◀▶ ▲ ▼ keys to highlight {START} on the program menu, then press **OK**.  
→ Playback will start with the selected tracks under the programmed sequence.

### To exit program playback

- Use ◀▶ ▲ ▼ keys to highlight {EXIT} on the program menu, then press **OK**.

### OSD Language

This menu contains various language options for display language on the screen. For details, see page 22.

### Sleep

Sleep function allows you to turn off the DVD Player automatically after a preset time.

- In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {SLEEP}, then press ▶.

#### **15 Mins**

Turn off the DVD Player after 15 minutes.

#### **30 Mins**

Turn off the DVD Player after 30 minutes.

#### **45 Mins**

Turn off the DVD Player after 45 minutes.

#### **60 Mins**

Turn off the DVD Player after 60 minutes.

#### **OFF**

Turn off the sleep function.

- Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

### DivX(R) VOD registration code

DivX® VOD (Video On Demand) registration code allows you to rent and purchase videos using the DivX® VOD service from the internet.

For more information, visit us at <http://vod.divx.com>

- In 'GENERAL SETUP PAGE', press ▲ ▼ to highlight {DIVX(R) VOD CODE}, then press ▶.

→ The registration code will appear.

- Press **OK** to exit.

- Use the registration code to purchase or rent the videos from DivX® VOD service at <http://vod.divx.com>. Follow the instructions and download the video onto a CD-R for playback on this DVD player.

#### Helpful Hints:

- All the downloaded videos from DivX® VOD can only be played back on this DVD player.
- Time search feature is not available during DivX movie playback.


English

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Audio Setup Menu

- 1 In disc mode, press **SETUP**.
- 2 Press ◀▶ to select 'Audio Setup' icon.
- 3 Press **OK** to confirm.

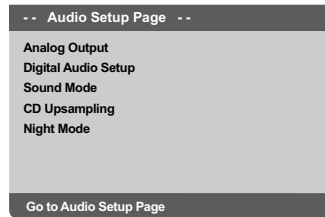

### Analog Output

This options allows you to set the stereo analog output of your DVD Player.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {ANALOG OUTPUT}, then press ▶.

#### Stereo

Select this option when output delivers sound from only the two front speakers.

#### LT/RT

Select this option if your DVD Player is connected to a Dolby Pro Logic decoder.

#### V SURR

Allows the DVD player to use virtual surround sound effects.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Digital Audio Setup

The options included in Digital Audio Setup are: 'Digital Output' and 'LPCM Output'.

- ① In 'AUDIO SETUP PAGE', press ▲▼ to highlight {DIGITAL AUDIO SETUP}, then press ►.
- ② Press the ▲▼ keys to highlight an option.
- ③ Enter its submenu by pressing ►.
- ④ Press ▲▼ to select a setting, then press **OK** to confirm your selection.

#### Digital Output

Set the Digital output according to your optional audio equipment connection.

→ **Off**: Turn off the digital output.

→ **All**: If you have connected your DIGITAL AUDIO OUT to a multi-channel decoder/receiver.

→ **PCM Only**: Only if your receiver is not capable of decoding multi-channel audio.

#### Helpful Hints:

– If DIGITAL OUTPUT is set to 'All', all audio settings except MUTE are invalid.

#### LPCM Output

If you connect the DVD Player to a PCM compatible receiver via the digital terminals, such as coaxial or optical etc, you may need to adjust 'LPCM Output'. Discs are recorded at a certain sampling rate. The higher the sampling rate, the better the sound quality.

→ **48K**: Playback a disc recorded at the sampling rate of 48kHz.

→ **96K**: Playback a disc recorded at the sampling rate of 96kHz that can only be achieved in Stereo-Classic (Flat) mode.

### Sound Mode

The options included in Sound Mode Setup are: '3D', 'Movie Mode' and 'Music Mode'.

- ① In 'AUDIO SETUP PAGE', press ▲▼ to highlight {SOUND MODE}, then press ►.
- ② Press the ▲▼ keys to highlight an option.
- ③ Enter its submenu by pressing ►.
- ④ Press ▲▼ to select a setting, then press **OK** to confirm your selection.

#### 3D

This function provides a virtual surround sound experience using just two speakers.

→ **Off, Living Room, Hall, Arena and Church**

#### Movie Mode

Select a Sound Mode that matches the type of music you are playing. These preset Sound Modes adjust the frequency bands of the video to enhance your favorite movie sound track.

→ **Off, Sci-Fi, Action, Drama and Concert**

#### Music Mode

Select a Sound Mode that matches the type of music you are playing. These preset Sound Modes adjust the frequency bands of the audio to enhance your favorite music.

→ **Off, Digital, Rock, Classic and Jazz**

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### CD Upsampling

This feature allows you to convert your music CD to a higher sampling rate using sophisticated digital signal processing for better sound quality. If you have activated the upsampling, the player will automatically switch to stereo mode.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {CD UPSAMPLING}, then press ►.

#### **OFF**

Select this to disable CD-upsampling.

#### **88.2 kHz (X2)**

Select this to convert the sampling rate of the CDs twice higher than the original.

#### **176.4 kHz (X4)**

Select this to convert the sampling rate of the CDs four times higher than the original.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

#### *Helpful Hint:*

- *CD upsampling feature is only applicable to stereo output setting.*

### Night Mode - turning on/off

In this mode, the high volume outputs are softened. It is useful for watching your favorite action movie without disturbing others at night.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {NIGHT MODE}, then press ►.

#### **ON**

Select this to level out the volume. This feature is only available for movies with Dolby Digital mode.

#### **OFF**

Select this when you want to enjoy the surround sound with its full dynamic range.


- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Video Setup Menu

- 1 In disc mode, press **SETUP**.
- 2 Press ◀▶ to select 'Video Setup' icon.
- 3 Press **OK** to confirm.

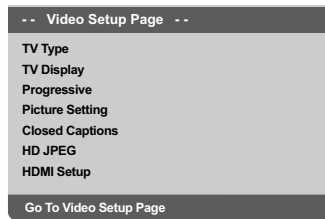

### TV Type

This menu contains the options for selecting the color system that matches the connected TV. For details, see page 21.

### Setting the TV Display

Set the aspect ratio of the DVD Player according to the TV you have connected. The format you select must be available on the disc. If it is not, the setting for TV display will not affect the picture during playback.

- 1 In 'VIDEO SETUP PAGE', press ▲▼ to highlight {TV DISPLAY}, then press ▶.
- 2 Press ▲▼ to highlight one of the options below:

#### 4:3 PAN SCAN –

Select this if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.



#### 4:3 LETTER BOX –

Select this if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.



16:9 – Select this if you have a wide-screen TV.



- 3 Select an item and press **OK**.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Progressive - turning on/off

In the progressive scan mode, you can enjoy the high quality picture with less flickers. It only works when you have connected the DVD player's Y Pb Pr jacks to your TV that supports the progressive video input. Otherwise, a distorted picture will appear on the TV. For proper progressive scan set up, see page 20.

- In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {PROGRESSIVE}, then press ►.

#### OFF

To disable Progressive Scan function.

#### ON

To enable Progressive Scan function.

- Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.
  - Follow the instructions shown on the TV to confirm the selection (if any).
  - If a distorted picture appears on the TV screen, wait for 15 seconds for auto recovery.

### Picture Setting

This DVD Player provides three predefined sets of picture color settings and one personal setting which you can define yourself.

- In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {PICTURE SETTING}, then press ►.

#### STANDARD

Select this for standard picture setting.

#### VIVID

Select this to make the TV picture brighter.


#### COOL

Select this to make the TV picture softer.

#### PERSONAL

Select this to personalise your picture color by adjusting the brightness, contrast, tint and color (saturation).

- Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.
- If you select {PERSONAL}, then proceed to steps ④~⑦.
  - The 'personal picture setup' menu appears.

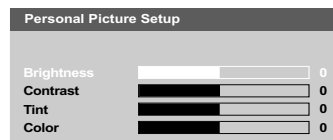

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.



## DVD Setup Menu Options

- 4 Press ▲▼ to highlight one of the following options.

### **BRIGHTNESS**

Increase the value to brighten the picture or vice versa. Choose zero (0) for average setting.

### **CONTRAST**

Increase the value to sharpen the picture or vice versa. Choose zero (0) to balance the contrast.

### **TINT**

Increase the value to darken the picture or vice versa. Choose zero (0) for average setting.

### **COLOR**

Increase the value to enhance the color in your picture or vice versa. Choose zero (0) to balance the color.

- 5 Press ◀▶ to adjust the setting that best suits your personal preference.
- 6 Repeat steps 4~5 for adjusting other color features.
- 7 Press **OK** to confirm.

### **Closed Captions**

Closed captions are data that are hidden in the video signal of some discs. Captions are different from subtitles because captions hearing are impaired by showing the sound effects (e.g., “phone ringing” and “footsteps”), while subtitles do not. Before you select this function, please ensure that the disc contains closed captions information and your TV set also has this function.

- 1 In ‘VIDEO SETUP PAGE’, press ▲▼ to highlight {CLOSED CAPTION}, then press ▶.

#### **ON**

Enable Closed Captions.

#### **OFF**

Disable Closed Captions.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

English

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### HDMI JPEG Mode

You can enjoy unsurpassed pictures at its native resolution via your HDMI connection or progressive scan mode.

- 1 In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {HD JPEG}, then press ►.

#### **ON**

Displays picture with high quality.

#### **OFF**

Displays picture with standard quality.

- 2 Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

### HDMI Setup

The options included in HDMI Setup is: 'Resolution'.

- 1 In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {HDMI Setup}, then press ►.
- 2 Press the ▲ ▼ keys to highlight an option.
- 3 Enter its submenu by pressing ►.
- 4 Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

#### **Resolution**

You can select the resolution of the picture according to your preference and the connected HDMI TV.

→ **480p**: Interlaced output in 480 lines for NTSC TV.

→ **576p**: Interlaced output in 576 lines for PAL TV.

→ **720p**: Progressive output upscale to 720 lines.

→ **1080i**: Interlaced output upscale to 1080 lines.

→ **Auto**: Output automatically based on your display's supported resolution.

#### *Helpful Hint:*


- You can also press **HD UPSCALE** button on the front panel to switch HDMI Resolution.
- If not display appears on the TV screen due to unsupported resolution, reconnect any available interlace video output to your display and re-adjust the resolution settings to 480p/576p.
- Select **AUTO** to automatically display the best resolutions settings.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Preference Page

- 1 Press **■** twice to stop playback (if any), then press **SETUP**.
- 2 Press **◀▶** to select the 'Preference Page' icon.
- 3 Press **OK** to confirm.

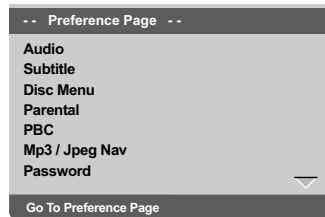


### Audio, Subtitle, Disc Menu

These menus contain various language options for audio, subtitle and disc menu which may be recorded on the DVD. For details, see page 22.

### Restricting playback by Parental Control

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- 1 In 'PREFERENCE PAGE', press **▲▼** to highlight {PARENTAL}, then press **▶**.

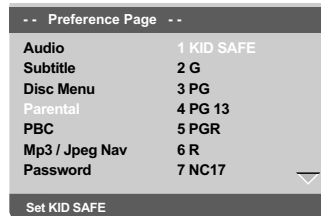

- 2 Press **▲▼** to highlight a rating level for the disc inserted and press **OK**.  
→ To disable Parental controls and have all Discs play, select {8 ADULT}.
- 3 Use the **numeric keypad (0-9)** to enter the six-digit password (see page 45 "Changing the password").  
→ DVDs that are rated above the level you selected will not play unless you enter your six-digit password.

#### Helpful Hints:

- VCD, SVCD, CD have no level indication, so parental control function has no effect on these type of discs. This applies to most illegal DVD discs.
- Some DVDs are not encoded with a rating though the movie rating may be printed on the Disc cover. The rating level feature does not work for such Discs.

**TIPS:** The underlined option is the factory default setting.  
Press **◀** to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Rating explanations

#### 1 **KID SAFE**

- Kids material; recommended especially for children and viewers of all ages.

#### 2 **G**

- General Audience; recommended as acceptable for viewers of all ages.

#### 3 **PG**

- Parental Guidance suggested.

#### 4 **PG13**

- Material is unsuitable for children under age 13.

#### 5-6 **PG-R**

- Parental Guidance - Restricted; recommended that parents restrict children under 17 from viewing or allow to view only when supervised by a parent or adult guardian.

#### 7 **NC-17**

- No children under age 17; not recommended viewing for children under age 17.

#### 8 **ADULT**

- Mature material; should be viewed only by adults due to graphic sexual material, violence or language.

### PBC

You can set the PBC to ON or OFF. This feature is available only on Video CD 2.0 with playback control (PBC) feature. For details, see page 29.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### MP3/JPEG Menu - turning on/off

MP3/JPEG Navigator can be set only if the disc is recorded with menu. It allows you to select different display menus for easy navigation.

- 1 In 'PREFERENCE PAGE', press ▲▼ to highlight {MP3/JPEG NAV}, then press ►.

#### WITHOUT MENU

Select this to display all the files contained in the MP3/JPEG.

#### WITH MENU


Select this to display only the folder menu of the MP3/JPEG.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

### Changing the Password

The same password is used for both Parental Control and Disc Lock. Enter your six-digit password when prompted on the screen. The default password is 136900.

- 1 In 'PREFERENCE PAGE', press ▲▼ to highlight {PASSWORD}, then press ► to select {CHANGE}.
- 2 Press **OK** and the menu appears.

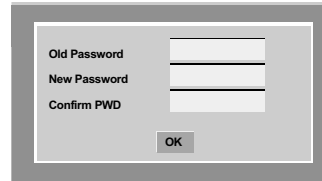

The screenshot shows a grey dialog box with three input fields labeled 'Old Password', 'New Password', and 'Confirm PWD'. Each field has a horizontal line indicating where to enter text. Below the fields is a small button labeled 'OK'.

- 3 Use the **numeric keypad (0-9)** to enter your old six-digit password.  
→ When doing this for the first time, key in '136900'.  
→ If you forget your old six-digit password, key in '136900'.
- 4 Enter the new six-digit password.
- 5 Enter the new six-digit password a second time to confirm.  
→ The new six-digit password will now take effect.
- 6 Press **OK** to confirm.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

## DVD Setup Menu Options

### Setting the DivX Subtitle font

You can set the font type that supports the recorded DivX subtitle.

- 1 In 'PREFERENCE PAGE', press ▲▼ to highlight {DivX SUBTITLE}, then press ►.

#### **Standard**

Albanian, Danish, Dutch, English, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

### Restoring to original settings

Setting the DEFAULT function will reset all options and your personal settings to the factory defaults, except your password for Parental Control and Disc Lock.

- 1 In 'PREFERENCE PAGE', press ▲▼ to highlight {DEFAULT}, then press ► to select {RESET}.
- 2 Press **OK** to confirm.  
→ All settings will now reset to factory defaults.

**TIPS:** The underlined option is the factory default setting.  
Press ◀ to go back to the previous menu item. Press **SETUP** to exit the menu item.

# Specifications

English

## TV STANDARD (PAL/50Hz) (NTSC/60Hz)

Number of lines	625	525
Playback	Multistandard	(PAL/NTSC)

## VIDEO PERFORMANCE

Video DAC	12 bit, 108mHz
YPbPr	0.7Vpp — 75 ohm
Video Output	1Vpp — 75 ohm
HDMI	480p, 576p, 720p, 1080i, Auto

## VIDEO FORMAT

Digital Compression	MPEG 2 for DVD,SVCD
	MPEG 1 for VCD
	DivX

	50Hz	60Hz
Horiz. resolution	720 pixels	720 pixels
Vertical resolution	576 lines	480 lines
	50Hz	60Hz
Horiz. resolution	352 pixels	352 pixels
Vertical resolution	288 lines	240 lines

## AUDIO FORMAT

Digital	MPEG/ AC-3/ PCM	compressed Digital 16, 20, 24 bits fs, 44.1, 48, 96 kHz
	MP3(ISO 9660)	96, 112, 128, 256 kbps & variable bit rate fs, 32, 44.1, 48 kHz
Analog Sound Stereo		
Dolby Surround compatible downmix from Dolby Digital multi-channel sound		

## AUDIO PERFORMANCE

DA Converter	24 bit, 192 kHz
DVD	fs 96 kHz 4Hz- 44kHz fs 48 kHz 4Hz- 22kHz
SVCD	fs 48 kHz 4Hz- 22kHz fs 44.1kHz 4Hz- 20kHz
CD/VCD	fs 44.1kHz 4Hz- 20kHz
Signal-Noise (1kHz)	> 90 dB
Dynamic range(1kHz)	> 80 dB
Crosstalk (1kHz)	> 70 dB
Distortion/noise (1kHz)	> 65 dB
MPEG MP3	MPEG Audio L3
HDMI Output	

## CONNECTIONS

YPbPr Output	Cinch 3x
Video Output	Cinch (yellow)
Audio Output(L+R)	Cinch (white/red)
Digital Output	1 coaxial IEC60958 for CDDA / LPCM IEC61937 for MPEG 1/2, Dolby Digital

## CABINET

Dimensions (w x h x d)	435 x 37 x 235 mm
Weight	Approximately 2.0 kg

## POWER CONSUMPTION

Power Supply Rating	120V; 60Hz
Power consumption	< 10 W
Power consumption in Standby mode	< 0.8 W

Specifications subject to change without prior notice

## Troubleshooting

### WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
<b>No power</b>	<ul style="list-style-type: none"> <li>– Check if the AC power cord is properly connected.</li> <li>– Press the STANDBY ON on the front of the DVD system to turn on the power.</li> </ul>
<b>No picture</b>	<ul style="list-style-type: none"> <li>– Refer to your TV's manual for correct Video In channel selection. Change the TV channel until you see the DVD screen.</li> <li>– Check if the TV is switched on.</li> <li>– If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see page 20 for proper progressive scan set up or deactivate the progressive scan feature as below:               <ol style="list-style-type: none"> <li>1) Turn off your TV progressive scan mode or turn on to interlaced mode.</li> <li>2) Press OPEN/CLOSE to open the disc tray.</li> <li>3) Press numeric keypad '1' on the remote control for few seconds.</li> </ol> </li> </ul>
<b>Distorted picture</b>	<ul style="list-style-type: none"> <li>– Sometimes a small amount of picture distortion may appear depending on the disc being played back. This is not a malfunction.</li> </ul>
<b>Completely distorted picture or black/white picture with DVD</b>	<ul style="list-style-type: none"> <li>– Connect DVD Player directly to the TV.</li> <li>– Make sure the disc is compatible with the DVD/ Player.</li> <li>– Ensure that the DVD Player's TV Type is set to match that of the Disc and your TV.</li> </ul>
<b>No sound or distorted sound</b>	<ul style="list-style-type: none"> <li>– Adjust the volume.</li> <li>– Check that the speakers are connected correctly.</li> </ul>
<b>No audio at digital output</b>	<ul style="list-style-type: none"> <li>– Check the digital connections.</li> <li>– Check if your receiver can decode MPEG-2 and if not, please make sure the digital output is set to PCM.</li> <li>– Check if the audio format of the selected audio language matches your receiver capabilities.</li> </ul>
<b>Disc can't be played</b>	<ul style="list-style-type: none"> <li>– The DVD+R/CD-R must be finalized.</li> <li>– Ensure the disc label is facing up.</li> <li>– Check if the disc is defective by trying another disc.</li> <li>– Region code incorrect.</li> </ul>

Visit us at [www.philips.com/support](http://www.philips.com/support) for service support



## Troubleshooting

English

Problem	Solution
<b>Picture freezes momentarily during playback</b>	<ul style="list-style-type: none"> <li>– Check the disc for fingerprints/scratches and clean with a soft cloth wiping from center to edge.</li> </ul>
<b>No return to start-up screen when disc is removed</b>	<ul style="list-style-type: none"> <li>– Reset the unit by switching the player off, then on again.</li> </ul>
<b>The player does not respond to the Remote Control</b>	<ul style="list-style-type: none"> <li>– Aim the Remote Control directly at the sensor on the front of the player.</li> <li>– Reduce the distance to the player.</li> <li>– Replace the batteries in the Remote Control.</li> <li>– Re-insert the batteries with their polarities (+/– signs) as indicated.</li> </ul>
<b>Buttons do not work</b>	<ul style="list-style-type: none"> <li>– To completely reset the player, unplug the AC cord from the AC outlet for 5-10 seconds.</li> </ul>
<b>Player does not respond to some operating commands during playback.</b>	<ul style="list-style-type: none"> <li>– Operations may not be permitted by the disc. Refer to the instructions of the disc jacket.</li> </ul>
<b>DVD Player cannot read CDs/DVDs</b>	<ul style="list-style-type: none"> <li>– Use a commonly available cleaning CD/DVD to clean the lens before sending the DVD Player for repair.</li> </ul>
<b>Menu items cannot be selected</b>	<ul style="list-style-type: none"> <li>– Press STOP twice before selecting System Menu.</li> <li>– Depending on the disc availability, some menu items cannot be selected.</li> </ul>
<b>Unable to play DivX movies</b>	<ul style="list-style-type: none"> <li>– Check that the DivX file is encoded in 'Home Theater' mode with DivX 5.x encoder.</li> </ul>
<b>Unable to select Progressive Scan on/off</b>	<ul style="list-style-type: none"> <li>– Check that the output of the video signal is switch to 'YUV'.</li> </ul>
<b>No sound during DivX movies playback</b>	<ul style="list-style-type: none"> <li>– The audio codec may not be supported by the DVD player.</li> </ul>
<b>An DivX movies does not repeat</b>	<ul style="list-style-type: none"> <li>– Check that file size of the movies does not exceed the file size of the CD disc during burning.</li> </ul>
<b>The contents of the USB flash drive cannot be read</b>	<ul style="list-style-type: none"> <li>– The USB flash drive format is not compatible with the player.</li> <li>– Drive is formatted with a different file system. (eg. NTFS)</li> </ul>
<b>Slow operations of the USB flash drive</b>	<ul style="list-style-type: none"> <li>– Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.</li> </ul>
<b>No sound is output from the HDMI out</b>	<ul style="list-style-type: none"> <li>– Check the connection between the TV and the HDMI jack of DVD player.</li> <li>– See if the TV supports this 480p/576p/720p/1080i DVD player.</li> <li>– Check your TV system setup correctly.</li> </ul>

Visit us at [www.philips.com/support](http://www.philips.com/support) for service support

## Glossary

**Analog:** Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

**Aspect ratio:** The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs. is 4:3, and that of wide-screens is 16:9.

**AUDIO OUT Jacks:** Jacks on the back of the DVD System that send audio to another system (TV, Stereo, etc.).

**Bit Rate:** The amount of data used to hold a given length of music; measured in kilobits per seconds, or kbps. Or, the speed at which you record. Generally, the higher the bit rate, or the higher the recording speed, the better the sound quality. However, higher bit rates use more space on a Disc.

**Chapter:** Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

**Component Video Out Jacks:** Jacks on the back of the DVD System that send high-quality video to a TV that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

**Disc menu:** A screen display prepared for allowing selection of images, sounds, subtitles, multi-angles, etc recorded on a DVD.

**Digital:** Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

**DivX 3.11/4.x/5.x:** The DivX codec is a patent-pending, MPEG-4 based video compression technology, developed by DivXNetworks, Inc., that can shrink digital video to sizes small enough to be transported over the internet, while maintaining high visual quality.

**Dolby Digital:** A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right, center and subwoofer).

**DTS:** Digital Theater Systems. This is a surround sound system, but it is different from Dolby Digital. The formats were developed by different companies.

**JPEG:** A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

**MP3:** A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

**Multichannel:** DVD is specified to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

**Parental Control:** A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

**PCM (Pulse Code Modulation):** A system for converting analog sound signal to digital signal for later processing, with no data compression used in conversion.

**Playback control (PBC):** Refers to the signal recorded on video CDs or SVCDs for controlling reproduction. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

**Progressive Scan:** It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert the interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution.

**Region code:** A system for allowing discs to be played back only in the region designated beforehand. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the product label. Some discs are compatible with more than one region (or ALL regions).

**Surround:** A system for creating realistic three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

**Title:** The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.

**VIDEO OUT jack:** Jack on the back of the DVD System that sends video to a TV.

**HDMI:** High Definition Multimedia Interface. A specification developed by the HDMI Working Group that combines multi-channel audio and high definition video and that controls signals into a single digital interface for use with DVD players, digital television, and other audiovisual devices.

## PHILIPS LIMITED WARRANTY

### Ninety (90) Days Free Product Exchange Ninety-One (91) Days-One (1) Year Reduced-Cost Exchange

**PHILIPS CONSUMER ELECTRONICS** warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

**PROOF OF PURCHASE:**

You must have proof of the date of purchase to exchange the product. A sales receipt or other document showing the product and the date that you purchased the product as well as the authorized retailer included, is considered such proof.

**COVERAGE:**

Warranty coverage begins the day you buy your product. For a period of ninety (90) days from the date of purchase, if the product is determined to be defective, Philips will exchange the defective product with a new or renewed product, at its option, at no charge.

From ninety-one (91) days to one year from the date of purchase, you will pay a preset exchange fee to obtain a new or renewed product. Contact the Customer Care Center for limited exchange pricing. This exchange opportunity ends one year after the date of purchase. The replacement product is covered only for the warranty period of the original product. When the warranty on the original product expires, the warranty on all replaced products also expires. When it is necessary for you to ship the product to Philips for exchange, you will pay the shipping cost for shipment to Philips. Philips will pay the shipping costs when returning a product to you.

Note: The exchange model supplied will be the most comparable one in Philips current inventory. Shipping of your product to Philips implies intent to follow the specified requirements of the warranty and exchange program. Product received by Philips cannot be returned. Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay of exchange process.

**EXCLUDED FROM WARRANTY COVERAGE**

Your warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- Damage occurring to product during shipping when improperly packaged or cost associated with packaging.

- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Products sold AS IS or RENEWED.

**WHERE WARRANTY EXCHANGE IS AVAILABLE:**

Exchange is available in all countries where Philips officially distributes the product. In countries where Philips does not distribute the product, the local Philips organization will attempt to exchange the product, although there may be a delay if the appropriate product is not readily available, or special customs processes are implied.

**FOR EXCHANGE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...**

Contact Philips Customer Care Center at:  
1-888-PHILIPS (1-888-744-5477)

**FOR EXCHANGE IN CANADA...**

1-800-661-6162 (French Speaking)  
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract agreement with the PHILIPS partnership within ninety (90) days of the date of sale, the limitation on how long an implied warranty lasts does not apply.

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

Philips, P.O. Box 671539, Marietta, GA. 30006-0026

(Warranty: 4835 710 27475)