

PHILIPS

产品 : 飞利浦蒸汽挂烫机
 型号 : GC502, GC503, GC504, GC506
 额定电压 : 220V ~
 额定频率 : 50Hz
 额定输入功率: 1500 W
 生产日期 : 请见产品本体
 产地 : 中国浙江慈溪

飞利浦 (中国) 投资有限公司
 上海市天目西路218号1602-1605
 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.84-2007 制造

请妥善保管本使用说明书
 发行日期: 10/10/2015

 
Always there to help you / 始终如一地为您提供帮助
 Register your product and get support at / 请登录以下网址并得到相应的帮助
 www.philips.com/welcome

Question?
Contact Philips
有疑问?
请联系飞利浦



User manual / 用户手册
PHILIPS

	3		12
	4		13
	9		13
	10		14
	11		15
	11		16

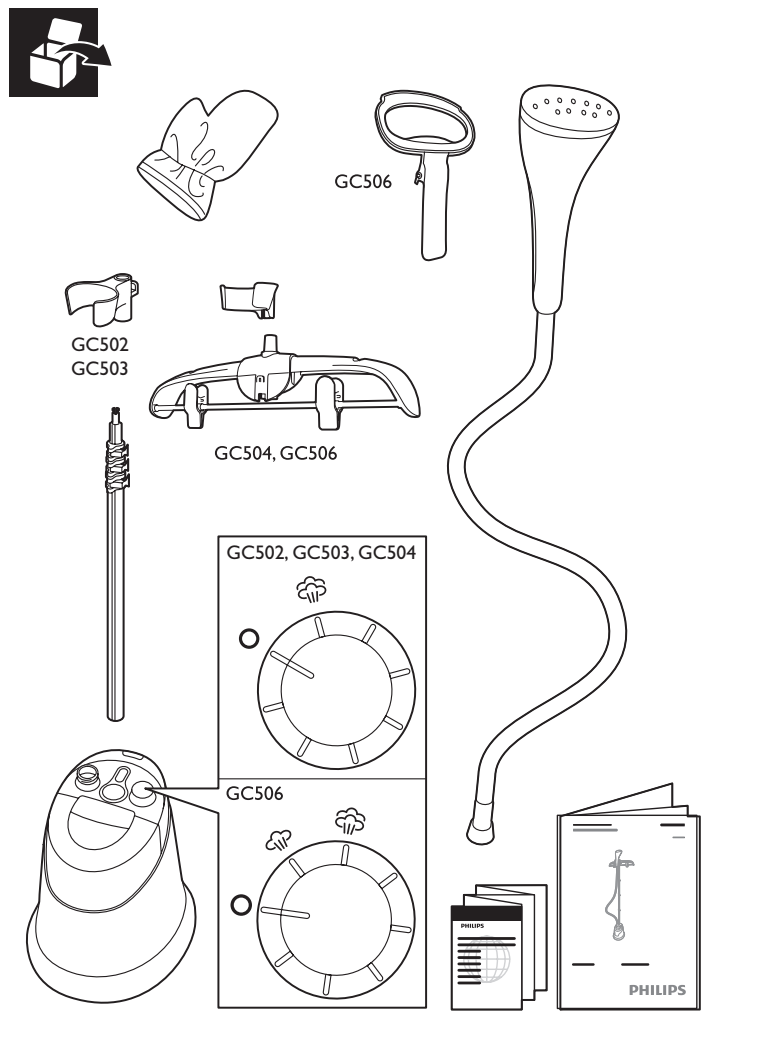

ENGLISH

Introduction
 Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important
 Read this important information carefully before you use the appliance and save it for future reference.

Danger
 - Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning
 - Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
 - Do not use the appliance if the plug, the mains cord or the appliance itself shows visible damage, or if the appliance has been dropped or leaks.
 - Do not connect the appliance to a direct current supply.
 - Always return the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid.
 - If the mains cord is damaged you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
 - Never leave the appliance unattended when it is connected to the mains.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning safe use of the appliance by a person responsible for their safety.

Environment
 - Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment. (Fig. 1)

Guarantee and support
 If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

- When you have finished steaming, when you fill or empty the water tank, when you perform cleaning and rinsing and when you leave the appliance even for a short while, remove the mains plug from the wall socket.
 - Keep the appliance and its mains cord out of reach of children.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Only connect the appliance to an earthed wall socket.
 - Do not use the appliance when the water tank is empty.

Caution
 - Check the mains cord regularly for possible damage.
 - Beware of hot steam and hot water that comes out of the steamer during use. Steam and hot water can cause burns.
 - The nozzle of the steamer head can become extremely hot and may cause burns if touched.
 - This appliance is intended for household use only.
 - Never drag or pull the appliance across the floor.
 - Do not place the steamer base on top of table or chair but rather keep the steamer base on the floor during usage duration.
 - If the hose forms a U shape, steam condenses in the hose. This causes irregular steam or water droplets to come out of the steamer head.
 - Do not let the mains cord come into contact with hot steam when the appliance is in operation.
 - Steam may damage or cause discolouration of certain wall or door finishes.

Electromagnetic fields (EMF)
 This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment
 - Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment. (Fig. 1)

Guarantee and support
 If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

简体中文

简介
 感谢您的惠顾, 欢迎光临飞利浦! 为了您能充分享受飞利浦提供的支持, 请在 www.philips.com/welcome 上注册您的产品。

注意事项
 使用产品之前, 请仔细阅读本重要信息, 并妥善保管以供日后参考。

危险
 - 不要将本产品浸入水或其它液体中, 也不要在水龙头下冲洗。

警告
 - 在将产品连接电源之前, 请先检查产品所标电压与当地的供电电压是否相符。
 - 如果插头、电源线或产品本身已经明显损坏, 或产品曾坠落或出现渗漏, 请勿再使用。
 - 切勿将产品连接到直流电源。
 - 产品只能送到由飞利浦授权的维修中心检修。不要自己修理产品, 否则产品维修保证书将会无效。
 - 如果电源软线损坏, 为了避免危险, 必须由制造商、其维修部或类似部门的专业人员来更换。
 - 电源接通期间, 使用者不得离开。

电磁场 (EMF)
 本产品符合所有有关暴露于电磁场的适用标准和法规。

环保
 - 弃置产品时, 请不要将其与一般生活垃圾扔在一起, 应将其交给指定的回收中心, 这样做有利于环保。(图 1)

保修和支持
 如果您需要信息或支持, 请访问 www.shop.philips.com/service 或阅读单独的全球保修卡。

- 本产品不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人(包括儿童)使用, 除非有负责他们安全的人对他们使用本产品进行监督或指导。
 - 当完成熨烫、为水箱加水或清空水箱、清洁和冲洗产品以及短时间离开产品时, 请从电源插座上拔下电源插头。
 - 将产品和电源线放在儿童接触不到的地方。请照顾好儿童, 本产品不能用于玩耍。
 - 产品只能使用带接地线的插座。
 - 水箱为空时, 请勿使用产品。

注意
 - 定期检查电源线是否损坏。
 - 在使用过程中, 请小心烫中冒出的热蒸汽和热水。蒸汽和热水可能会导致烫伤。
 - 当使用器具时要注意防止由于蒸汽和热水喷溅的危险
 - 蒸汽挂烫机蒸汽喷头的喷嘴会变得非常烫, 如触摸喷嘴, 则会导致烫伤。
 - 本产品仅限于家用。
 - 切勿在地板上拖拉本产品。
 - 切勿将蒸汽挂烫机底座放置在桌面或椅子上, 使用过程中, 请将蒸汽挂烫机底座放在地板上。
 - 如果蒸汽输送管处于 U 形状态, 则蒸汽会在输送管内冷凝。从而导致蒸汽输出不连贯或蒸汽喷头中滴出水滴。


 
 
 
 
 
- 产品工作期间, 切勿让电源线与高温蒸汽接触。
 - 蒸汽可能损坏或导致某些墙体或门褪色。

电磁场 (EMF)
 本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

环保
 - 弃置产品时, 请不要将其与一般生活垃圾扔在一起, 应将其交给指定的回收中心, 这样做有利于环保。(图 1)




保修和支持
 如果您需要信息或支持, 请访问 www.shop.philips.com/service 或阅读单独的全球保修卡。



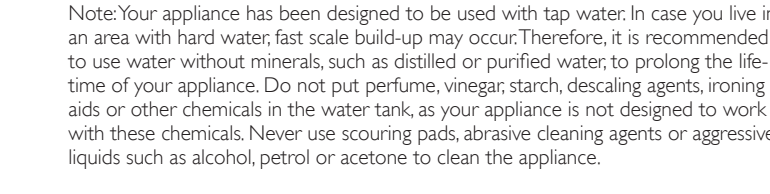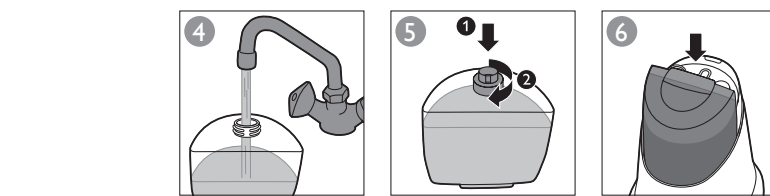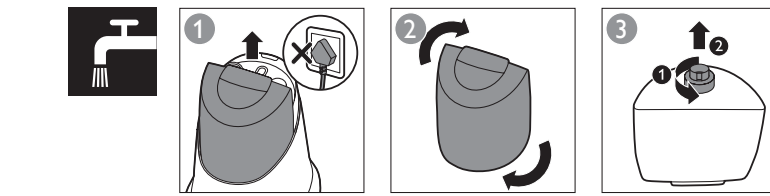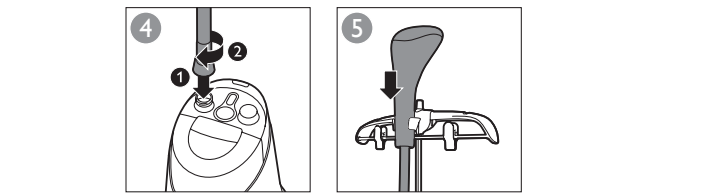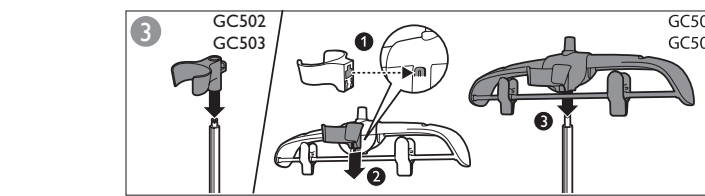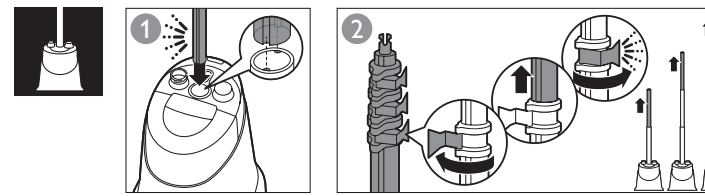






Note: Your appliance has been designed to be used with tap water. In case you live in an area with hard water, fast scale build-up may occur. Therefore, it is recommended to use water without minerals, such as distilled or purified water; to prolong the lifetime of your appliance. Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank, as your appliance is not designed to work with these chemicals. Never use scouring pads, abrasive cleaning agents or aggressive liquids such as alcohol, petrol or acetone to clean the appliance.

  注意: 根据设计, 您的产品适合使用自来水。如果您所居住的区域水质非常硬, 水垢积聚会非常快。因此, 建议使用不含矿物质的水(如蒸馏水或纯净水)以延长产品的使用寿命。切勿将香水、醋、淀粉、除垢剂、烫衣剂或其它化学品注入水箱内, 因为您的产品不适合使用这些化学品。切勿使用钢丝绒、研磨性清洁剂或腐蚀性液体(例如酒精、汽油或丙酮)来清洁产品。

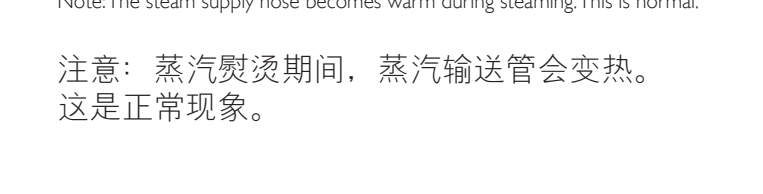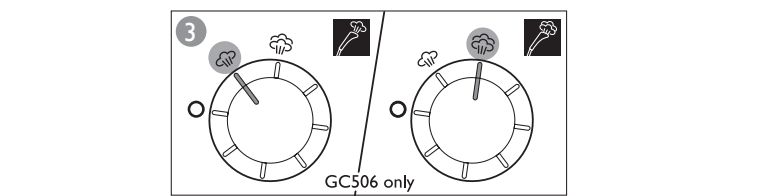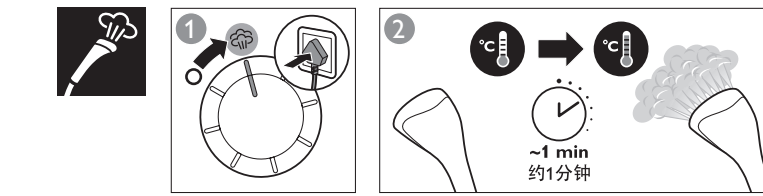






Note: The steam supply hose becomes warm during steaming. This is normal.

     注意: 蒸汽熨烫期间, 蒸汽输送管会变热。这是正常现象。

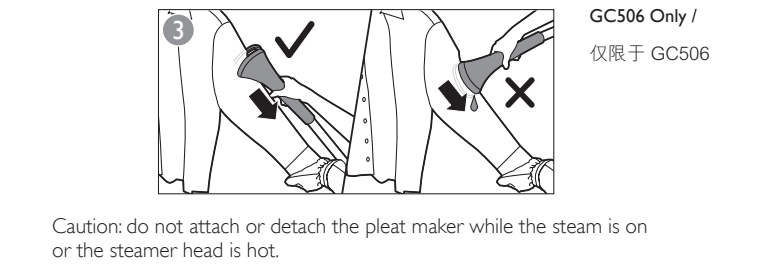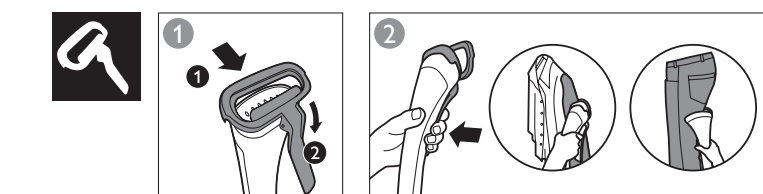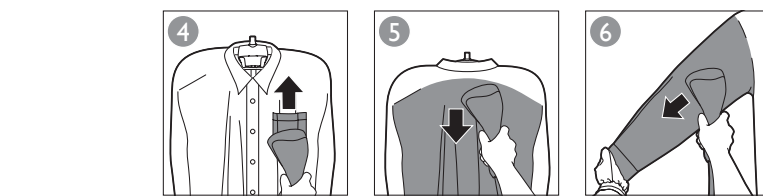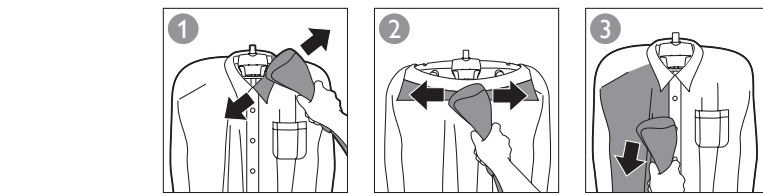





Note: The steam supply hose becomes warm during steaming. This is normal.

   注意: 蒸汽熨烫期间, 蒸汽输送管会变热。这是正常现象。

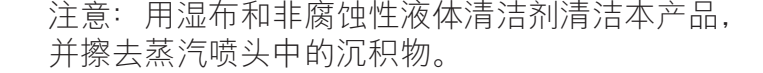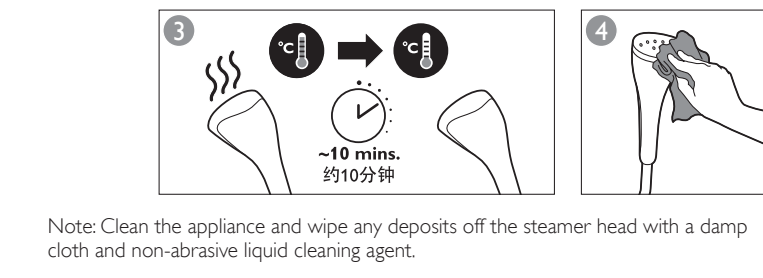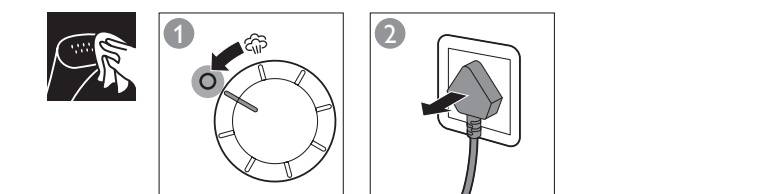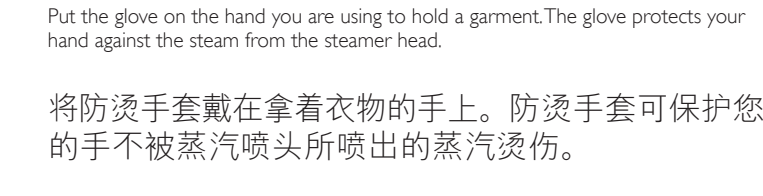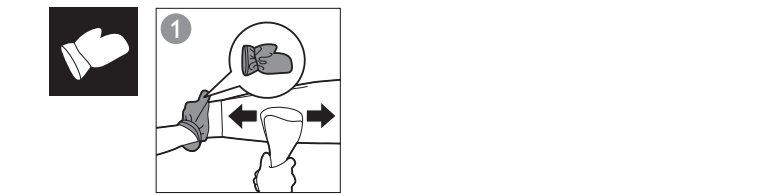





Note: The steam supply hose becomes warm during steaming. This is normal.

    注意: 蒸汽熨烫期间, 蒸汽输送管会变热。这是正常现象。

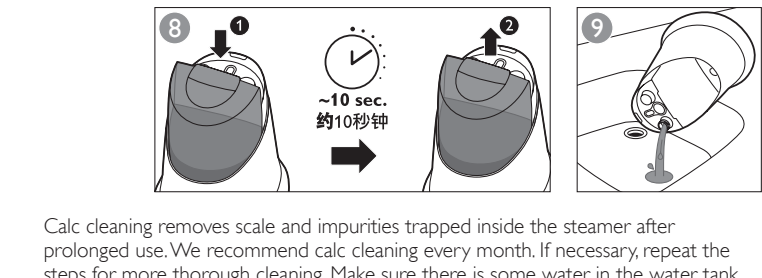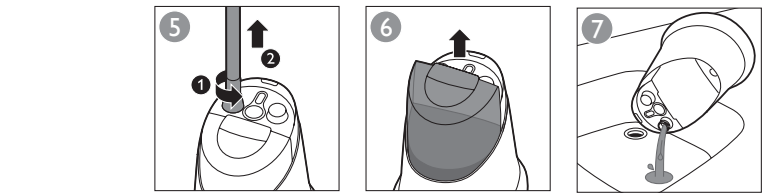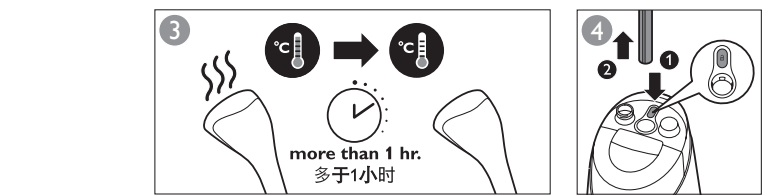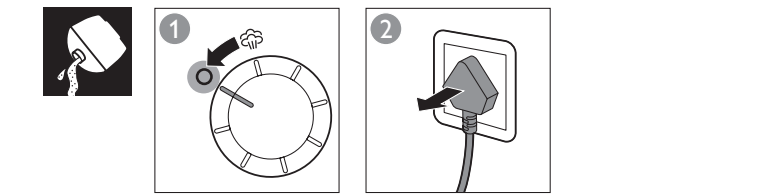




Note: The steam supply hose becomes warm during steaming. This is normal.

  注意: 蒸汽熨烫期间, 蒸汽输送管会变热。这是正常现象。

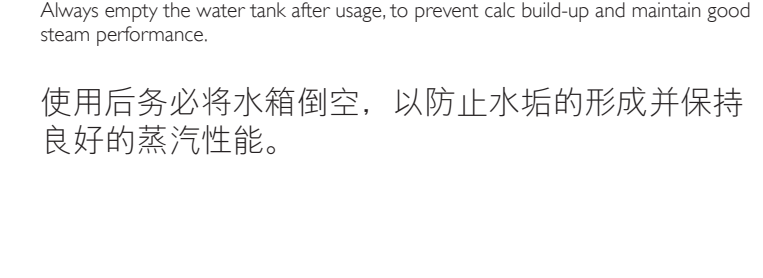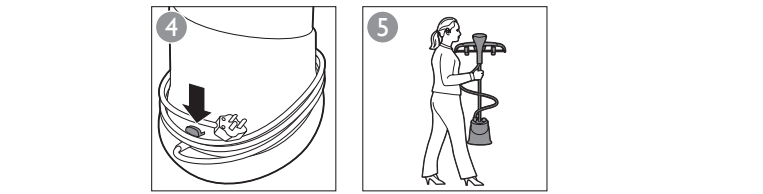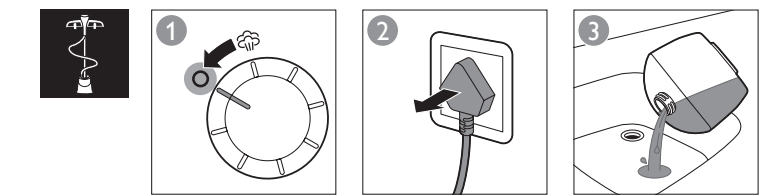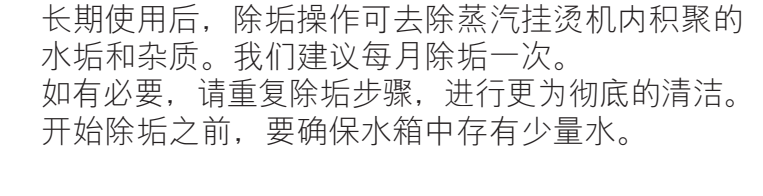






Note: The steam supply hose becomes warm during steaming. This is normal.

注意: 蒸汽熨烫期间, 蒸汽输送管会变热。这是正常现象。

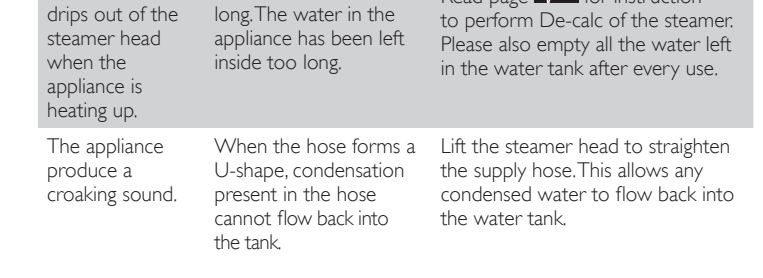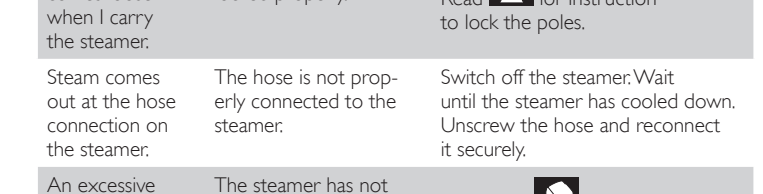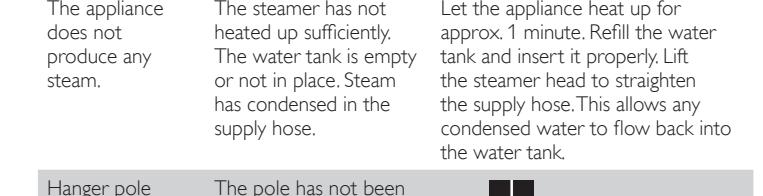

Note: The steam supply hose becomes warm during steaming. This is normal.

  注意: 蒸汽熨烫期间, 蒸汽输送管会变热。这是正常现象。

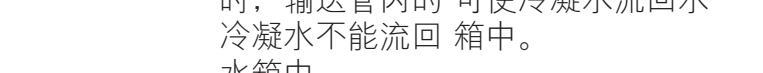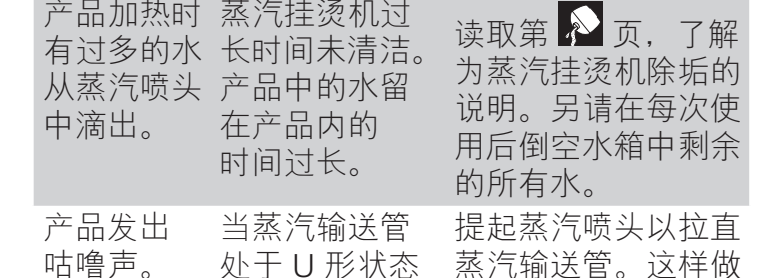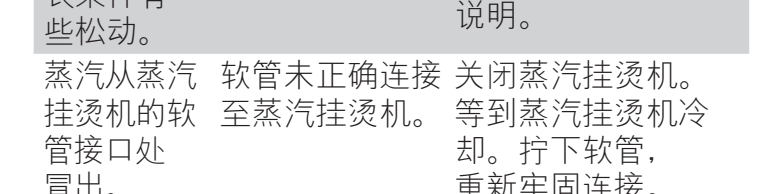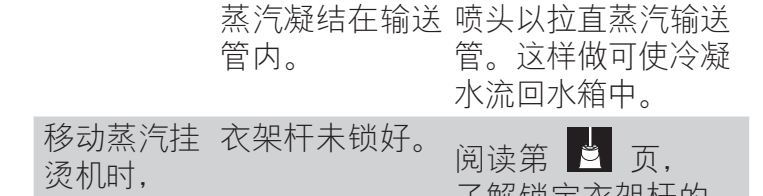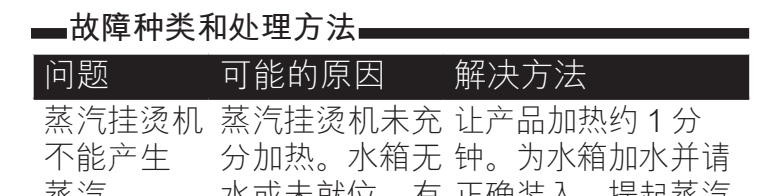

Note: The steam supply hose becomes warm during steaming. This is normal.

注意: 蒸汽熨烫期间, 蒸汽输送管会变热。这是正常现象。