

<div></div>	ENGLISH
---------------------------------------	----------------

Introduction
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

General description

- Motor unit
- A Driving shaft
- B Locking arm
- C Control knob
- E Cord storage facility
- F Overload protection button
- Juicer
 - F Cover of pusher
 - G Pusher with pre-clean function
 - H Feeding tube
 - I Lid
 - J Sieve
 - K Direct screw spout accessory
 - L Juice collector with (R) detachable spout
 - M Pulp window
 - N Pulp container
 - O Citrus press (HR1878, HR1874, HR1870 only)
 - O Cone
 - O Juice collector
 - R Detachable spout
 - S Citrus press coupling unit
 - 4 Juice jug lid with integrated foam separator
 - 5 Juice jug

Important

Read this user manual carefully before you use the appliance and save it for future reference.

- Danger**
 - Never immerse the motor unit or the citrus press coupling unit in water or any other liquid, nor rise it under the tap.
 - Do not touch the motor unit or the citrus press coupling unit in the dishwasher.
- Warnings**
 - Check if the voltage indicated on the base of the appliance corresponds to the local mains voltage before you connect the appliance.
 - Do not use the appliance if the plug, the mains cord or other components are damaged.
 - If the mains cord is damaged, you must have it replaced by Philips, a service centre authorized by Philips or similarly qualified persons in order to avoid a hazard.
 - The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Never let the appliance operate unattended.
 - Always disconnect the appliance from the mains if you leave it unattended or before you assemble, disassemble or clean it.
 - If you detect cracks in the filter or if the filter is damaged in any way, do not use the appliance anymore and contact the nearest Philips service centre.
 - Never reach into the feeding tube with your fingers or an object while the appliance is operating. Only use the pusher for this purpose.
 - Do not touch the small cutting blades in the base of the filter.They are very sharp.
 - Always place and use the appliance on a dry stable and level surface.
 - To ensure that the appliance stands stably, keep the surface on which the appliance stands and the bottom of the appliance clean.

- Caution**
 - This appliance is intended for household use only.
 - Do not hold the appliance by the locking arm when you carry it.
 - Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend if you use such accessories or parts, your guarantee becomes invalid.
 - Make sure all parts are correctly assembled before you switch on the appliance.
 - Only use the appliance when the locking arm is in locked position.
 - Before you disassemble the appliance and before you clean it, set the control knob to off position and remove the plug from the wall socket.Then lower the locking arm to unlocked position.
 - Only lower the locking arm to unlocked position after you have switched off the appliance and the filter has stopped rotating.
 - HR1870, HR1874, HR1878: Do not use the citrus press longer than 10 minutes without interruption.
 - HR1870, HR1874, HR1878: Never immerse the citrus press coupling unit in water nor rise under the tap.
 - HR1870, HR1874, HR1878: Never clean the citrus press coupling unit in the dishwasher.
 - Always unplug the appliance after use.
 - Noise level Lc = 78 dB(A).
- Safety feature**
 - This appliance is fitted with a safety feature which safeguards against overheating due to excessive loads. In case of overheating, the juicer automatically activates the overload protection and switches itself off. If this occurs, set the control knob to 0, unplug the appliance and let it cool down for 15 minutes. Remove the juice jug and detach the lid, the juice collector and the pulp container and then press the overload protection button on the bottom of the motor unit.

Problem	Solution
The juicer does not work.	The appliance is equipped with a safety system. If the parts have not been assembled correctly, the appliance does not work. Switch off the appliance and check whether the parts have been assembled in the right way.
The juicer stops during use.	The juicer is overheated. Switch off and unplug the appliance. Remove the pulp from the integrated pulp container.Wait until the appliance has cooled down.Then press the overload protection button on the bottom of the motor unit.
The juicer slows down during use.	The integrated pulp container has reached its maximum capacity. Switch off the appliance and remove the pulp from the integrated pulp container.
The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch.	It is common for a new appliance to produce an unpleasant smell or emit a little smoke when it is first used. The phenomenon stops after you have used the appliance a few times.
The filter is blocked.	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.
The filter touches the feeding tube and vibrates strongly during processing.	The appliance may produce an unpleasant smell or emit some smoke if it has been used to process excessive loads. In that case, switch off the appliance and let it cool down for 60 minutes. If the problem persists, contact the Philips Consumer Care Centre in your country.
The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch.	It is common for a new appliance to produce an unpleasant smell or emit some smoke when it is first used. The phenomenon stops after you have used the appliance a few times.
Noise level Lc = 78 dB(A).	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.

This appliance is fitted with a safety feature which safeguards against overheating due to excessive loads. In case of overheating, the juicer automatically activates the overload protection and switches itself off. If this occurs, set the control knob to 0, unplug the appliance and let it cool down for 15 minutes. Remove the juice jug and detach the lid, the juice collector and the pulp container and then press the overload protection button on the bottom of the motor unit.

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Before first use

Thoroughly clean the parts that come into contact with food before you use the appliance for the first time (see chapter "Cleaning and storage").

Tips

- Always keep the filter before use. If you detect any cracks or damage, do not use the appliance.
- Make sure the locking arm is locked into position.
- To keep your juice fresh longer, put the lid on the juice jug after juicing

Using the appliance

Juicer

You can use the juicer to produce fruit and vegetable juice.

- Do not operate the juicer for more than 60 seconds at a time when you juicer heavily loads and let it cool down sufficiently after each use.
- Turn the control knob to setting 1 (low speed) or 2 (normal speed).
- Speed 1 is especially suitable for soft fruits and vegetables such as watermelons, grapes, tomatoes and cucumbers.
- Speed 2 is suitable for all other kinds of fruit and vegetables such as apples, carrots and beetroots.

- Notes**
 - Do not exert too much pressure on the pusher, as this could affect the quality of the end result. It could even cause the filter to come to a halt.
 - Never insert your fingers or an object into the feeding tube.
 - If the pulp container becomes full during use, switch off the appliance and detach the pulp container. Then carefully remove the pulp container and empty it.
 - After you have processed all ingredients and the juice flow has stopped, pour the juice from the jug into the glass.
- Empty the pulp container**
 - Note: When the pulp container has reached its maximum capacity, pulp ends up in the juice collector, lid and in the juice.
 - If the pulp container becomes overflowed, the appliance may become blocked. When this occurs, switch off the appliance and remove the pulp from the pulp container. Let the appliance cool down for 15 minutes and press the overload protection button on the bottom of the motor unit to reset (f).

Citrus press (HR1878,HR1874,HR1870 only)

Philips' juicer helps you to use when the pulp container is full and needs to be emptied. Because the pulp window may become blocked before the maximum capacity is reached, also check the level indicated on the juice jug. The pulp window is more likely to become blocked when you juice hard ingredients, such as carrots or beetroots.

Citrus press (HR1878,HR1874,HR1870 only)

- Note**
 - If you want to extract juice straight into a glass, use the direct screw spout accessory.
 - To prevent damage and injuries, keep the operating appliance away from long hair, clothes, cords, etc.
 - Only use speed 1 for the citrus press.
- Tips**

Preparations

Use fresh fruit and vegetables, as they contain more fibre. Pineapples, beetroots, celery stalks, apples, cucumbers, carrots, spinach, melons, tomatoes, oranges and grapes are particularly suitable for processing in the juicer.

- The juicer is not suitable for processing very hard and/or fibrous or starchy fruits or vegetables such as sugar cane.
- Leaves and leaf stalks of e.g. lettuce can also be processed in the juicer.
- Remove stones from cherries, plums, peaches, etc. You do not have to remove cores or seeds from fruits like peaches, apples and grapes.
- When you use the juicer, you do not have to remove the peels or skins.
- Only remove thick peels that you would not eat, e.g. those of oranges, pineapples, lewis, melons and uncooked beetroot.
- When you prepare apple juice, take into consideration that the thickness of the apple juice depends on the kind of apple you use. The juicer the apple, the thinner the juice. Choose a kind of apple that produces the type of juice you prefer.
- If you want to process citrus fruits with the juicer, remove the peel as well as the white pith. The white pith gives a bitter taste.
- Fruits that contain starch, such as bananas, papayas, avocados, figs and mangoes are not suitable for processing in the juicer. Use a food processor, blender or hand blender to process these fruits.
- To extract the maximum amount of juice, always press down the pusher slowly.

- Serving**
 - Drink the juice immediately after you have extracted it.
 - If you want clear juice without a foam layer, put the lid with integrated foam separator on the juice jug. If you want cloudy juice with a foam layer, remove the lid with integrated foam separator from the juice jug and stir the juice before you pour it in a glass.
 - Apple juice turns brown very quickly. To slow down this process, add a few drops of lemon juice.
 - When you serve cold drinks, add a few ice cubes.

Healthly recipe

Orange carrot juice

Ingredients:

- 1kg carrots
- 4 oranges (peeled)
- 1 tbsp olive oil
- 1 large fresh mint sprig (optional garnish)

Process the carrots and oranges in the juicer.

1 Add a tablespoon of olive oil and a few ice cubes to the juice and mix well.
2 Note: This appliance can process 5kg of carrots (batches of 2.5 kg / 60 seconds). Make sure to empty the pulp container after each batch of 2.5 kg. When you have finished processing the carrots, switch off the appliance and let it cool down for 15 minutes.

Cleaning

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as alcohol, petrol or acetone to clean the appliance.

The appliance is easier to clean if you do so immediately after use.

Pre-clean function

When you use the pre-clean function, the lid and the sieve are rinsed with water.

Use the pre-clean function:

- To make the juicer easier to clean.
- To rinse the juicer when you switch to a different fruit or vegetable and want to avoid mixing flavours.
- To dilute the juice with water and catch even the last drop of juice.

Juicer

To keep your kitchen clean, all detachable parts (pulp container, juice collector, filter and lid) can be cleaned to the sink in one go.

Tip: Use a sponge to clean the filter.

Citrus press (HR1878, HR1874, HR1870 only)

To keep your kitchen clean, all detachable parts (except the citrus press coupling unit) can be cleaned to the sink in one go.

Storage

To store the cord, wind it round the cord storage facility in the base of the appliance.

Caution: Do not hold the appliance by the locking arm or spout when you carry it.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you will help to preserve the environment (Fig. 1).

Guarantee and support

If you need information or support, please visit **www.philips.com/support** or read the separate worldwide guarantee leaflet.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Solution
The juicer does not work.	The appliance is equipped with a safety system. If the parts have not been assembled correctly, the appliance does not work. Switch off the appliance and check whether the parts have been assembled in the right way.
The juicer stops during use.	The juicer is overheated. Switch off and unplug the appliance. Remove the pulp from the integrated pulp container.Wait until the appliance has cooled down.Then press the overload protection button on the bottom of the motor unit.
The juicer slows down during use.	The integrated pulp container has reached its maximum capacity. Switch off the appliance and remove the pulp from the integrated pulp container.
The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch.	It is common for a new appliance to produce an unpleasant smell or emit a little smoke when it is first used. The phenomenon stops after you have used the appliance a few times.
The filter is blocked.	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.
The filter touches the feeding tube and vibrates strongly during processing.	The appliance may produce an unpleasant smell or emit some smoke if it has been used to process excessive loads. In that case, switch off the appliance and let it cool down for 60 minutes. If the problem persists, contact the Philips Consumer Care Centre in your country.
Noise level Lc = 78 dB(A).	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.

- 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터 또는 필립스 서비스 딜러에게 연락하여 교체하십시오.
- 신체적인 감각 및 인지능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인 및 어린이는 혼자 제품을 사용하지 말고 제품 사용과 관련하여 안전에 책임질 수 있도록 지시사항을 충분히 숙지한 시애틀의 도움을 받으십시오.
- 어린이가 제품을 가지고 놀지 못하도록 지도해 주십시오.
- 제품이 작동 중일 때는 지리를 버려주세요.
- 제품을 사용하지 않고 지리를 버려주세요. 제품을 조립, 분리 및 청소하기 전에 반드시 제품에 서 전원 코드를 뽑으십시오.
- 필터에 금이 갔거나 필터가 손상된 경우, 더 이상 제품을 사용하지 말고 가까운 필립스 서비스 센터에 문의하십시오.
- 제품이 작동하는 동안에는 손가락이 다른 물체에 채로 투입되어 넣지 마십시오. 필요한 경우에는 누름받침을 사용하지 마십시오.
- 필터 바닥의 작은 칼날을 만지지 마십시오. 매우 날카롭습니다.
- 제품을 항상 열기가 없고 안전척이 올바르게 놓이고 사용하지 마십시오.
- 제품이 안전척을 유지할 수 있도록 제품을 올바르게 돌려져 있는 표면을 제품의 바닥을 깨끗한 상태로 유지하십시오.

- 주의**
 - 본 제품은 가정용입니다.
 - 제품을 옮길 때에는 짐을 손잡이를 잡고 옮기지 마십시오.
 - 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품은 사용했을 경우 제품의 보증이 무효화됩니다.
 - 전원을 켜기 전에 모든 부품이 올바르게 장착되어 있는지 확인하십시오.
 - 짐을 손잡이가 접은 상태에 있을 때에만 제품을 사용하십시오.
 - 제품을 분리하기 전에, 먼저 속도 조절기를 거품 제거 위치에 두고 버퍼를 완전히 내려 열림 상태로 만드십시오.
 - 제품을 옮길 때는 열림 상태로 만드십시오.
 - 제품 전원을 끄고 필터가 더 이상 회전하지 않을 때에만 짐을 손잡이를 내려 열림 상태로 만드십시오.
 - HR1870, HR1874, HR1878: 과속 추출기는 10분 이상 연속해서 사용하지 마십시오.
 - HR1870, HR1874, HR1878: 과속 추출기 결합부는 절대로 물에 담그거나 행구지 마십시오.
 - HR1870, HR1874, HR1878: 과속 추출기 결합부는 절대로 뜨거운 물에서 세척하지 마십시오.
 - 사용 후 버퍼와 전원 코드를 뽑으십시오.
 - 소음 수준: Lc = 78dB(A)

문제 해결
이 문은 본 제품을 사용하면서 가장 일반적으로 경험하게 되는 문제와 그 해결 방법을 제시합니다. 이러한 정보로도 문제를 해결할 수 없는 경우 **www.philips.com/support**를 방문하여 지루 않은 질문 (FAQ) 목록을 참조하거나 필립스 고객 상담을 받으십시오.

문제점	해결책
주사기가 작동하지 않습니다.	본 제품은 안전 척이 내장되어 있어 부품이 제대로 장착되어 있지 않으면 작동하지 않습니다. 제품의 전원을 끈 다음 부품이 올바르게 장착되었는지 확인하십시오.
사용 중에 주사기가 작동 중입니다.	주사기가 과열되었습니다. 제품의 전원을 끄고 프로그를 뽑으십시오. 냉각된 과속 용기에서 과속을 제거하고 제품이 식을 때까지 기다린 후 재하에 있는 과파워 방지 버튼을 누릅니다.
사용 중에 주사기가 작동 중입니다.	내장된 과속 용기가 최대 용량에 도달했습니다. 과속 용기를 끄고 용기에 있는 과속을 제거하십시오.
제품에 소음, 이상한 냄새가 나거나 열기가 나거나 열기가 뜨겁거나 만질 수 없거나 만질 수 없습니다.	본 제품이 불완전 냉매가 나거나 처음 몇 번 사용할 때 열기가 나는 것은 일반적입니다. 이러한 열기가 나고 뜨거워지면 만질 수 없거나 만질 수 없습니다.
제품이 멈춘습니다.	과열이나 과속가 필터에 끼여있지 확인하십시오. 만약 그렇다면 제품의 전원을 끄고 30분이 있는 냉동용을 제거한 다음 다시 제품을 주출하십시오.
제품을 옮길 때 소음, 이상한 냄새가 나거나 열기가 나거나 열기가 뜨겁거나 만질 수 없습니다.	제 제품이 불완전 냉매가 나거나 처음 몇 번 사용할 때 열기가 나는 것은 일반적입니다. 이러한 열기가 나고 뜨거워지면 만질 수 없거나 만질 수 없습니다.
제품이 멈춘습니다.	과열이나 과속가 필터에 끼여있지 확인하십시오. 만약 그렇다면 제품의 전원을 끄고 30분이 있는 냉동용을 제거한 다음 다시 제품을 주출하십시오.

제품 사용 전
이 제품을 사용하기 전에 음식과 달걀의 부품을 깨끗이 세척하십시오.

EMF(전자기장)
이 제품은 EMF(전자기장)와 관련된 모든 기준 요구를 준수합니다.

제품 사용 전
이 제품을 사용하기 전에 음식과 달걀의 부품을 깨끗이 세척하십시오.

EMF(전자기장)
이 제품은 EMF(전자기장)와 관련된 모든 기준 요구를 준수합니다.

- 제품 사용 전**
 - 이 제품을 사용하기 전에 음식과 달걀의 부품을 깨끗이 세척하십시오.
- EMF(전자기장)**
 - 이 제품은 EMF(전자기장)와 관련된 모든 기준 요구를 준수합니다.

Problem	Solution
The juicer does not work.	The appliance is equipped with a safety system. If the parts have not been assembled correctly, the appliance does not work. Switch off the appliance and check whether the parts have been assembled in the right way.
The juicer stops during use.	The juicer is overheated. Switch off and unplug the appliance. Remove the pulp from the integrated pulp container.Wait until the appliance has cooled down.Then press the overload protection button on the bottom of the motor unit.
The juicer slows down during use.	The integrated pulp container has reached its maximum capacity. Switch off the appliance and remove the pulp from the integrated pulp container.
The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch.	It is common for a new appliance to produce an unpleasant smell or emit a little smoke when it is first used. The phenomenon stops after you have used the appliance a few times.
The filter is blocked.	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.
The filter touches the feeding tube and vibrates strongly during processing.	The appliance may produce an unpleasant smell or emit some smoke if it has been used to process excessive loads. In that case, switch off the appliance and let it cool down for 60 minutes. If the problem persists, contact the Philips Consumer Care Centre in your country.
Noise level Lc = 78 dB(A).	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.

제품 사용 전
이 제품을 사용하기 전에 음식과 달걀의 부품을 깨끗이 세척하십시오.

EMF(전자기장)
이 제품은 EMF(전자기장)와 관련된 모든 기준 요구를 준수합니다.

제품 사용 전
이 제품을 사용하기 전에 음식과 달걀의 부품을 깨끗이 세척하십시오.

EMF(전자기장)
이 제품은 EMF(전자기장)와 관련된 모든 기준 요구를 준수합니다.

제품 사용 전
이 제품을 사용하기 전에 음식과 달걀의 부품을 깨끗이 세척하십시오.

EMF(전자기장)
이 제품은 EMF(전자기장)와 관련된 모든 기준 요구를 준수합니다.

Problem	Solution
The juicer does not work.	The appliance is equipped with a safety system. If the parts have not been assembled correctly, the appliance does not work. Switch off the appliance and check whether the parts have been assembled in the right way.
The juicer stops during use.	The juicer is overheated. Switch off and unplug the appliance. Remove the pulp from the integrated pulp container.Wait until the appliance has cooled down.Then press the overload protection button on the bottom of the motor unit.
The juicer slows down during use.	The integrated pulp container has reached its maximum capacity. Switch off the appliance and remove the pulp from the integrated pulp container.
The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch.	It is common for a new appliance to produce an unpleasant smell or emit a little smoke when it is first used. The phenomenon stops after you have used the appliance a few times.
The filter is blocked.	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.
The filter touches the feeding tube and vibrates strongly during processing.	The appliance may produce an unpleasant smell or emit some smoke if it has been used to process excessive loads. In that case, switch off the appliance and let it cool down for 60 minutes. If the problem persists, contact the Philips Consumer Care Centre in your country.
Noise level Lc = 78 dB(A).	The appliance is blocked. Check if any fruit or vegetable is stuck in the filter. If so, switch off the appliance, remove the stuck part and start juicing again.

한국어	
제품 정보	
1 분체	제품:
A 구동축	1kg 당당
B 짐을 손잡이	감질 벗긴 열리기 4개
C 속도 조절기	올리보류 1등급
D 코드 보관함	작고 신진센서 1출기(정식용 - 선택사항)
E 과파워 방지 버튼	2 주사기
F 누름받침	제품은 1kg 당당과 오렌지를 넣고 작동시킵니다.
G 푸셔	2. 오렌지 제품을 사용하려면 먼저 과속 추출기 후 열기 켜주세요. 2.5kg 당당용 감질 벗긴 열기 4개 사용하십시오. 감질 벗긴 열기가 끝나고 다음 제품의 전원을 끄고 15분간 냉각을 하십시오
H 직접 스푼 액세서리	세정
I 과일 용기	제품을 세척할 때 소금, 염마성 세제나 알콜, 휘발유 및 같은 강력 세제를 사용하지 마십시오.
J 과일 용기	제품은 사용 후 즉시 청소하는 것이 좋습니다.
K 과일 용기	사전 세척 기능
L (R) 과일 용기	사전 세척 기능은 사용하려면 푸싱과 거품없이 물로 세척됩니다.
M 과일 용기	주사기 및 손잡이 세척하고 열림
N 과일 용기	서로 다른 과일 또는 야채를 번갈아 사용하면서 재료의 일부가 서로 배지
O 과일 용기	가열된 주사기를 청소
P 과일 용기	주사를 물로 쉽게 씻으려고 한 방울도 남김 없이 씻고자 할 때
Q 주사기	주의
R 과일 용기	주사를 광학하게 유지하도록 모든 분리형 부품(과속 용기, 주사기, 버퍼 및 푸싱)을 한 번에 식드레로 옮길 수 있습니다.

도움말: 필터를 청소할 때에는 스펀지를 사용하십시오.

과속 추출기 (HR1878, HR1874, HR1870만 해당)

주방을 광학하게 유지하도록 모든 분리형 부품(과속 추출기 결합부 제외)을 한 번에 식드레로 옮길 수 있습니다.

- 주의**
 - 본 제품은 가정용입니다.
 - 제품을 옮길 때에는 짐을 손잡이를 잡고 옮기지 마십시오.
 - 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품은 사용했을 경우 제품의 보증이 무효화됩니다.
 - 전원을 켜기 전에 모든 부품이 올바르게 장착되어 있는지 확인하십시오.
 - 짐을 손잡이가 접은 상태에 있을 때에만 제품을 사용하십시오.
 - 제품을 분리하기 전에, 먼저 속도 조절기를 거품 제거 위치에 두고 버퍼를 완전히 내려 열림 상태로 만드십시오.
 - 제품을 옮길 때는 열림 상태로 만드십시오.
 - 제품 전원을 끄고 필터가 더 이상 회전하지 않을 때에만 짐을 손잡이를 내려 열림 상태로 만드십시오.
 - HR1870, HR1874, HR1878: 과속 추출기는 10분 이상 연속해서 사용하지 마십시오.
 - HR1870, HR1874, HR1878: 과속 추출기 결합부는 절대로 물에 담그거나 행구지 마십시오.
 - HR1870, HR1874, HR1878: 과속 추출기 결합부는 절대로 뜨거운 물에서 세척하지 마십시오.
 - 사용 후 버퍼와 전원 코드를 뽑으십시오.
 - 소음 수준: Lc = 78dB(A)

문제 해결
이 문은 본 제품을 사용하면서 가장 일반적으로 경험하게 되는 문제와 그 해결 방법을 제시합니다. 이러한 정보로도 문제를 해결할 수 없는 경우 **www.philips.com/support**를 방문하여 지루 않은 질문 (FAQ) 목록을 참조하거나 필립스 고객 상담을 받으십시오.

- 문제점**
- 해결책**

- 문제점**
- 해결책**

문제 해결
이 문은 본 제품을 사용하면서 가장 일반적으로 경험하게 되는 문제와 그 해결 방법을 제시합니다. 이러한 정보로도 문제를 해결할 수 없는 경우 **www.philips.com/support**를 방문하여 지루 않은 질문 (FAQ) 목록을 참조하거나 필립스 고객 상담을 받으십시오.

문제 해결
이 문은 본 제품을 사용하면서 가장 일반적으로 경험하게 되는 문제와 그 해결 방법을 제시합니다. 이러한 정보로도 문제를 해결할 수 없는 경우 **www.philips.com/support**를 방문하여 지루 않은 질문 (FAQ) 목록을 참조하거나 필립스 고객 상담을 받으십시오.

- 문제점**
- 해결책**

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점

문제점