

Always there to help you

Register your product and get support at
www.philips.com/welcome

TCJ330



User Manual

PHILIPS

Contents

| | | |
|----------|------------------|----------|
| 1 | Important | 3 |
|----------|------------------|----------|

| | | |
|----------|-------------------------|----------|
| 2 | Your Alarm Clock | 3 |
| | What's in the box | 3 |

| | | |
|----------|--------------------|----------|
| 3 | Get started | 4 |
| | Install battery | 4 |
| | Set clock | 4 |

| | | |
|----------|-------------------------------------|----------|
| 4 | Set alarm timer | 5 |
| | Set alarm | 5 |
| | Activate/deactivate the alarm timer | 5 |
| | Snooze the alarm | 6 |

| | | |
|----------|--------------------------------|----------|
| 5 | Other features | 6 |
| | Turn the backlight on/off | 6 |
| | Attach the clip to your pillow | 6 |

| | | |
|----------|----------------------------|----------|
| 6 | Product information | 7 |
| | Specifications | 7 |

| | | |
|----------|------------------------|----------|
| 7 | Troubleshooting | 7 |
|----------|------------------------|----------|

| | | |
|----------|---------------|----------|
| 8 | Notice | 8 |
|----------|---------------|----------|


1 Important

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:
 - Install all batteries correctly, + and - as marked on the apparatus.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the apparatus is not used for a long time.
 - The apparatus shall not be exposed to dripping or splashing.
 - Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

2 Your Alarm Clock

What's in the box

Check and identify the contents of your package. (Fig. ①)

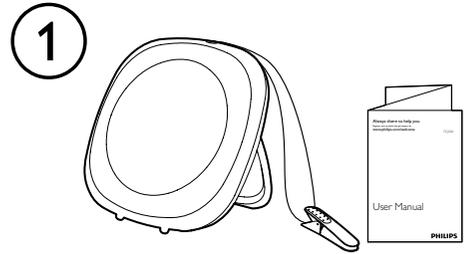

3 Get started


Always follow the instructions in this chapter in sequence.

Install battery

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- The batteries contain chemical substances, so they should be disposed of properly.

Insert 3 AAA batteries with correct polarity (+/-) as illustrated. (Fig. ②)

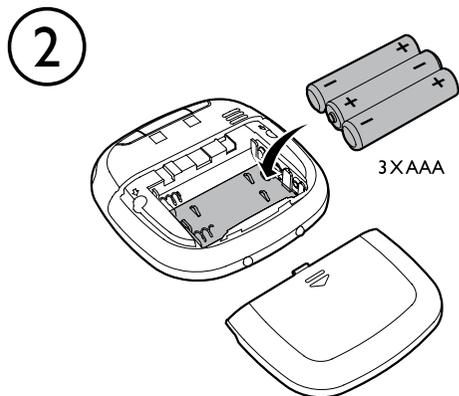


* Tip

- When the low battery indicator  is displayed, replace the batteries.

Set clock

(Fig. ③)

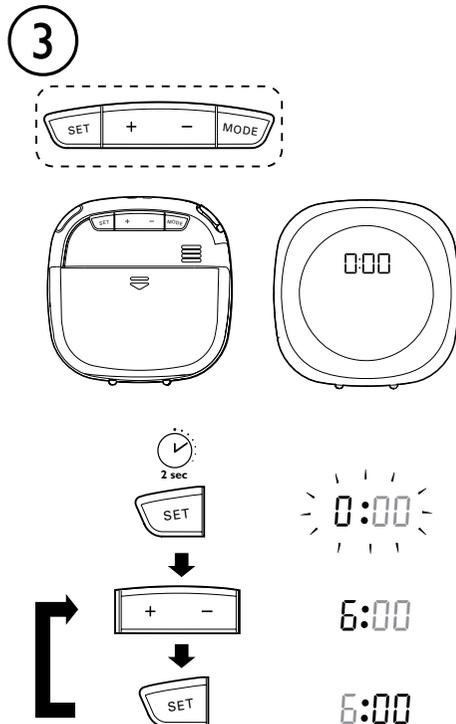

- 1 Press and hold **SET** for two seconds.
↳ The hour digits blink.
- 2 Press **+ / -** to adjust the hour.
- 3 Press **SET** to confirm.
↳ The minute digits blink.
- 4 Repeat steps 2 to 3 to set the minute and 12/24 hour format.
↳ The set time is displayed.


4 Set alarm timer

Set alarm

Note

- Make sure that you have set the clock correctly.

- 1 Press **MODE** to activate alarm setting mode.
↳ The current alarm time (if set) is displayed.
- 2 Press and hold **SET** for 2 seconds.
↳ The hour digits blink.
- 3 Press + / - to adjust the hour.
- 4 Press **SET** to confirm.
↳ The minute digits blink.
- 5 Repeat steps 3 to 4 to set the minute.
- 6 Repeat steps 3 to 4 to set the alarm source. (Fig. ⑥)

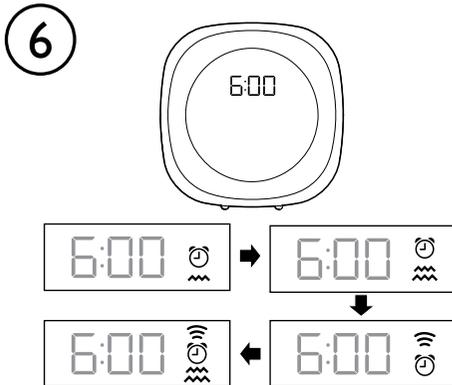

- ↳ The alarm is set, and then the current time is displayed.

| Alarm Indication | Alarm Icon | Alarm Duration |
|---------------------------|------------|----------------|
| Low-level vibration | | 15 min |
| High-level vibration | | 15 min |
| Buzzer | | 15 min |
| Both Buzzer and vibration | | 15 min |

Tip

- You cannot adjust volume manually.
- While the alarm clock vibrates, the vibration will start slowly and gradually become faster in the first two minutes.


Activate/deactivate the alarm timer

To activate the alarm timer, switch **ALARM** to **ON**.

- ↳ The alarm icon and source are displayed.


- ↳ All the buttons except **SNOOZE/LIGHT** are locked. To change any settings, switch **ALARM** to **OFF** first.

To deactivate the alarm timer:
Switch **ALARM** to **OFF**. (Fig. ⑤)

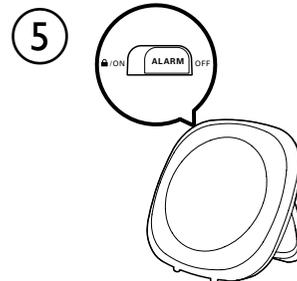

Snooze the alarm

When alarm sounds, press **SNOOZE**. (Fig. ⑦)

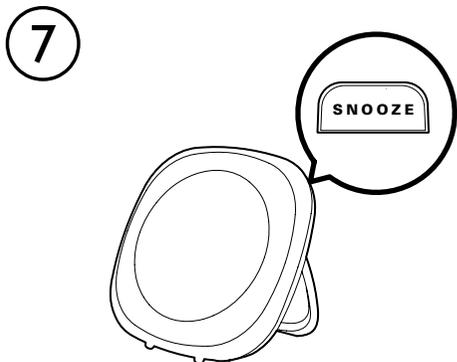

↳ The alarm snoozes and repeats ringing nine minutes later.

5 Other features

Turn the backlight on/off


To turn the backlight on, press **LIGHT**.

↳ To save power, the backlight is turned off automatically after 5 seconds.

Attach the clip to your pillow

To prevent the alarm clock slipping off the bed, attach the supplied clip to your pillow case as illustrated. (Fig. ④)

④

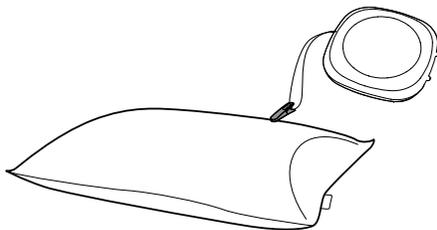

6 Product information

Note

- Product information is subject to change without prior notice.

Specifications

Power supply (battery) 3 X 1.5 V AAA batteries

Dimensions:

-Main Unit

(W x H x D) 82 x 82 x 19 mm

Weight:

-Main Unit 0.07 kg

7 Troubleshooting



Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the batteries are installed properly.

Alarm does not work

- Set the clock/alarm correctly.
- Check the batteries.

Clock/alarm setting erased

- Reset the clock/alarm.

No response after pressing any button

- The buttons are locked. Switch **ALARM** to **OFF** to unlock them.

8 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries

because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2013 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



Note

- The type plate is located on the bottom of the apparatus.



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

TCJ330_12_UM_V1.0

